

ACURA
INSTALLATION
INSTRUCTIONS

Accessory
SHIFT KNOB A/T
P/N 08U92-SEP-200A

Application
2004 TL

Publications No.
BII 25344
Issue Date
SEP 2003


PARTS LIST

Shift knob



INSTALLATION

1. Remove the vehicle shift knob by turning it counterclockwise. Set the shift knob aside; it will not be reused.

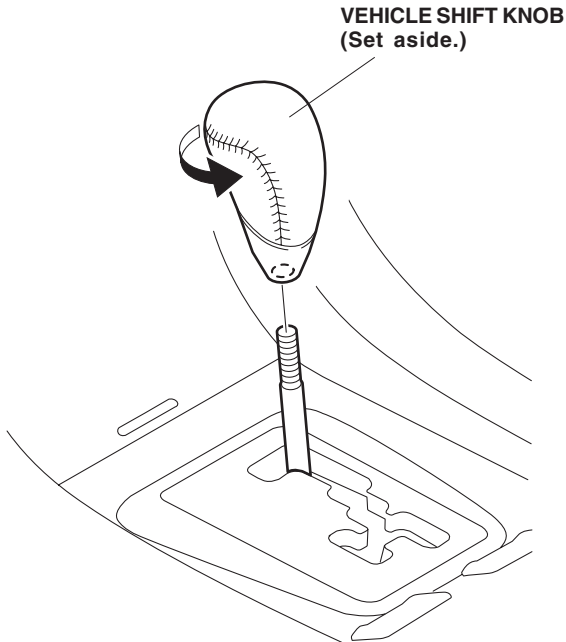

2. Install the shift knob on the shift shaft and turn it clockwise. The knob should turn approximately 11 turns.

