

ACURA INSTALLATION INSTRUCTIONS

Accessory

SHIFT KNOB A/T
P/N 08U92-SEP-200A

Application

2005 TL

Publications No.

BII 28159

Issue Date

SEP 2004


PARTS LIST

Shift knob



INSTALLATION

1. Remove the vehicle shift knob by turning it counterclockwise. Set the shift knob aside; it will not be reused.

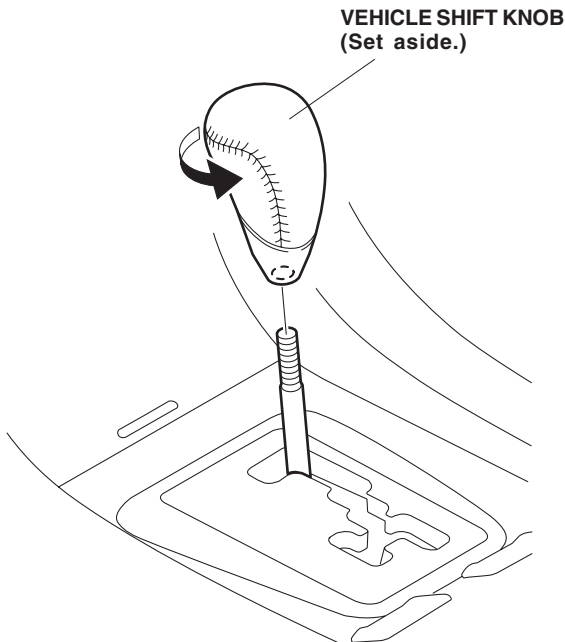

2. Install the shift knob on the shift shaft and turn it clockwise. The knob should turn approximately 11 turns.

