


PARTS LIST

Shift knob



INSTALLATION

1. Remove the vehicle shift knob by turning it counterclockwise. Set the shift knob aside; it will not be reused.

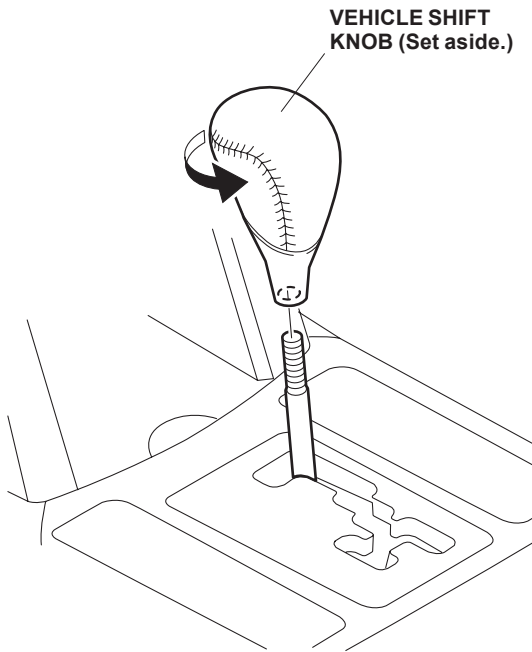

2. Install the shift knob on the shift shaft and turn it clockwise. The knob should turn approximately 11 turns.

