



Accessory	Application	Publications No.
SPLASH GUARDS	2006 RL	BII 31148
		Issue Date
		OCT 2005

PARTS LIST

Left front splash guard

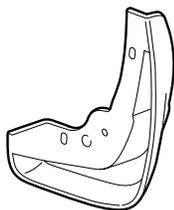

Right front splash guard

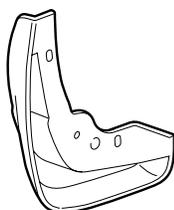

Left rear splash guard



Right rear splash guard



4 Spring nuts



4 Self-tapping screws



TOOL REQUIRED

Stubby Phillips screwdriver

90° Phillips screwdriver


INSTALLATION

NOTE:


- These instructions show the left splash guard being installed. The same procedure applies to installing the right splash guard.
- Make sure the area to be covered is clean and waxed.

Installing the Front Splash Guards

1. Turn the steering wheel all the way counterclockwise.
2. Remove and retain the three self-tapping screws that fasten the left front inner fender to the vehicle.

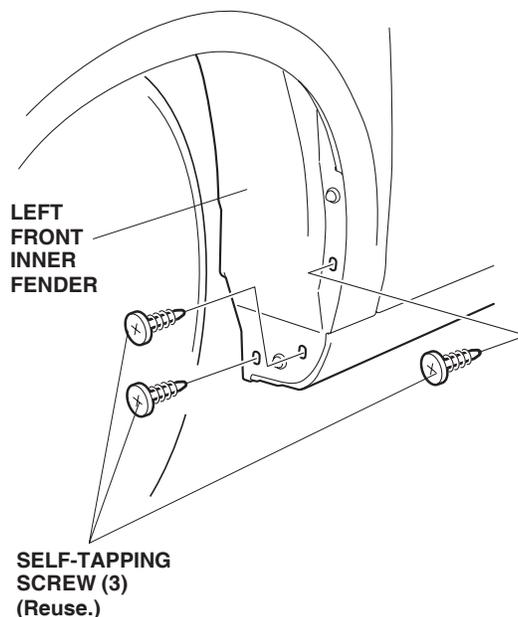


- Position the left front splash guard on the left front inner fender, and reinstall the three self-tapping screws you removed. Tighten the three self-tapping screws in the order shown.

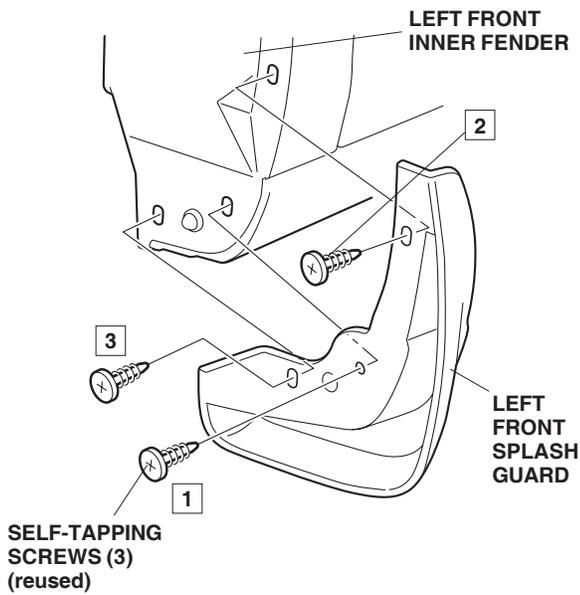


- Turn the steering wheel all the way clockwise, and repeat steps 2 and 3 to install the right front splash guard.

Installing the Rear Splash Guards

- Remove and retain the one self-tapping screw that secures the left rear inner fender to the vehicle.

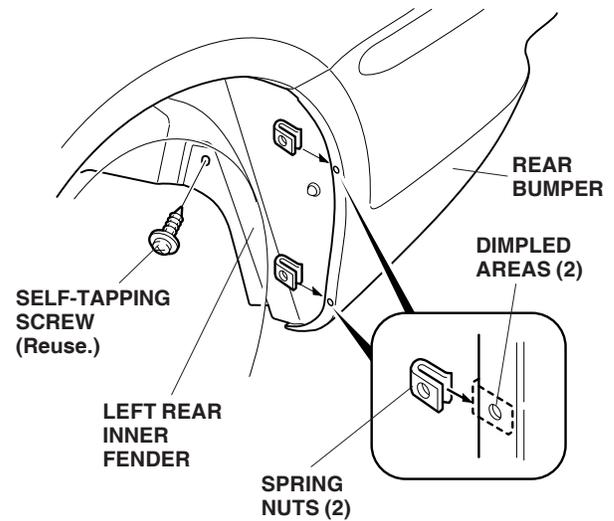

- Slide two spring nuts over the dimpled areas of the rear bumper.
- Position the left rear splash guard on the rear bumper and inner fender, and install the one self-tapping screw removed in step 5 and the two self-tapping screws provided. Tighten the three self-tapping screws in the order shown.

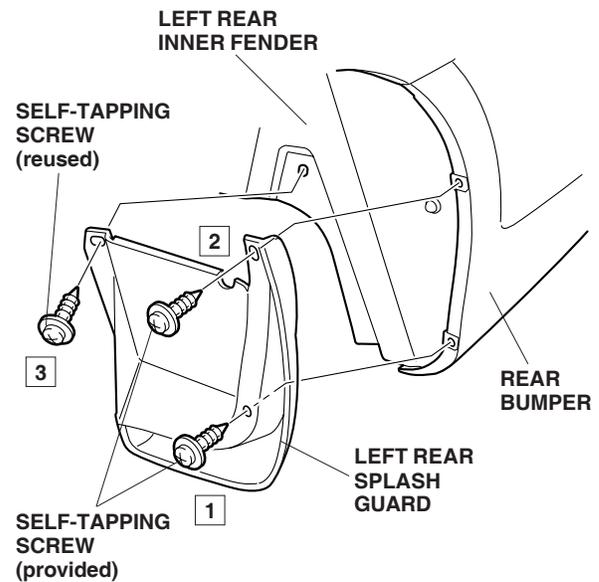

- Repeat steps 5 thru 7 to install the right rear splash guard.