

ACURA INSTALLATION INSTRUCTIONS	Accessory DOOR EDGE GUARDS	Application 2012 MDX	Publications No. BII 46616 Issue Date OCT 2011
PARTS LIST Right front door edge guard	Rut Felt Tou INS	DLS AND SUPPLIES REQU ber mallet -tip pen ch-up paint TALLATION ent Information: The inform	nation in this installation
Left front door edge guard	tec tra vel "do	truction is intended for use of hnicians who have the prop ining to correctly and safely hicle. These procedures sho p-it-yourselfers." TE: The door edge guards w ipped with body side moldin	er tools, equipment, and add equipment to your ould not be attempted by vill not fit on vehicles
Right rear door edge guard			
Left rear door edge guard			
Seam sealant cutting tool			

- 1. Clean and wax the areas to be covered. Use a high quality paste wax.
- 2. Identify each door edge guard by holding it up to the door and matching its contour with the door edge.
- Using the bends for reference, position each door edge guard against the inside edge of the door. Mark the sealant at the top and bottom ending points of each door edge guard.

Front Door:

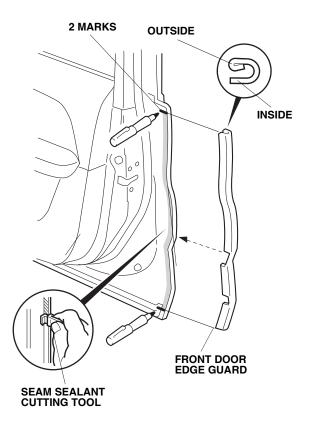

Rear Door:

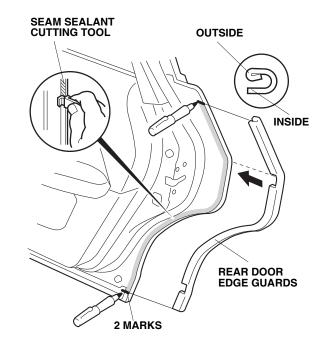

4. Position the cutting edge of the seam sealant cutting tool against the door edge and trim the seam sealant from mark to mark


NOTE: The cutting tool cuts in only one direction. Move it upward on the right side of the vehicle and downward on the left side.

5. Apply touch-up paint to the door, and let it dry.


6. Position the door edge guard on the door edge using the bends for reference. Starting at the feature line, use a rubber mallet to tap the door edge guard into position with a series of light taps.

NOTE: Be sure to use a series of light taps. Once in place, do not remove, reposition, or reinstall the door edge guard. It will not hold securely.

Front Door:

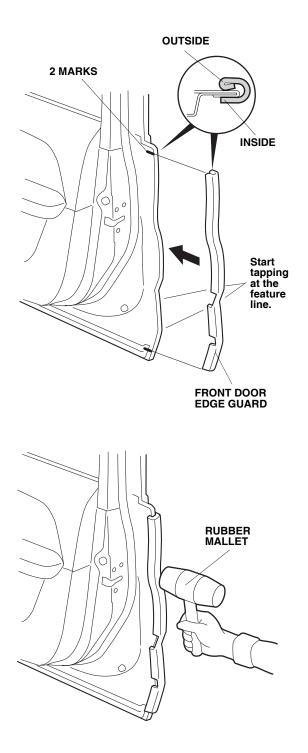

Rear Door:

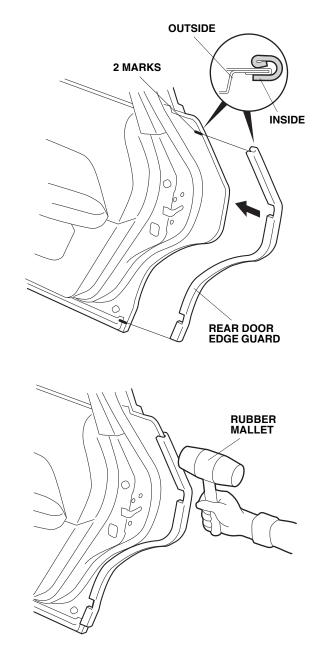

7. Repeat steps 1 through 6 to install the door edge guards on the other side of the vehicle.