

Accessory


CARGO NET P/N 08L96-SJA-200 Application

2012 RL

Publications No. BII 46933

Issue Date OCT 2011

PARTS LIST

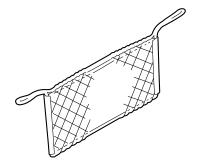

4 Hooks

Cargo net



2 Anchors



2 Nuts



4 Washers



2 Flange bolts



2 Spring washers



TOOLS AND SUPPLIES REQUIRED

Phillips screwdriver

Flat-tip screwdriver

Clip remover

10 mm Combination wrench


10 mm Offset wrench

Metal scale


INSTALLATION

NOTE: Be careful not to damage the body.


1. Open the trunk lid. Remove the trunk floor from the trunk.

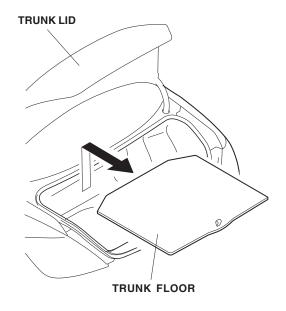

2. Remove the weatherstrip from the area shown. Remove the rear trim panel (two retaining tabs and four clips).

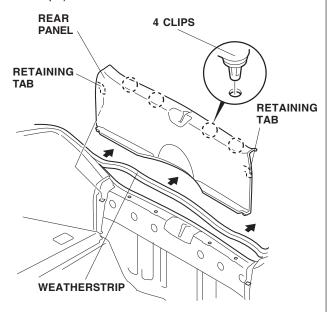


Remove the two tie down hooks from the bottom
of the trunk right side trim panel. To open the
cover, insert a metal scale (pocket ruler) at the
edge of the cover, and pry it open. Take care not
to damage the cover. Then remove the screw.

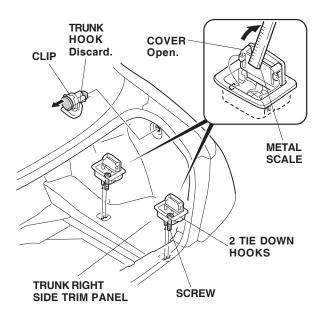


4. Remove the trunk hook (clip) from the trunk right side trim panel.


5. Remove the clip from the trunk trim panel.

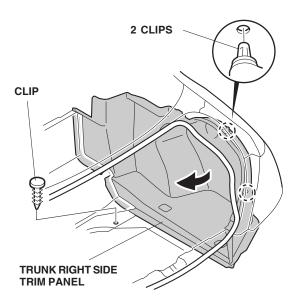


- 6. Pull out the trunk right side trim panel (two clips).
- 7. Install a nut, two washers, spring washer, and flange bolt into the hole in the right rear inside panel where you removed the trunk hook.

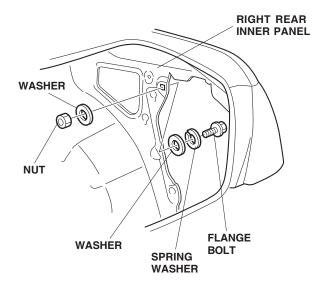


 Reinstall all removed parts. Check that all clips are installed securely. 9. Install the anchor to the flange bolt.

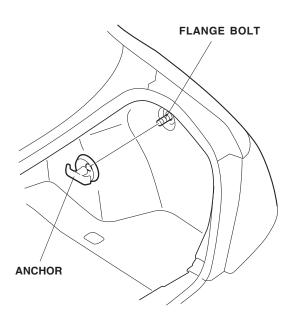


- 10. Repeat steps 3 through 9 to install an anchor on the left side of the vehicle.
- 11. Attach the four hooks onto the cargo net as shown.

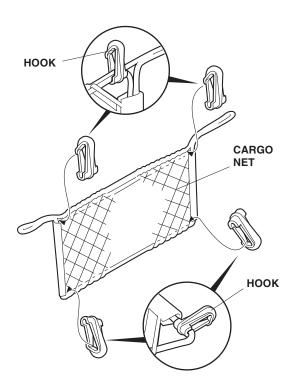

 Install the cargo net to the tie down hooks and the anchors in the trunk. The cargo net can be installed in two different positions, vertically or horizontally.

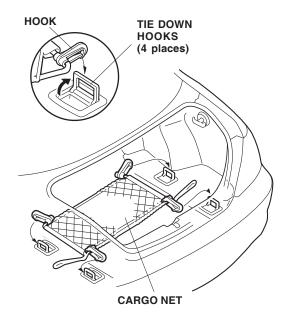

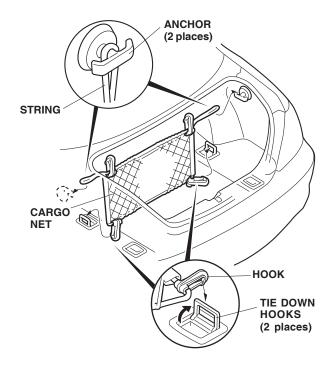

NOTE:

- Do not store large or fragile objects in the net.
- Do not store objects with sharp edges or corners, as they may damage the cargo net or the car.

 Wrap such objects in paper or a blanket so they will not contact the net directly.