

PARTS LIST

Select knob



2 Screws




TOOLS AND SUPPLIES REQUIRED

Phillips screwdriver


Torque screwdriver (T/N; CDI 401 SM)
(Available through the American Honda Tool and Equipment Program; call 888-424-6857)

INSTALLATION


1. Remove the cover, insert the key into the opening, push on the key, and move the shift knob to the S position.

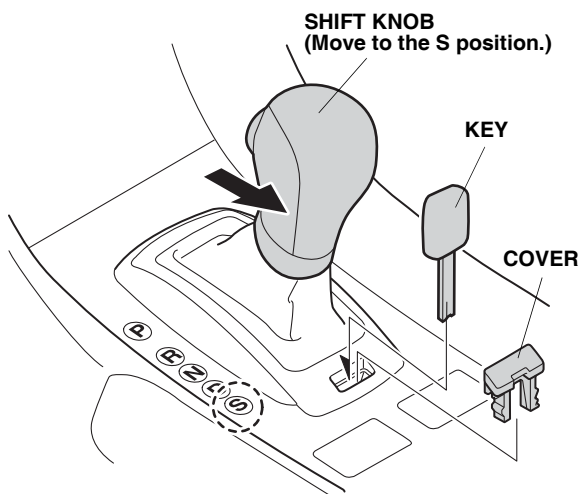


2. Lower the shift boot by pushing the two tabs in the positions shown.

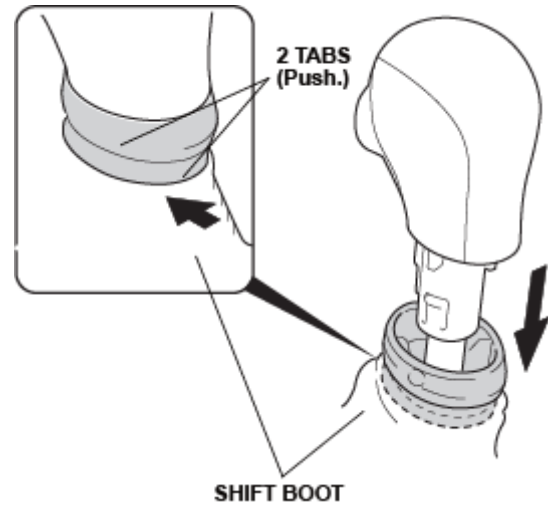


3. Pry out on the bottom of the shift knob cover and remove the cover.

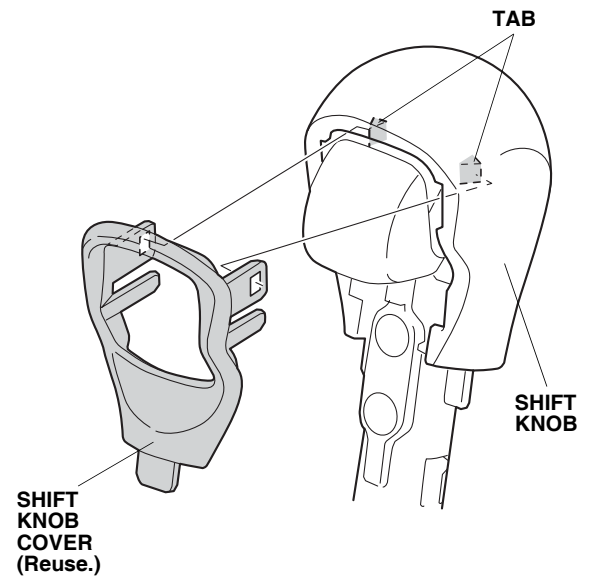


- Remove and discard the two screws from the shift knob, and remove the shift knob by pulling it up.

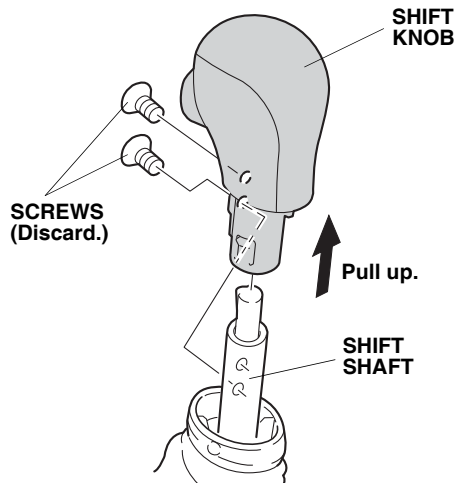


- Install the new select knob using the two new screws. Using a torque screwdriver, torque the screws to 1.57 N·m (14 lb-in). Do not overtighten the screws.

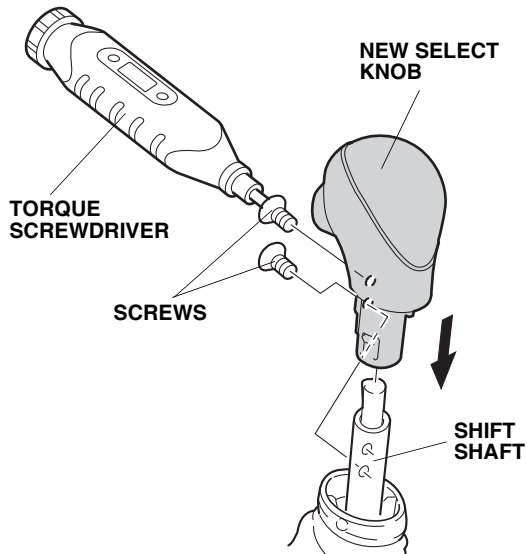

- Reinstall the shift knob cover on the select knob.

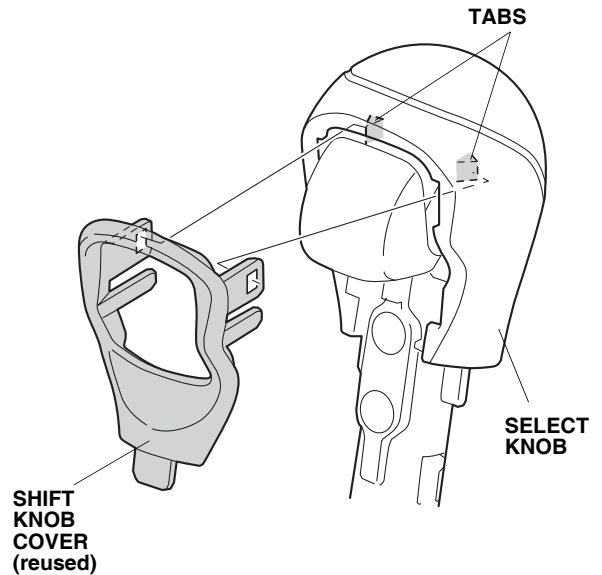

- Pull the shift boot up to seat it in the normal position.

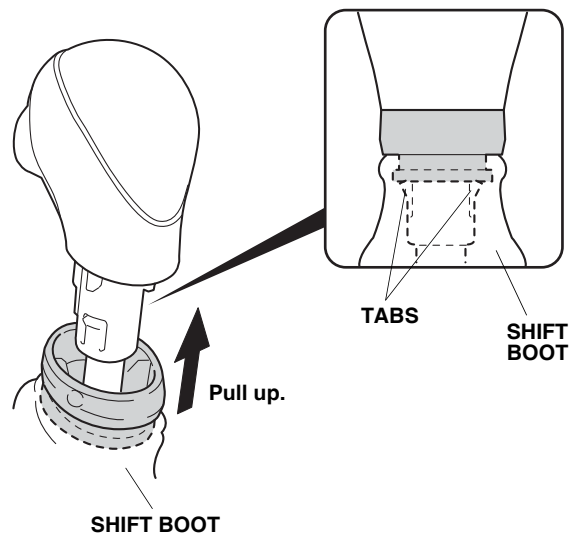

USE AND CARE

- Use a sponge or cloth and a solution of mild liquid dishwashing soap and water to clean the select knob.
- Rinse the knob completely with water, then dry it with a shop towel.
- Never use organic solvents such as benzene, thinner, or gasoline to clean the select knob.