



INSTALLATION INSTRUCTIONS

Accessory

WOOD-GRAIN RES TRIM PANEL
P/N 08Z03-S3V-200B

Application

2005 MDX

Publications No.


BII 28222

Issue Date

SEP 2004

PARTS LIST

Wood-grain RES trim panel

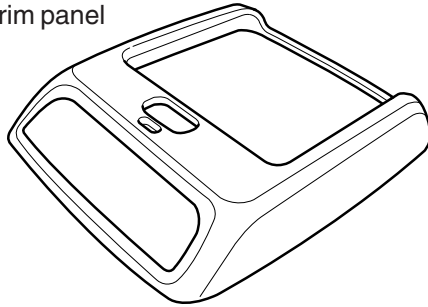

SUPPLIES REQUIRED

Isopropyl alcohol

Shop towel


Masking tape

INSTALLATION

NOTE: This wood-grain RES trim panel should be installed only if the outside air temperature is 60°F (15°C) or above.

1. Using isopropyl alcohol on a shop towel, clean the area where the wood-grain RES trim panel will attach.
2. Attach a strip of masking tape to the end of each outer adhesive backing, and remove 2 to 3 inches of the adhesive backing. Fold the ends back, and tape them to the front of the trim panel. If necessary, remove and discard the inner adhesive backings.

TRIM PANEL ATTACHING SURFACE
(Clean with isopropyl alcohol.)

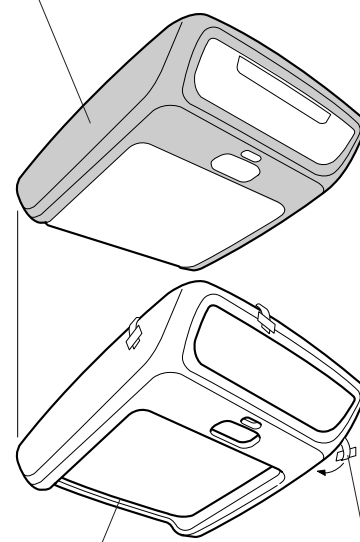

WOOD-GRAIN RES TRIM PANEL

OUTER ADHESIVE BACKING
Remove 2 to 3 inches from the end, and tape it to the front of the trim panel.

3. Position the trim panel on the existing panel. While applying light pressure on the trim, carefully remove the adhesive backings.
4. After installing the trim panel, use the palm of your hand to hold pressure against it for 30 seconds.

USE AND CARE

Use a sponge or soft cloth dampened with mild detergent and water solution. After cleaning, wipe with a clean, soft cloth. Do not use cleaners or polishers containing abrasive compounds to clean the wood-grain RES trim panel as they may damage the surface.