



# INSTALLATION INSTRUCTIONS

Accessory

**WOOD-GRAIN RES  
TRIM PANEL  
P/N 08Z03-S3V-200B**

Application

**2006 MDX**

Publications No.


**BII 30972**

Issue Date

**SEP 2005**

## PARTS LIST

Wood-grain RES trim panel

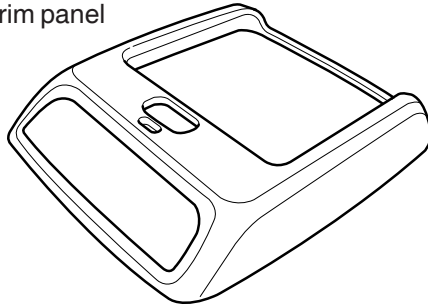

## SUPPLIES REQUIRED

Isopropyl alcohol

Shop towel


Masking tape

## INSTALLATION

**NOTE:** This wood-grain RES trim panel should be installed only if the outside air temperature is 60°F (15°C) or above.

1. Using isopropyl alcohol on a shop towel, clean the area where the wood-grain RES trim panel will attach.
2. Attach a strip of masking tape to the end of each outer adhesive backing, and remove 2 to 3 inches of the adhesive backing. Fold the ends back, and tape them to the front of the trim panel. If necessary, remove and discard the inner adhesive backings.

**TRIM PANEL ATTACHING SURFACE**  
(Clean with isopropyl alcohol.)

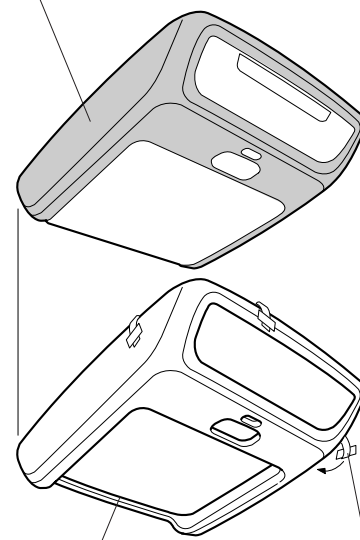

**WOOD-GRAIN  
RES TRIM  
PANEL**

**OUTER ADHESIVE BACKING**  
Remove 2 to 3 inches from  
the end, and tape it to the  
front of the trim panel.

3. Position the trim panel on the existing panel. While applying light pressure on the trim, carefully remove the adhesive backings.
4. After installing the trim panel, use the palm of your hand to hold pressure against it for 30 seconds.

## USE AND CARE

Use a sponge or soft cloth dampened with mild detergent and water solution. After cleaning, wipe with a clean, soft cloth. Do not use cleaners or polishers containing abrasive compounds to clean the wood-grain RES trim panel as they may damage the surface.