



ACURA INSTALLATION INSTRUCTIONS


Accessory
GOLD EXHAUST PIPE TRIM
P/N 08F53-S3V-200

Application
2001 MDX

Publications No.
BII 21496
Issue Date
SEP 2000

PARTS LIST

2 Exhaust trims

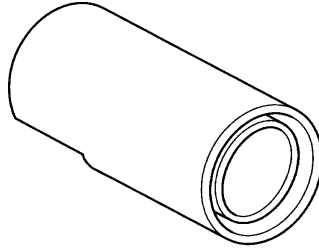

2 Flange bolts, 6 x 14 mm



TOOLS REQUIRED

10 mm Combination wrench


10 mm Socket

Torque wrench


INSTALLATION

NOTE: Allow the exhaust pipe to cool down before you install the exhaust trim.


1. Remove the original exhaust trim.
2. Partially thread the two 6 mm flange bolts into the two exhaust pipe trims.

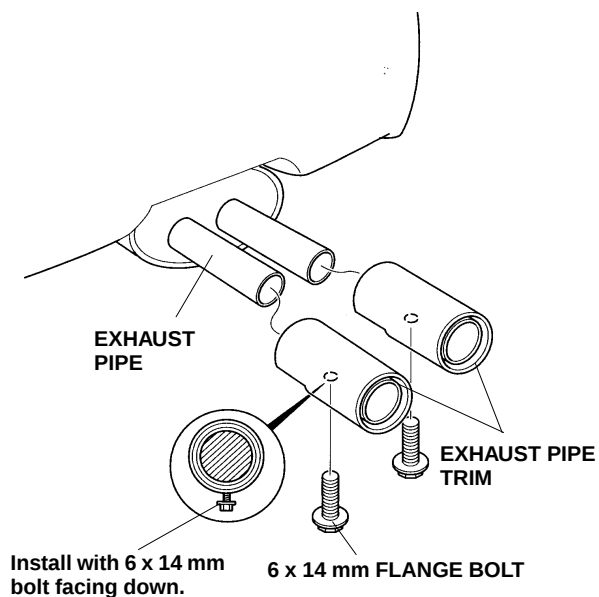

3. With the 6 mm flange bolt facing down, slide one exhaust trim onto the exhaust pipe until it bottoms against the exhaust pipe.

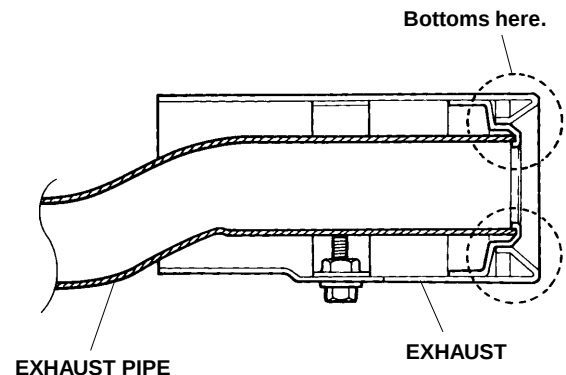

4. While pushing the exhaust pipe trim firmly against the exhaust pipe, torque the 6 mm flange bolt to 7 to 12 N·m (5 to 8 lb-ft).

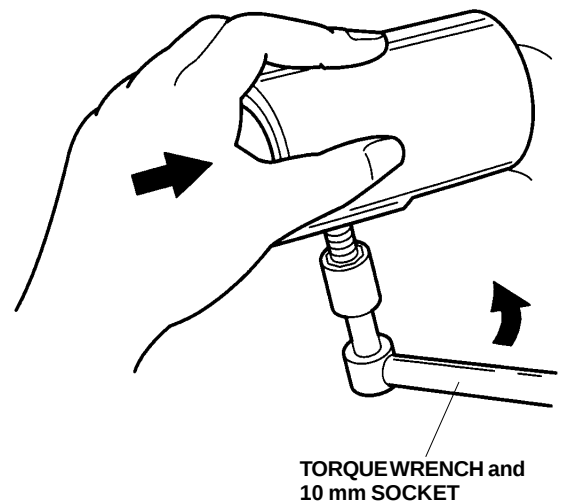

5. Repeat steps 3 and 4 to install the other gold exhaust pipe trim.
6. Start the engine, and rev it up a few times. Listen for any rattling noise coming from the exhaust trim, and adjust as necessary.