


**PARTS LIST**

Right front body side molding

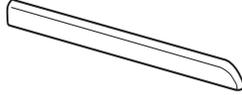


Left front body side molding



Right rear body side molding



Left rear body side molding

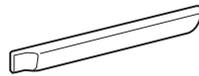

Front template



Rear template


**SUPPLIES REQUIRED**

Tape measure

Isopropyl alcohol


Shop towel

Masking tape


**INSTALLATION**
**NOTE:**

- Be careful not to damage the body paint finish.
- Before attaching, thoroughly clean the areas where the body side moldings will be attached.
- The body side moldings should be installed only if the ambient air temperature is 60°F (15°C) or above.
- To allow the adhesive to cure, do not wash the vehicle for 24 hours.
- These instructions are for the left side of the vehicle. The same procedure applies to the right side of the vehicle.

1. Position the front template on the front door. Align the front and rear edges of the template with the front and rear edges of the front door, and the upper edge of the template with the character line and handle line on the door panel.

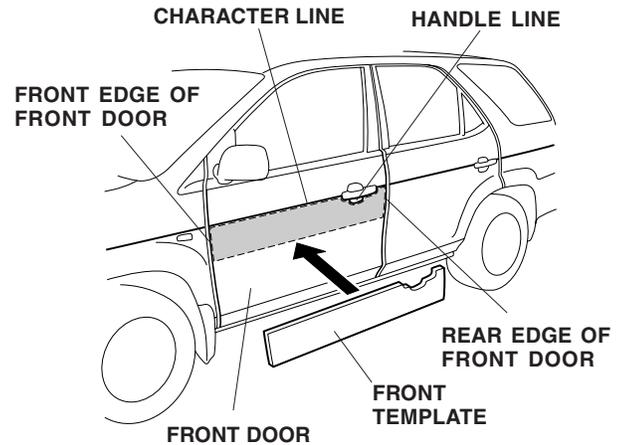


2. Hold the template in position by applying masking tape as shown.

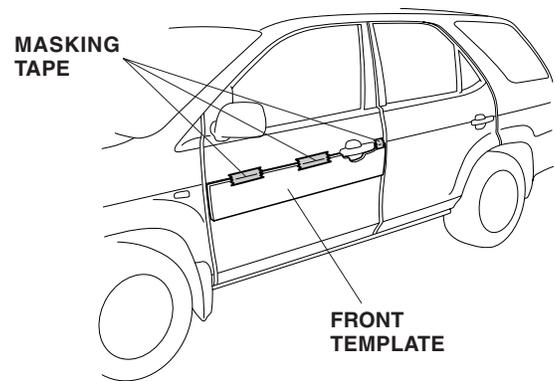


3. Repeat steps 1 and 2 to attach the template to the rear door.

## Installing the Side Protectors


- Using isopropyl alcohol on a shop towel, clean the door where the body side molding will attach.
- Remove 40 to 50 mm of adhesive backing from each end of the front body side molding, and fold them up diagonally as shown.

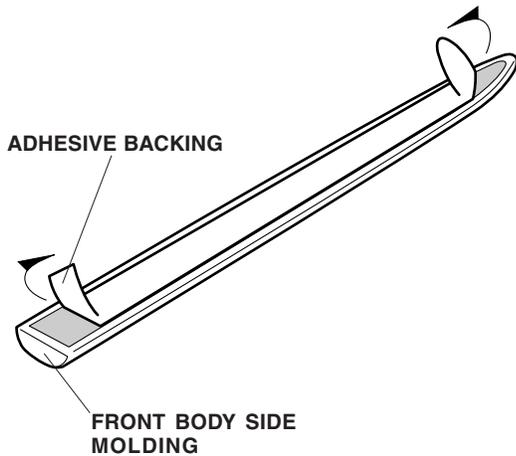

- Position the front body side molding on the front door just below the template. Align the upper edge of the molding with the lower edge of the template and the rear edge of the molding with the end of the front door as shown.
- While holding pressure on the front body side molding, carefully remove the adhesive backing starting at the rear. Press and hold the molding firmly against the front door with the palm of your hand.

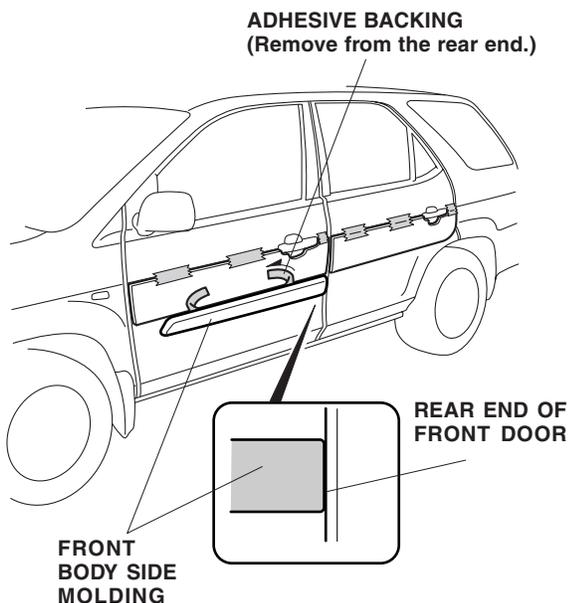

- Position the rear body side molding on the rear door just below the template. Align the upper edge of the molding with the lower edge of the template and adjust the positioning so that there is a 5.5 mm clearance between the front edge of the molding, and the front end of the rear door. Check that the molding does not interfere with the front door when the rear door is opened and closed.
- While holding pressure on the rear body side molding, carefully remove the adhesive backing starting at the front. Press and hold the molding firmly against the rear door with the palm of your hand.

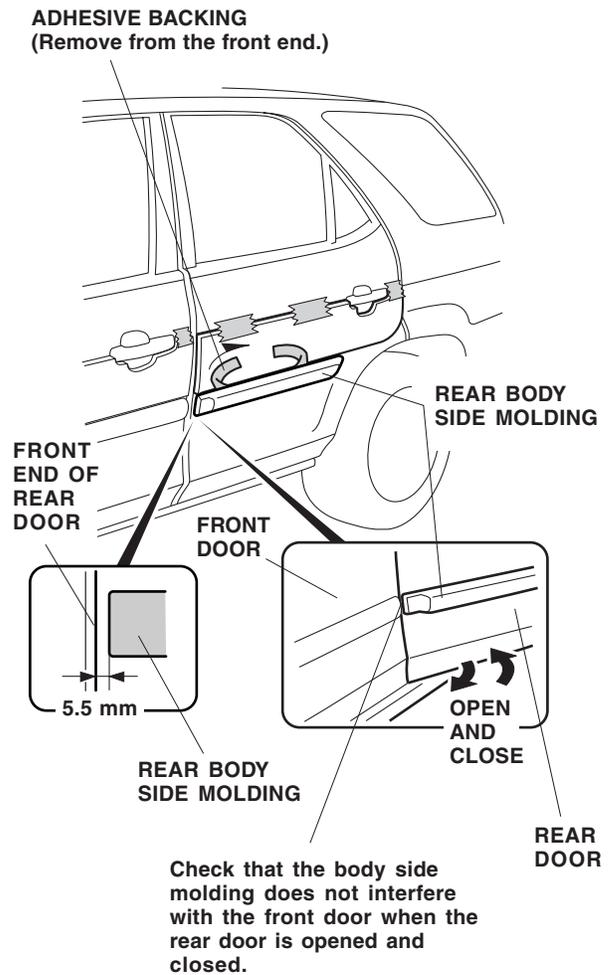

- Remove the templates.
- Turn the template over, and repeat steps 1 through 10 to install the body side moldings on the right side of the vehicle.