# **MACURA**

# INSTALLATION INSTRUCTIONS

Accessory

## CARGO NET P/N 08L96-S3V-201

Application


2004 MDX

Publications No.

BII 25807

Issue Date
SEP 2003

# Keep this information in the glove box for future reference.

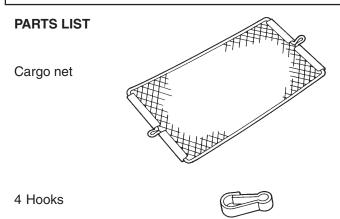


#### **TOOLS REQUIRED**

Small flat-tip screwdriver


## **INSTALLATION**

#### NOTE:


- Some luggage stored in the cargo net may interfere with the tailgate when it is closed. To prevent damage to the cargo net, do not store large or fragile articles in the cargo net.
- Before storing articles that have sharp edges or corners, wrap them in paper or a blanket so their sharp edges or corners will not contact the cargo net directly.
- Using a small flat-tip screwdriver or the ignition key, release the seat belt lower hook from each third row seat, then attach the seat belt clip to the seat belt.

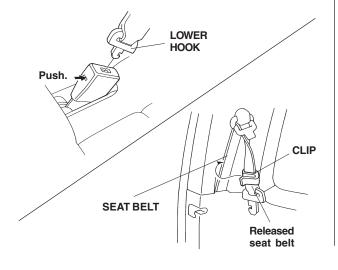

2. Remove the headrests by pushing the release buttons and pulling the headrests out.

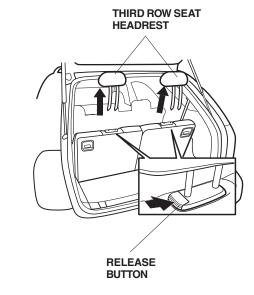


 Store the headrests in the storage compartment under the cargo floor. Insert the shafts of the headrests into the holes in the sides of the storage compartment.

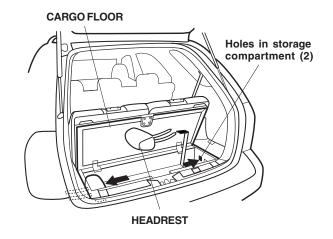


4. Fold down both third row seats.

# Installing the Cargo Net in the Horizontal Position

5. Attach the four hooks onto the cargo net in the areas shown.

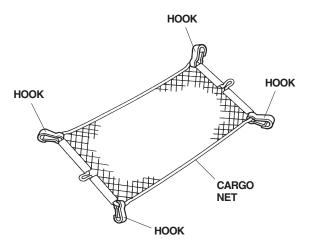


6. Attach the hooks to the anchors in the cargo area.

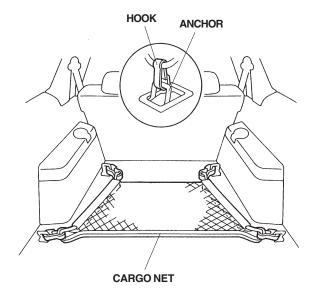


# Installing the Cargo Net in the Vertical Position

7. Attach two hooks to the cargo net in the areas shown.

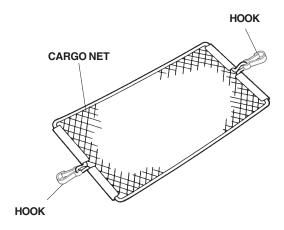

8. Fold the cargo net in half, attach the hooks to the anchors in the floor, and attach the loops to the hooks on the side panel.

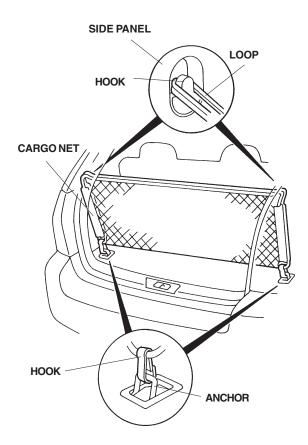

Put these instructions and the remaining two hooks (if necessary) in the glove box for your customer.