


Accessory	Application	Publications No.
<b>BODY SIDE MOLDING</b>	<b>2005 MDX</b>	<b>BII 28205</b>
		Issue Date
		<b>MAR 2005</b>

### PARTS LIST

Right front body side molding




Left front body side molding

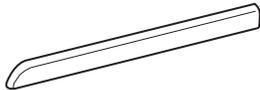

Right rear body side molding



Left rear body side molding

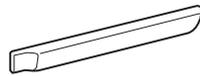

Front template



Rear template



4 Alcohol wipes



### SUPPLIES REQUIRED


Tape measure  
 Masking tape  
 Hard rubber roller

### INSTALLATION


#### NOTE:

- These instructions are for the left side of the vehicle. The same procedure applies to the right side.
- Be careful not to damage the body paint finish.
- Before attaching, thoroughly clean the areas where the body side moldings will attach.
- The body side moldings should be installed only if the ambient air temperature is 60°F (15°C) or above.
- To allow the adhesive to cure, do not wash the vehicle for 24 hours.

1. Using the alcohol pads supplied, thoroughly clean the areas where the body side moldings will attach to the doors.
2. Position the front template on the front door. Align the front and rear edges of the template with the front and rear edges of the front door, and the upper edge of the template with the character line and handle line on the door panel.

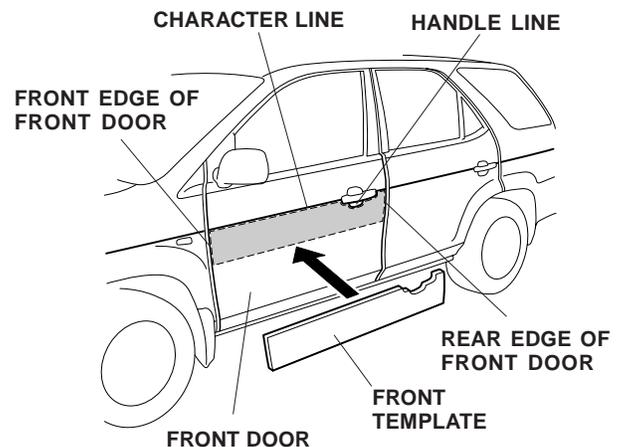


3. Hold the template in position by applying masking tape as shown.

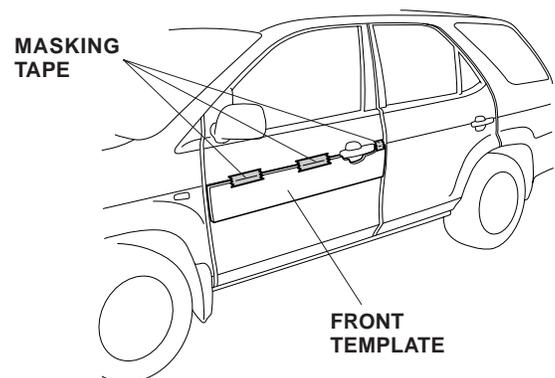


4. Repeat steps 1 thru 3 to attach the template to the rear door.

### Installing the Front Door Molding

5. Peel back approximately an inch and a half of each end of the protective tape strip from the front door body side molding, and tape it to the front side of the molding.

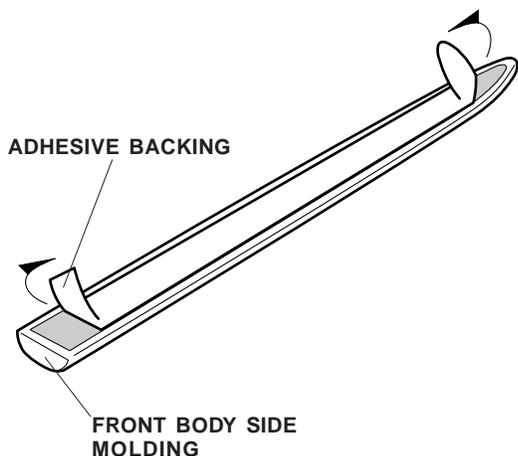


6. Position the front body side molding on the front door just below the template. Align the upper edge of the molding with the lower edge of the template, and align the rear edge of the molding with the rear edge of the front door as shown.

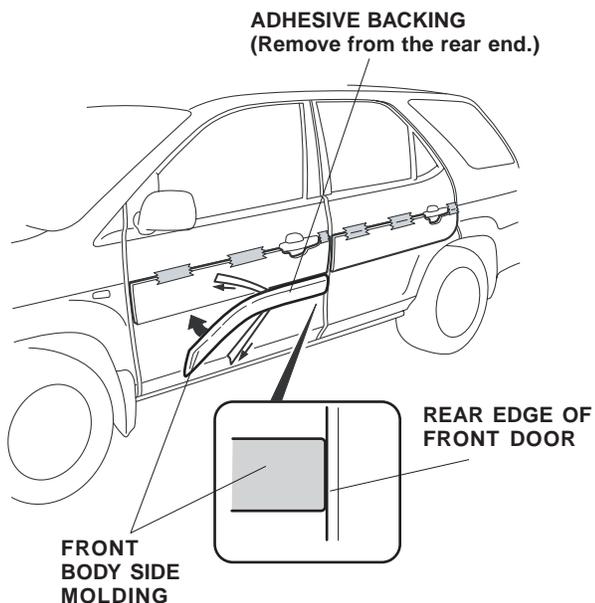


7. While holding pressure on the rear end of the body side molding, carefully remove the adhesive backing (rear end to front end). Press and hold the molding firmly against the front door with the palm of your hand.

8. Use a hard rubber roller to secure the front door molding to the door.

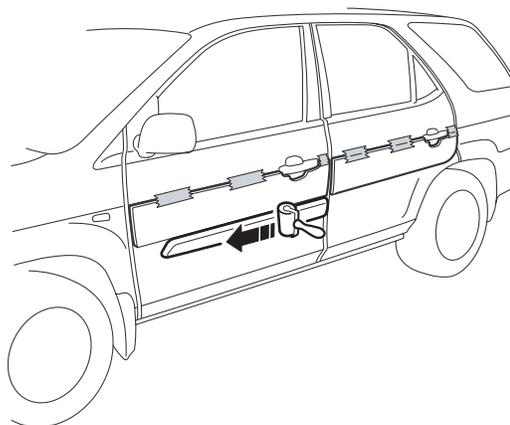


### Installing the Rear Door Molding

9. Remove 40 to 50 mm of adhesive backing from each end of the rear body side molding, and fold it up diagonally as shown.

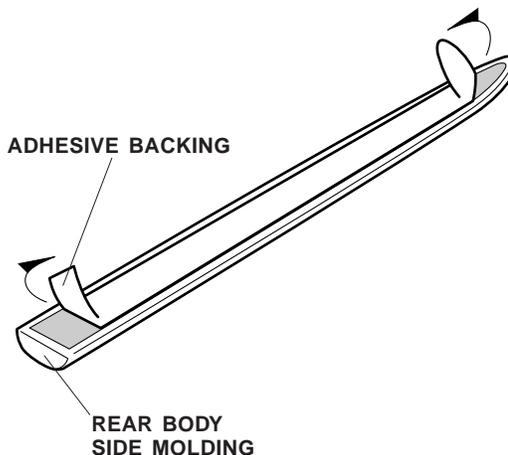


10. Position the rear body side molding on the rear door just below the template. Align the upper edge of the molding with the lower edge of the template and adjust the positioning of the molding so that there is a 5.5 mm clearance between the front edge of the molding and the front edge of the rear door. Check that the molding does not interfere with the front door when the rear door is opened and closed.
11. While holding pressure on the rear body side molding, carefully remove the adhesive backing starting at the front end of the molding (front end to rear end). Press and hold the molding firmly against the rear door with the palm of your hand.

**ADHESIVE BACKING**  
(Remove from the front end.)

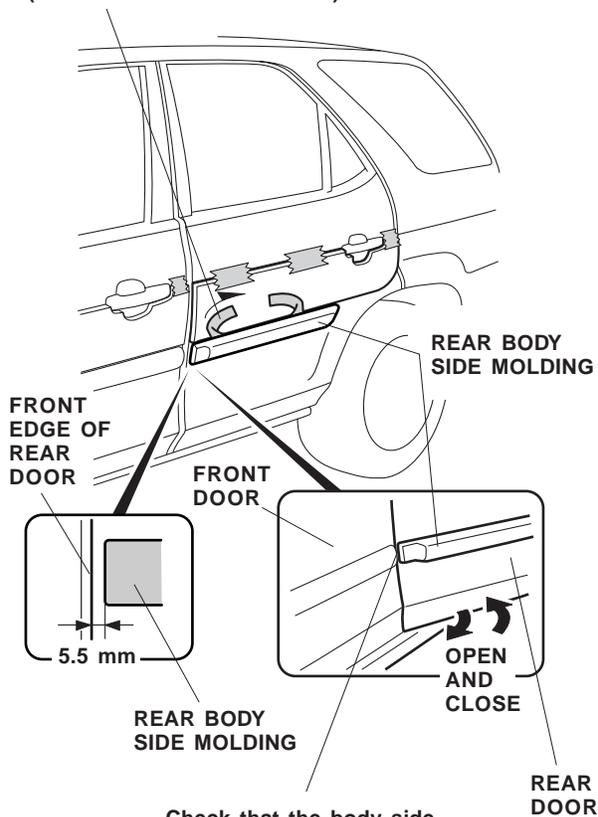

Check that the body side molding does not interfere with the front door when the rear door is opened and closed.

12. Use a hard rubber roller to secure the rear door molding to the door.

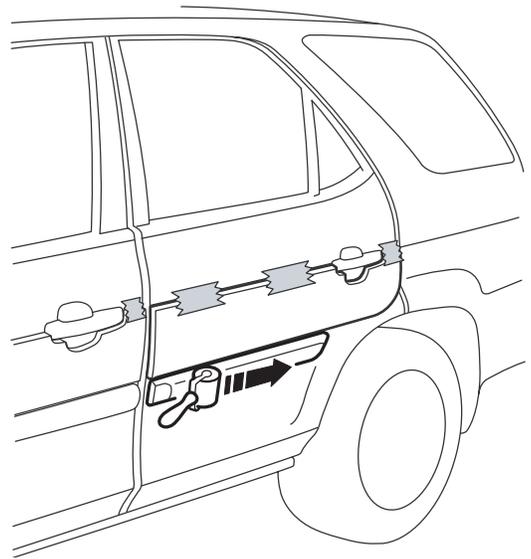

13. Remove the templates.
14. Turn the template over, and repeat steps 1 through 13 to install the body side moldings on the right side of the vehicle.