



Installing the Cargo Net in the Horizontal Position

5. Attach the four hooks onto the cargo net in the areas shown.

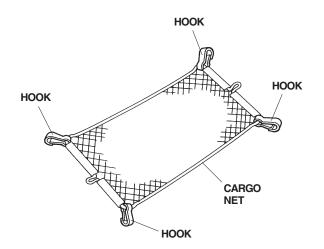


6. Attach the hooks to the anchors in the cargo area.

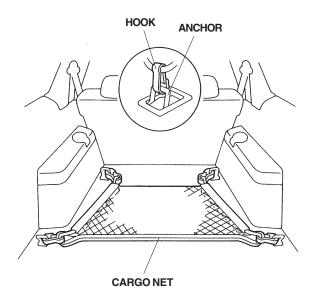


Installing the Cargo Net in the Vertical Position

7. Attach two hooks to the cargo net in the areas shown.

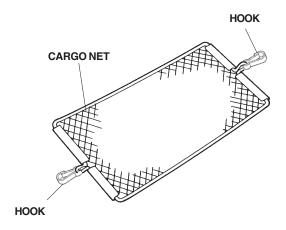

8. Fold the cargo net in half, attach the hooks to the anchors in the floor, and attach the loops to the hooks on the side panel.

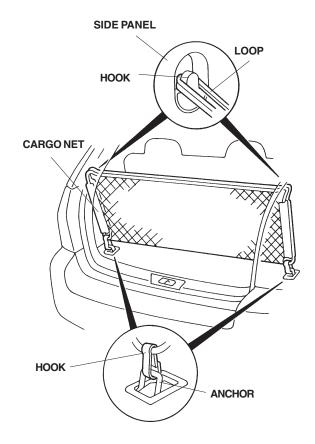

9. Put these instructions and the remaining two hooks (if necessary) in the glove box for your customer.