



INSTALLATION INSTRUCTIONS

Accessory
FENDER FLARES


Application
2005 MDX

Publications No.
BII 28215
Issue Date
SEP 2004


NOTE: These fender flares *cannot be* installed on a vehicle equipped with a full nose mask.

PARTS LIST


Left front fender flare

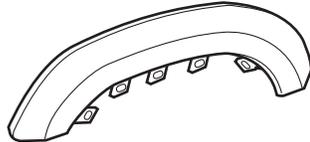

Left front bumper flare

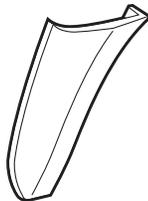


Left rear fender flare

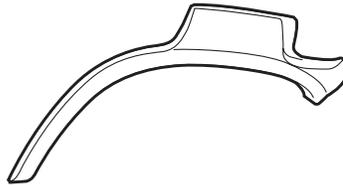


Left rear bumper flare




Left rear door flare

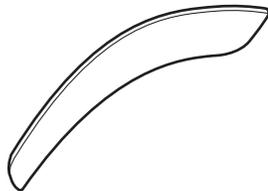


Right front fender flare

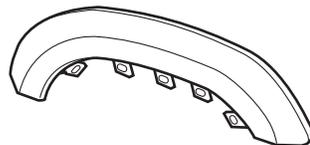


Right front bumper flare

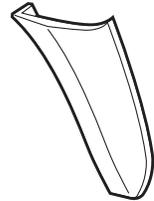


Right rear fender flare

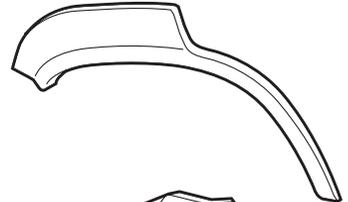

Right rear bumper flare

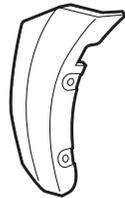

Right rear door flare

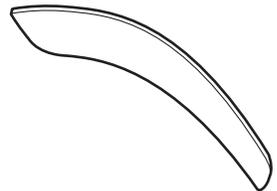


8 Self-tapping screws



4 Spring nuts



10 Alcohol pads

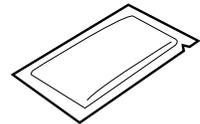

TOOLS AND SUPPLIES REQUIRED

- Stubby Phillips screwdriver
- Phillips screwdriver
- Flat-tip screwdriver
- Ratchet
- 10 mm Combination wrench
- Isopropyl alcohol
- Shop towel
- Masking tape

INSTALLATION


Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by “do-it-yourselfers”.

NOTE:


- Be careful not to damage the finished surfaces of the body when installing the fender flares.
- This fender flare kit should be installed only when the ambient air temperature is 60°F (15°C) or above.
- To allow the adhesive to cure, do not wash the vehicle for 24 hours.
- These instructions show the left fender flares being installed; the same procedure applies to installing the right fender flares.

Installing the Front Fender Flare


1. Remove the five expansion clips fastening the left front inner fender.

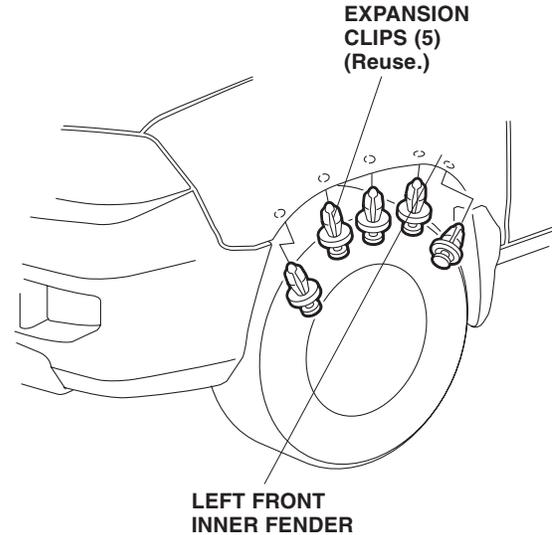

2. Using the alcohol pads provided or isopropyl alcohol on a shop towel, thoroughly clean the front fender where the fender flare will attach.
3. On the inside of the left front fender flare, attach a strip of masking tape to the end of each adhesive backing. Fold the ends back, and tape them to the front of the fender flare.

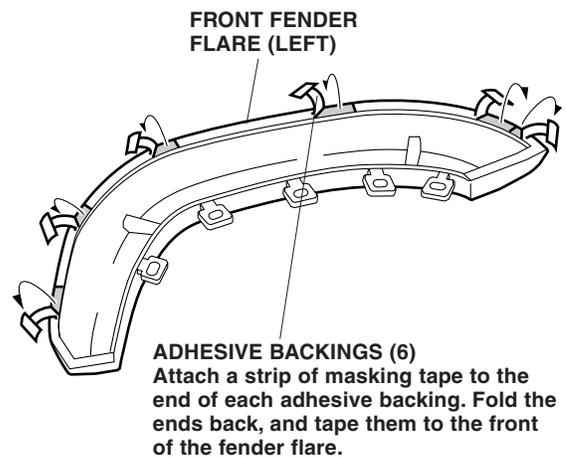


- Align the end of the front fender flare with the front end of the front fender, and bend the mounting tabs around the fender flange.

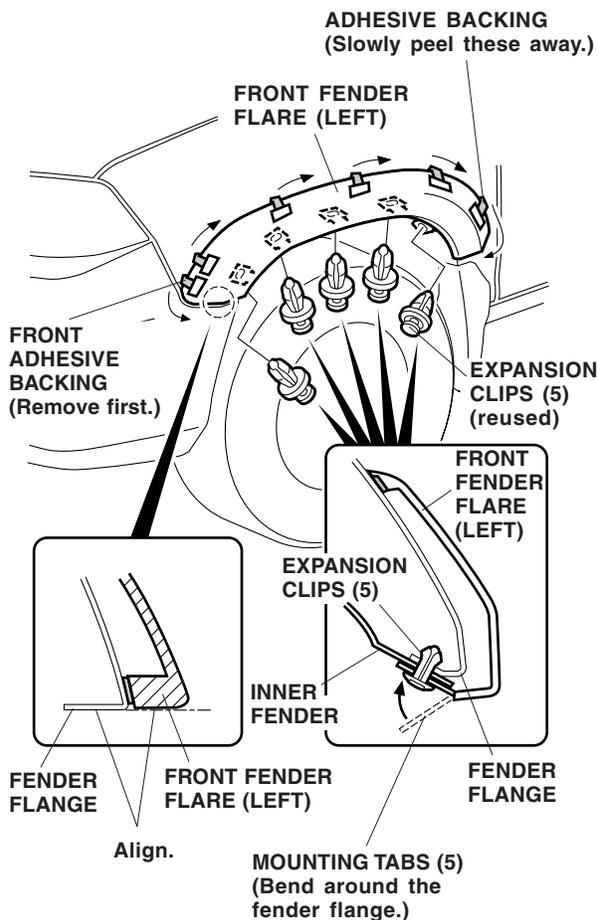


- Install the five expansion clips through the holes in the fender flare and fender flange.
- Remove the adhesive backings from the fender flare:
 - Start with the front adhesive backing.
 - Slowly and carefully peel the adhesive backings from the fender flare.
 - After removing all of the adhesive backings, press the fender flare firmly against the fender with the palm of your hand for 30 seconds, particularly at the edges.

Installing the Front Bumper Flare


- Locate the two identification marks on the front bumper. Slide a spring nut over each of the two marks.

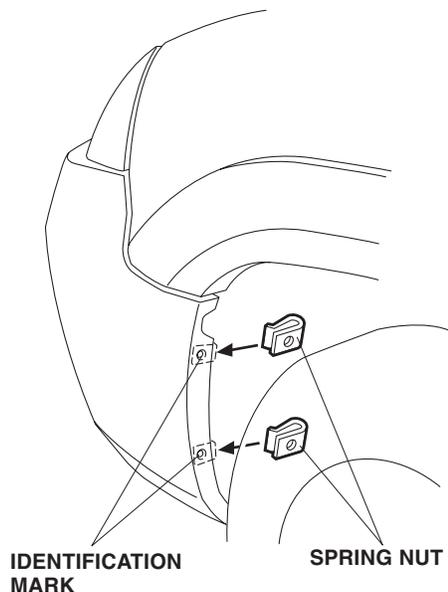

- Using the alcohol pads provided or isopropyl alcohol on a shop towel, thoroughly clean the area where the front bumper flare will attach.
- On the inside of the left front bumper flare, attach a strip of masking tape to the end of adhesive backing. Fold the ends back, and tape them to the front of the fender flare. Remove the small piece of adhesive backing from the top of the front bumper flare.

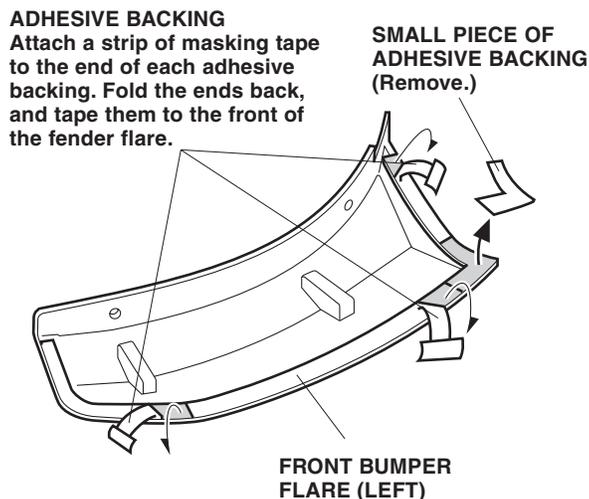


- Position the front bumper flare on the front bumper, and align it with the top edge of the front bumper. Install two self-tapping screws through the bumper, but do not tighten them yet.

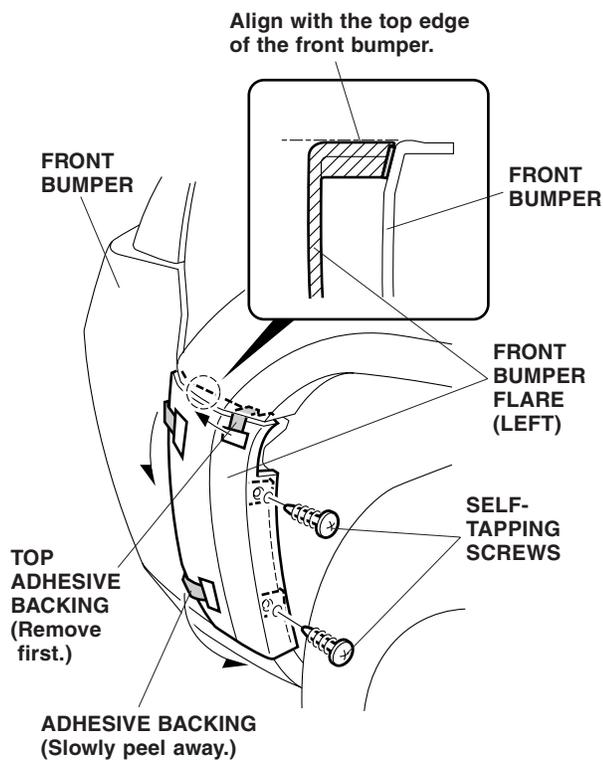


- Remove the adhesive backings from the front bumper flare:
 - Start with the top adhesive backing.
 - Slowly and carefully peel the adhesive backings from the front bumper flare.
 - After removing the adhesive backing, press the front bumper flare firmly against the front bumper with the palm of your hand, particularly at the edges.
 - Tighten the two self-tapping screws.

Installing the Rear Fender Flare

- Remove the molding from the inner fender flange.

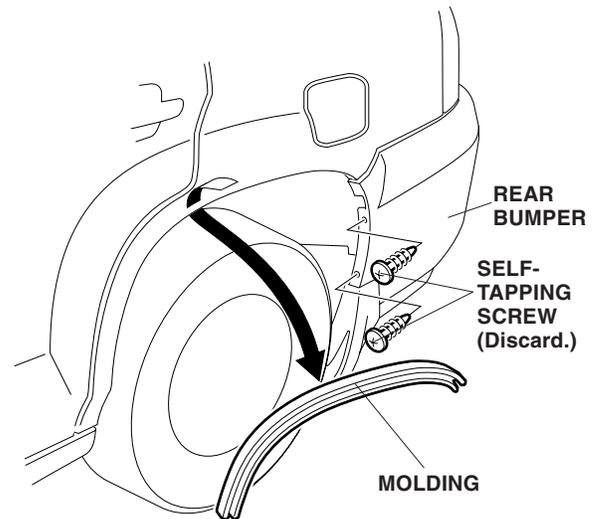


- Remove the two self-tapping screws that fasten the rear bumper.
- Remove the six bolts, two expansion clips and self-tapping screw that secure the rear inner fender. Rest the rear inner fender on the rear tire.

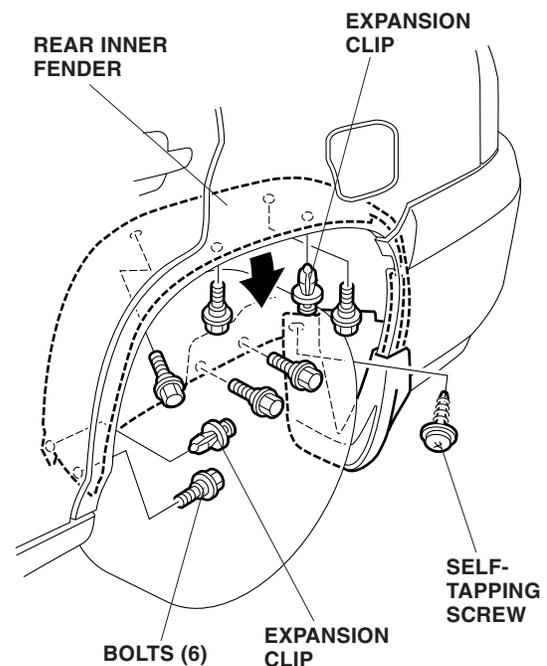


- Using the alcohol pads provided, or isopropyl alcohol on a shop towel, clean the area where the rear fender flare will attach.
- On the inside of the rear fender flare, attach a strip of masking tape to the end of each adhesive backing. Fold the ends back, and tape them to the front of the fender flare.

LEFT:

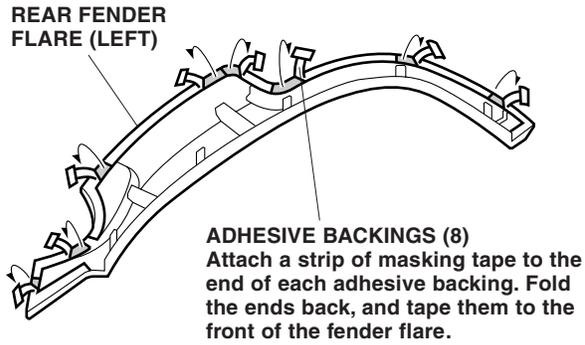


RIGHT:

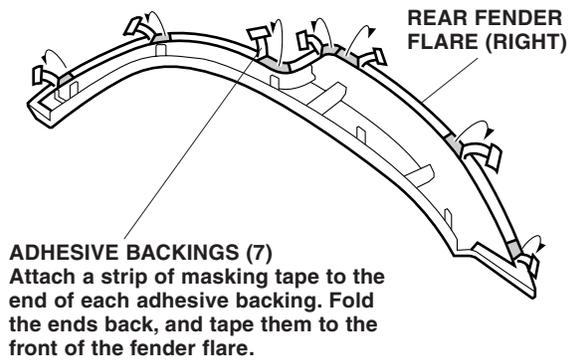


- Position the rear fender flare on the rear fender, and align it 2 mm from the fuel filler door.

LEFT:

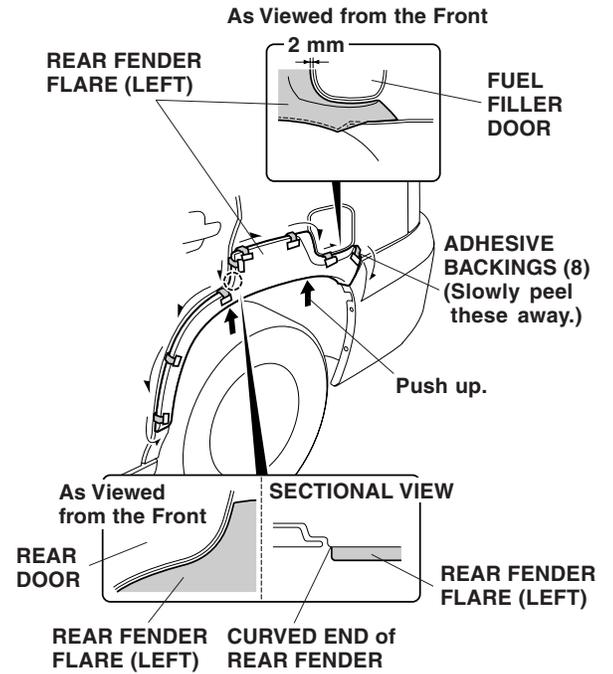


RIGHT:

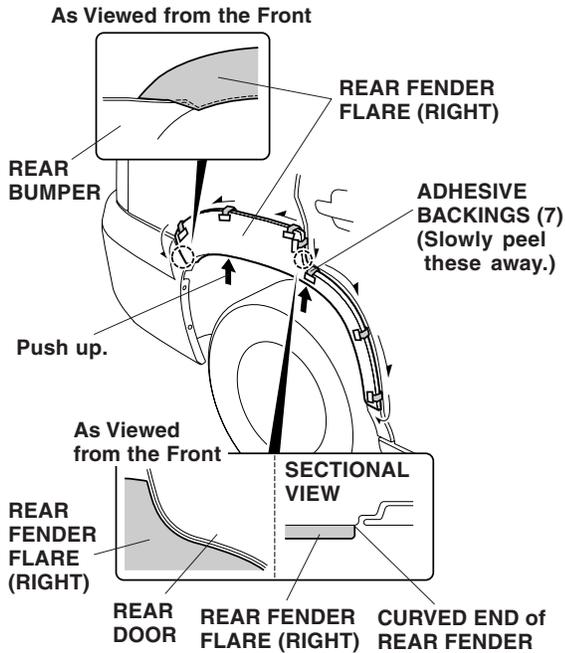


18. Open and close the fuel filler door and check that it does not interfere with the left rear fender flare.
19. While pushing up on the rear fender flare, remove the adhesive backings from the rear fender flare:
 - Slowly and carefully peel the adhesive backings from the rear fender flare.
 - After removing all of the adhesive backings, press the rear fender flare firmly against the fender with the palm of your hand for 30 seconds, particularly at the edges.

20. Bend the mounting tabs around the fender flange. Reinstall the molding over the rear fender flare and fender flange. Bend the mounting tabs around the fender flange.

LEFT:

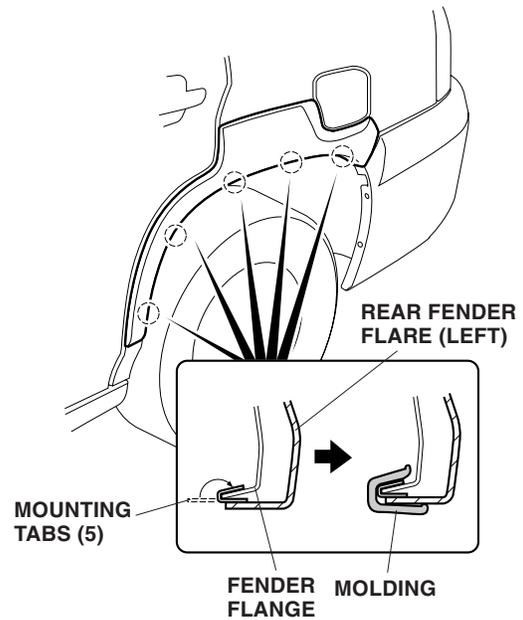


RIGHT:

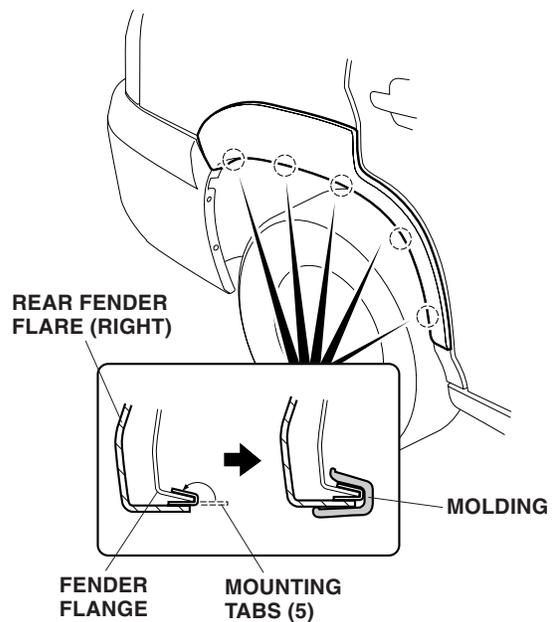


21. Reinstall the inner fender, the six bolts, expansion clips, and one self-tapping screw securely on the rear fender flare.

Installing the Rear Bumper Flare

22. Using the alcohol pads provided, or isopropyl alcohol on a shop towel, clean the area where the rear bumper flare will attach.
23. On the inside of the left rear bumper flare, attach a strip of masking tape to the end of adhesive backing. Fold the ends back, and tape them to the front of the fender flare. Remove the small piece of adhesive backing from the top of the rear bumper flare.

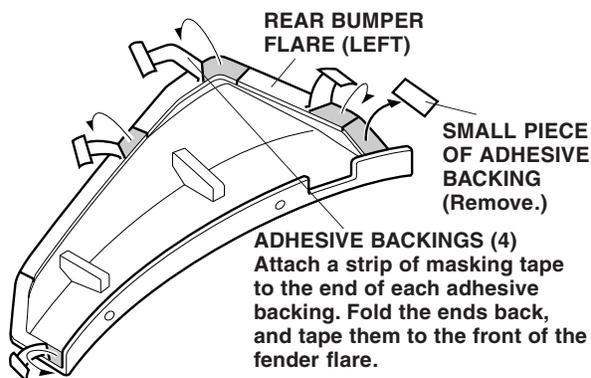


24. Position the rear bumper flare on the rear bumper, and align it with the lower edge of the rear fender flare. Install the two self-tapping screws through the rear bumper flare, but do not tighten them yet.

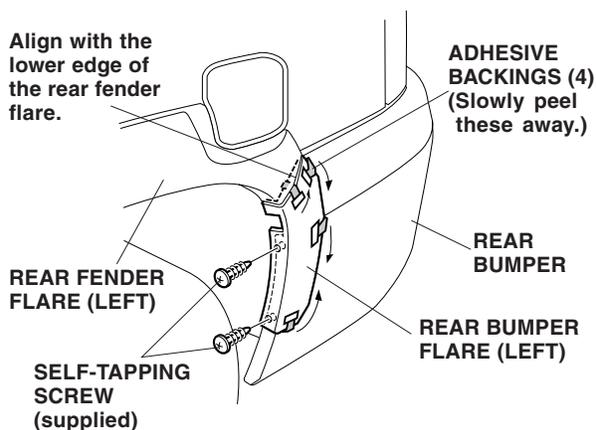


25. Remove the adhesive backings from the rear bumper flare:
 - Slowly and carefully peel the adhesive backings from the rear bumper flare.
 - After removing all of the adhesive backings, press the rear bumper flare firmly against the rear bumper with the palm of your hand for 30 seconds, particularly at the edges.
 - Tighten the two self-tapping screws.

Installing the Rear Door Flare


26. Position the rear door flare on the rear door, and align its upper edge with the upper edge of the rear fender flare. Attach a piece of masking tape to the door along the upper edge of the rear fender flare, and the rear door flare, to match the contour line of the rear fender flare.

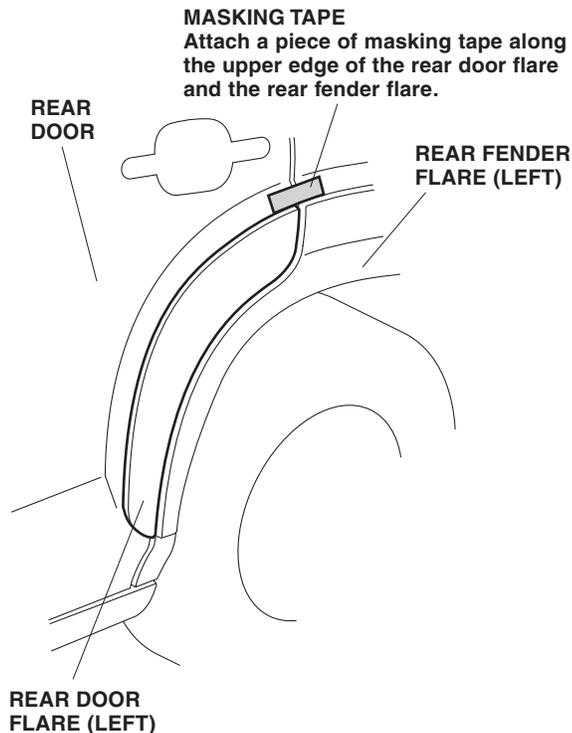


27. Using the alcohol pads provided, or isopropyl on a shop towel, clean the area where the rear door flare will attach.
28. On the inside of the left rear door flare, attach a strip of masking tape to the end of each adhesive backing. Fold the ends back, and tape them to the front of the fender flare.

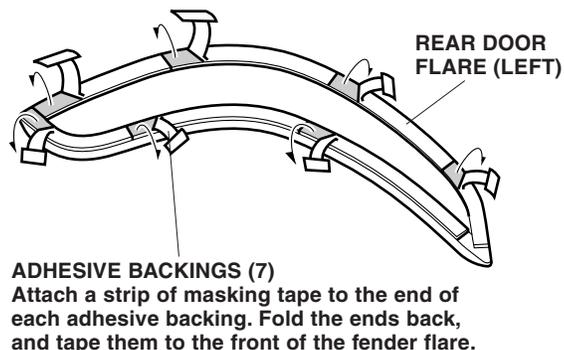

29. Reposition the rear door flare on the rear door along the piece of masking tape.

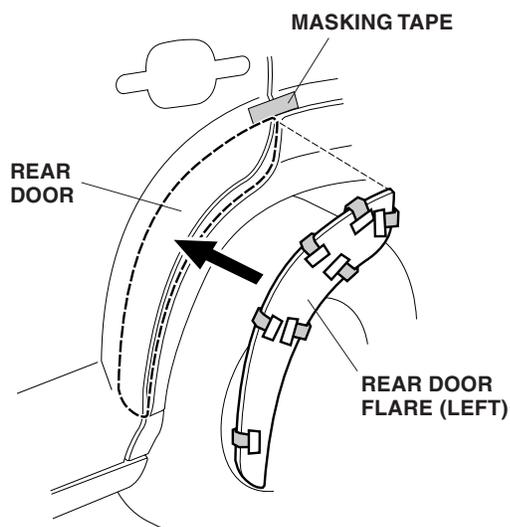

30. Open the rear door, and remove the adhesive backings from the rear door flare:
- Slowly and carefully peel the adhesive backings from the rear door flare.
 - After removing all of the adhesive backings, press the rear door flare firmly against the rear door with the palm of your hand for 30 seconds, particularly at the edges.

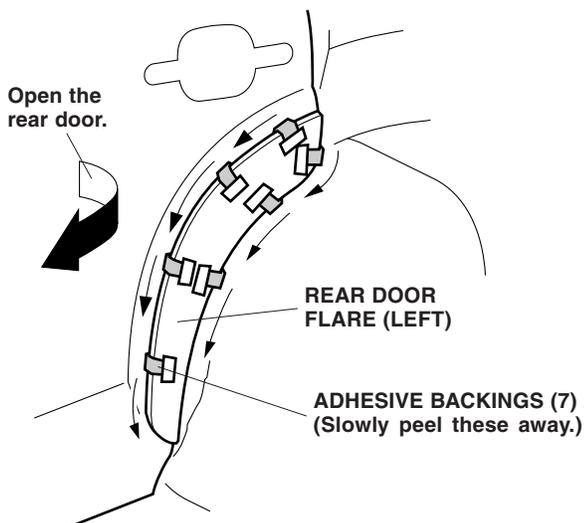

31. Remove the masking tape.
32. Repeat steps 1 through 31 to install the fender flares on the right side of the vehicle.