



# INSTALLATION INSTRUCTIONS

Accessory

INTERIOR PANEL KIT

Application

2005 TSX

Publications No.

**BII 28365**

Issue Date

**OCT 2004**


## PARTS LIST

### INTERIOR PANEL KIT


P/N 08Z03-SEC-210 (Light Wood-Look)

P/N 08Z03-SEC-230A (Metal-look)


Center panel

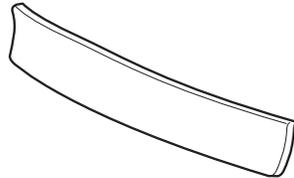


Upper pocket panel

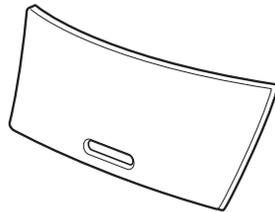

Lower pocket panel

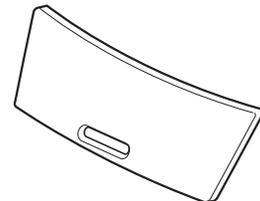


Front panel

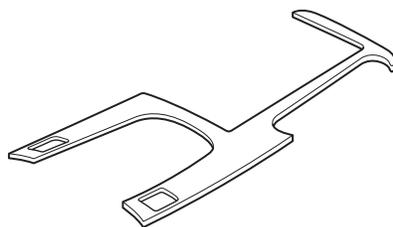


Beverage holder panel




Front switch panel (left)

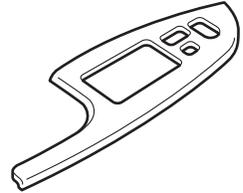


Front switch panel (right)

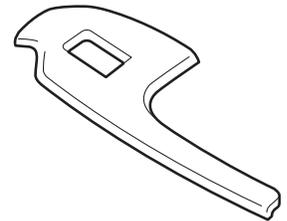

Rear switch panel (left)

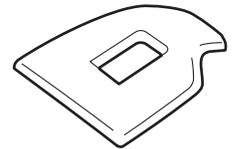

Rear switch panel (right)

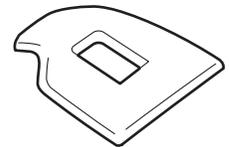

## SUPPLIES REQUIRED

Isopropyl alcohol

Shop towel


Masking tape

## INSTALLATION

**NOTE:** This interior panel kit should only be installed if the ambient air temperature is 60°F (15°C) or above.


1. Using isopropyl alcohol on a shop towel, clean the areas where the interior panels will attach.
2. Remove and discard the center adhesive backing and the small pieces of outer adhesive backing. Attach a strip of masking tape to the end of each remaining outer adhesive backing, and remove 40 to 50 mm (1.6 to 2.0 in.) of the adhesive backing. Fold the ends back, and tape them to the front of the panel.

**Center Panel:**

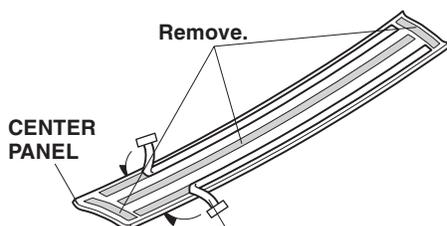


**CENTER PANEL**  
**OUTER ADHESIVE BACKINGS (2)**  
 (Remove 40 to 50 mm (1.6 to 2.0 in.) from the end, and tape it to the front of the panel.)

**Upper Pocket Panel:**

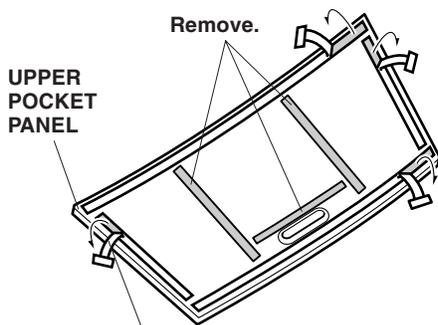

**UPPER POCKET PANEL**  
**OUTER ADHESIVE BACKINGS (4)**  
 (Remove 40 to 50 mm (1.6 to 2.0 in.) from the end, and tape it to the front of the panel.)


**Lower Pocket Panel:**

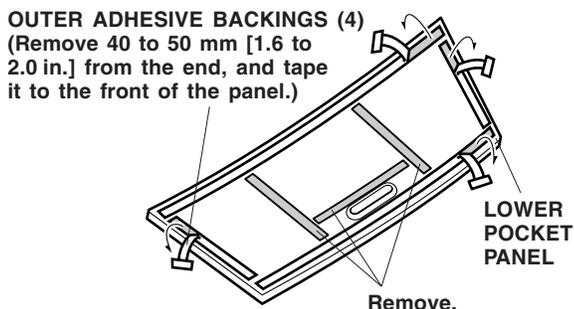

**OUTER ADHESIVE BACKINGS (4)**  
 (Remove 40 to 50 mm [1.6 to 2.0 in.] from the end, and tape it to the front of the panel.)


**LOWER POCKET PANEL**

**Front Panel:**

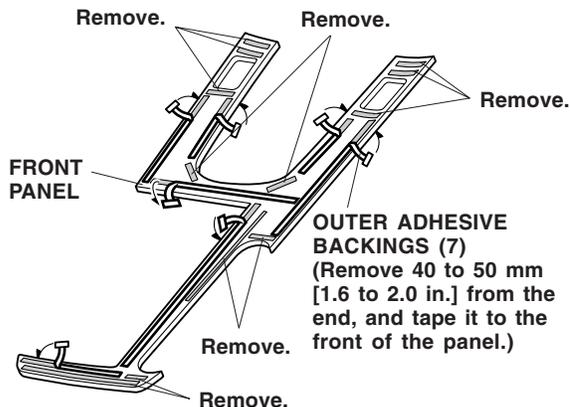


**FRONT PANEL**  
**OUTER ADHESIVE BACKINGS (7)**  
 (Remove 40 to 50 mm [1.6 to 2.0 in.] from the end, and tape it to the front of the panel.)

**Beverage Holder Panel:**

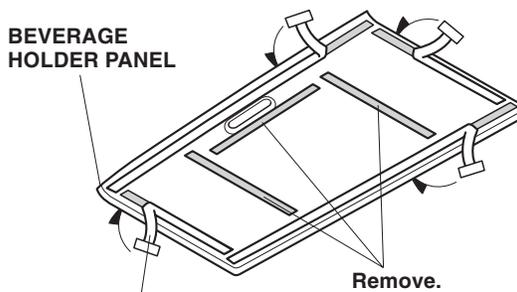

**BEVERAGE HOLDER PANEL**  
**OUTER ADHESIVE BACKINGS (4)**  
 (Remove 40 to 50 mm (1.6 to 2.0 in.) from the end, and tape it to the front of the panel.)


**Front Switch Panel (left):**

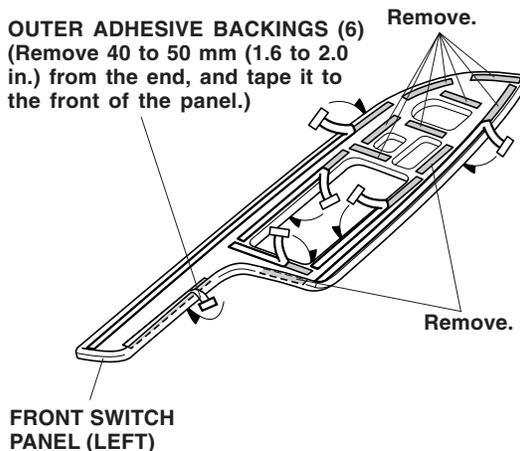


**OUTER ADHESIVE BACKINGS (6)**  
 (Remove 40 to 50 mm (1.6 to 2.0 in.) from the end, and tape it to the front of the panel.)

**FRONT SWITCH PANEL (LEFT)**


**Front Switch Panel (right):**

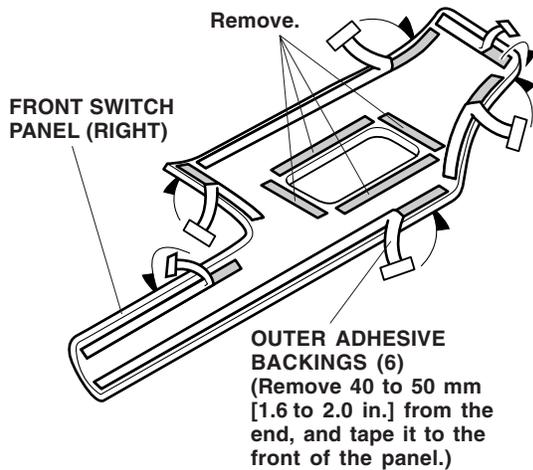

**Rear Switch Panel (left):**

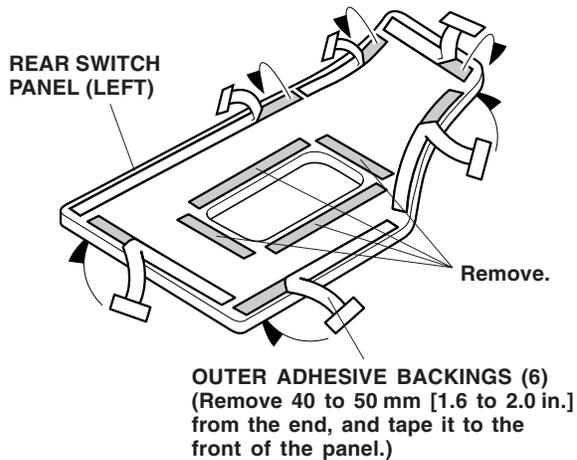


**Rear Switch Panel (right):**

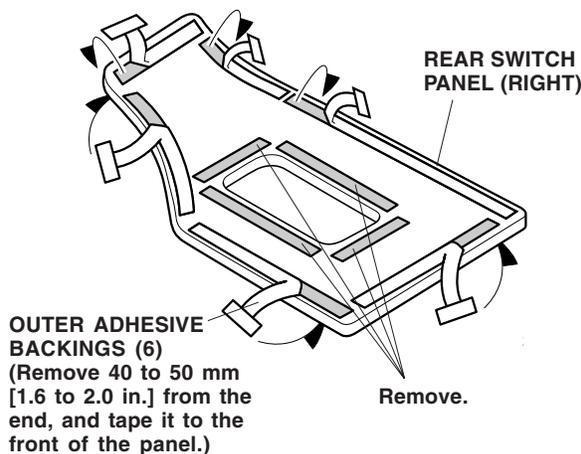


3. Position the interior panels on the existing panels. While applying light pressure on the interior panels, carefully remove the adhesive backings.
4. After installing the interior panels, use the palm of your hand to hold pressure against them for 30 seconds.


**Center Panel:**

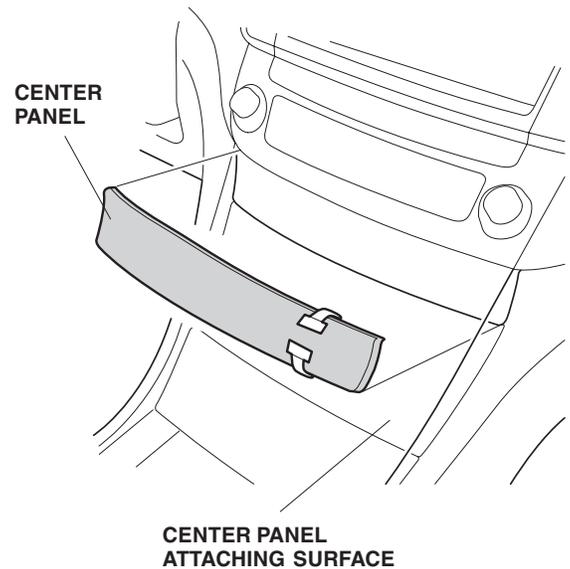


**Upper Pocket Panel/Lower Pocket Panel:**

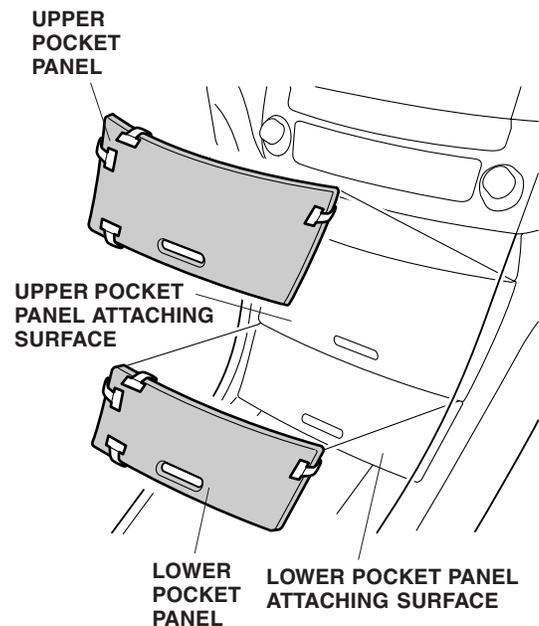


**Front Panel/Beverage Holder Panel:**

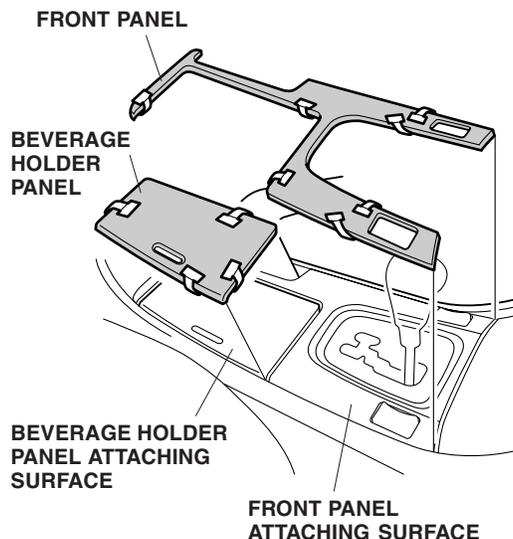


**Front Switch Panel (Left):**

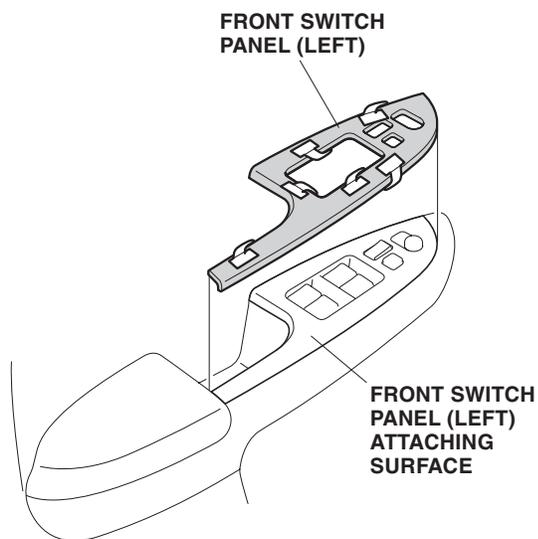

**Front Switch Panel (Right):**

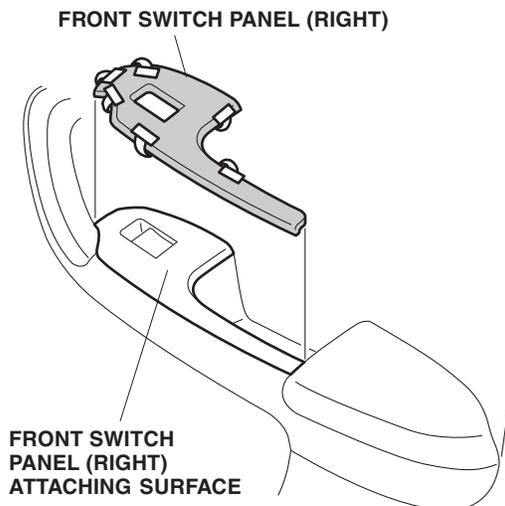

**Rear Switch Panel (Left):**

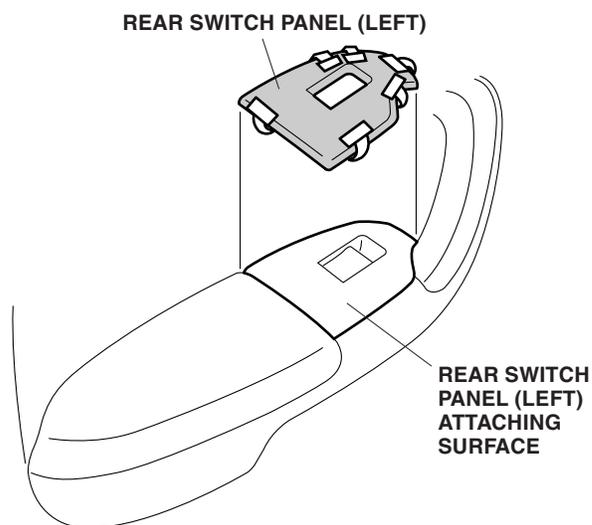

- Repeat on the right side to install the right rear switch panel.

**USE AND CARE**

Use a sponge or soft cloth dampened with a liquid dishwashing soap and water solution. After cleaning, wipe with a clean, soft cloth. Do not use cleaners or polishers containing corrosive or abrasive compounds to clean the interior trim pieces, as they may damage the surface.