




ACURA INSTALLATION INSTRUCTIONS


Accessory	Application	Publications No.
SIDE UNDER SPOILER	2006 TSX	BII 31315
		Issue Date
		OCT 2005

PARTS LIST

Side under spoiler (Left)

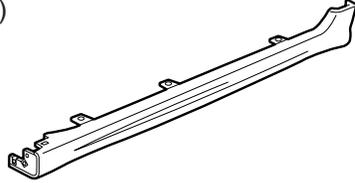


Side under spoiler (Right)

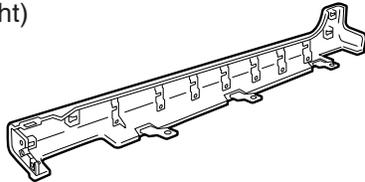

2 Bolts



20 Seals



TOOLS AND SUPPLIES REQUIRED


- Phillips screwdriver
- Phillips stubby driver
- Flat-tip screwdriver
- 90° Phillips screwdriver
- Ratchet (10 mm socket)
- Clip remover

INSTALLATION


NOTE:

- This Installation Instructions explains the installation procedure on the left side of the car. Repeat the procedure for installation on the right side.
- Before installing the accessory, raise the car and support it securely by placing the rigid racks or safety stands at four places under the car.
- Take care not to damage the car during installation of the accessory.


1. Remove the three self-tapping screws from the left front inner fender. Remove the three self-tapping screws from the rear end of the vehicle side sill trim.

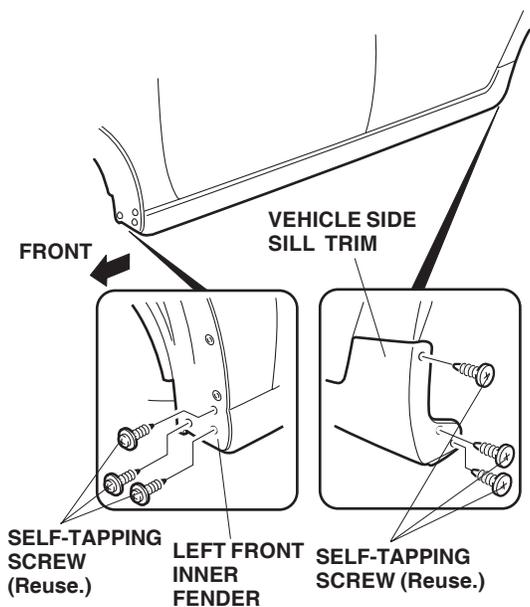


2. Remove one bolt and three clips from the underside of the vehicle side sill trim.

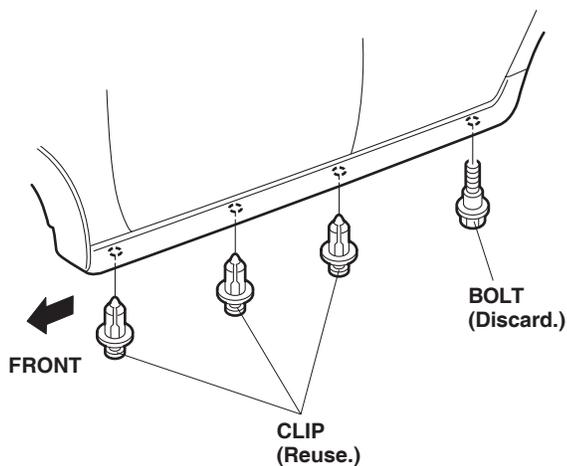

3. Slide the vehicle side sill trim rearward and pull it toward you to remove.

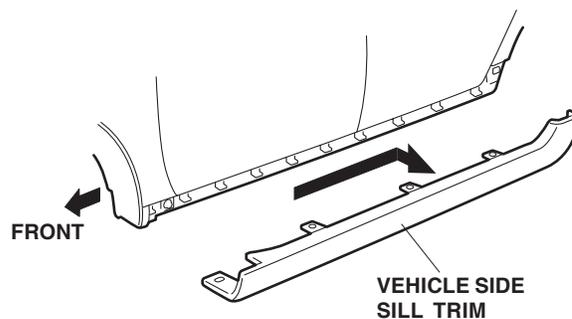


4. Slide the vehicle side sill inner trim forward and pull it toward you to remove.

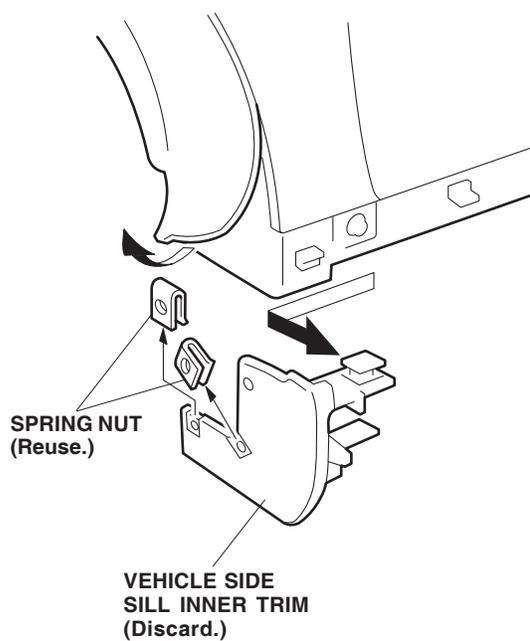


5. Remove the two spring nuts from the vehicle side sill inner trim.


6. Remove the remaining eleven clips from the car body.
 - Turn the clips except the one on the rear end of the car body 45 degrees to remove.

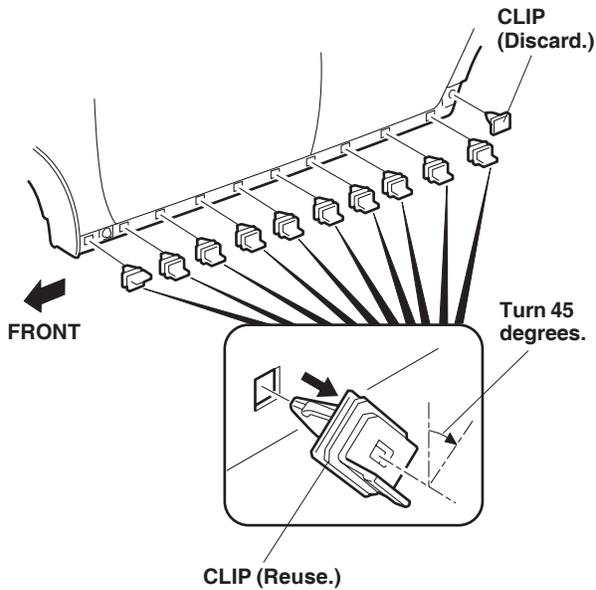


7. Install two spring nuts (reuse) and one clip (reuse) on the side under spoiler (left).

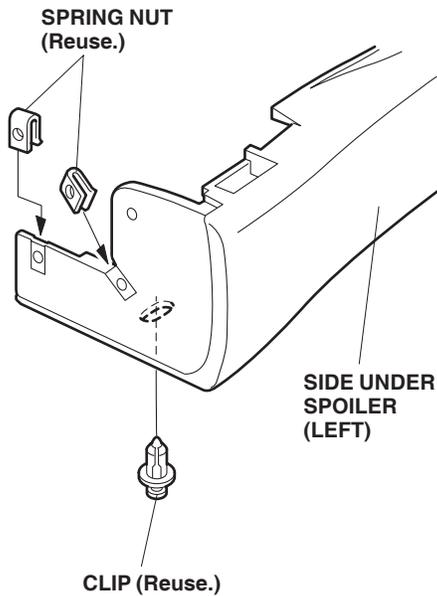

8. Install ten clips (reuse) on the side under spoiler (left).
 - Do not confuse the installation direction of the clips.

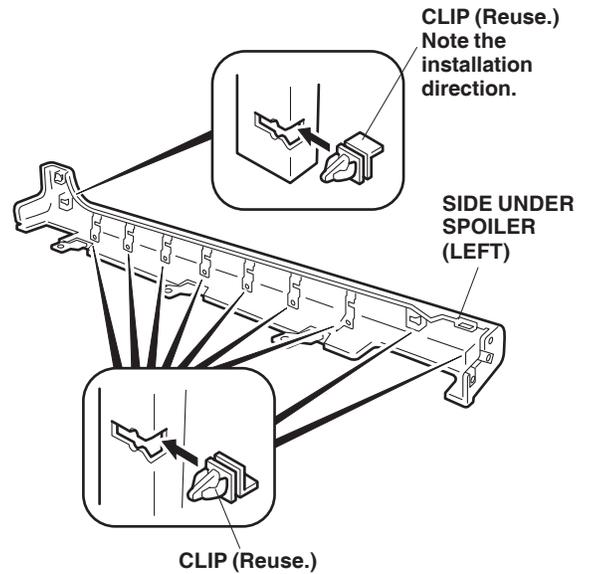


9. Replace the old seal on each of the ten clips with a new seal.

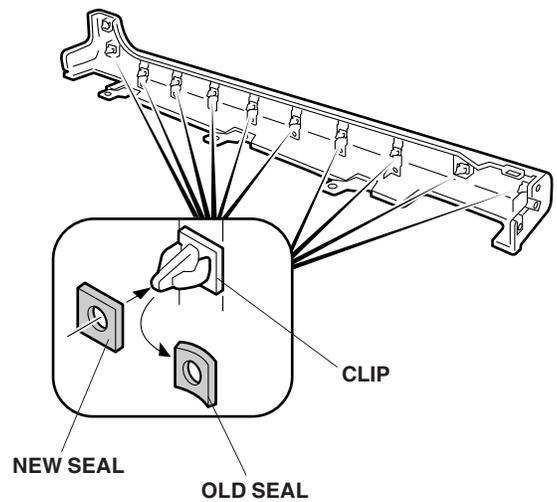


10. Open the front and rear doors. Align the clips on the side under spoiler (left) with the angular holes in the car body and install the side under spoiler (left) by pushing it firmly against the car body.


- Install the side under spoiler by turning up the front inner fender so it is not pinched with the front end of the side under spoiler.
- Push against the side under spoiler (left) firmly until each one of the clips clicks.

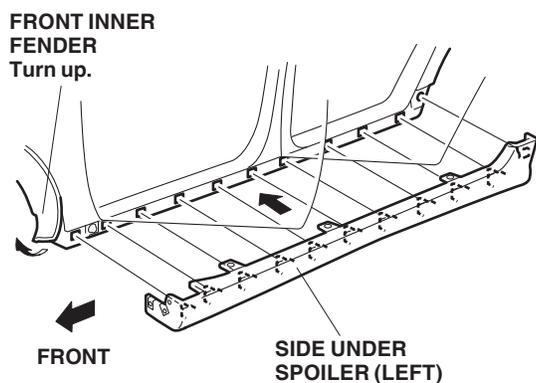

11. Install a new bolt and two clips (reuse) on the underside of the side under spoiler (left).

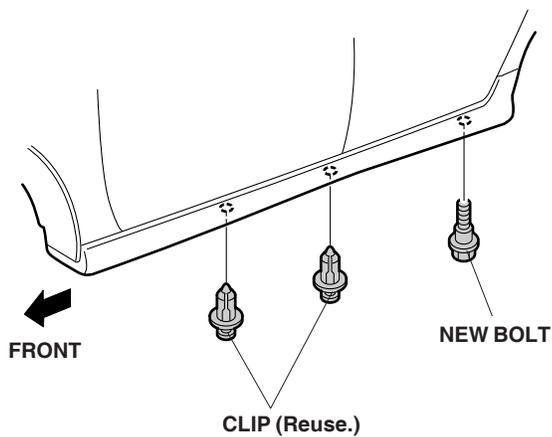

12. Reinstall three self-tapping screws (reuse) on the front inner fender, and reinstall three self-tapping screws on the rear end of the side under spoiler.

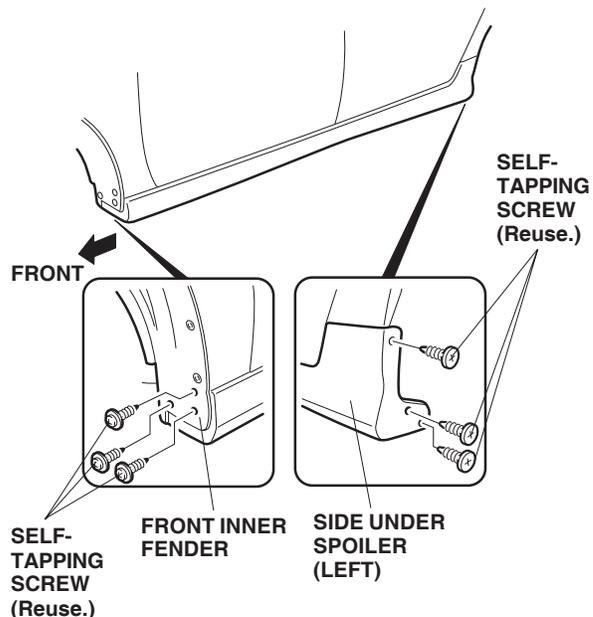

13. Repeat the procedures on the right side.