

**PARTS LIST**

Select knob



2 Screws




**TOOLS AND SUPPLIES REQUIRED**


- Phillips screwdriver
- Stubby Phillips screwdriver
- Pliers
- Torque screwdriver (T/N CDI 401SM)
- Shop Towel

**INSTALLATION**


1. With the parking brake on, remove the lid with a flat-tip screwdriver covered with a shop towel. Insert the vehicle's ignition key into the opening, and move the select knob to the "MD" range.

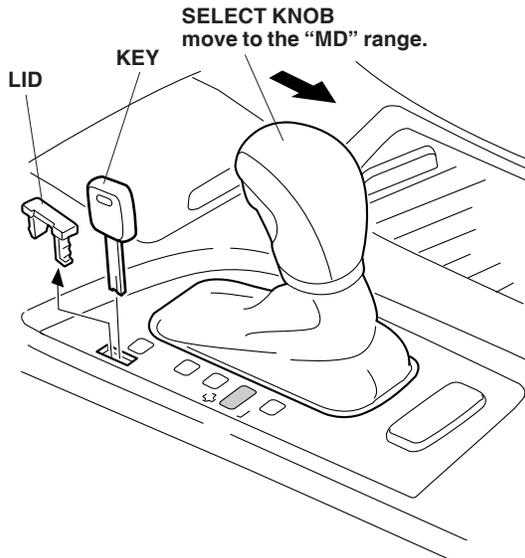


2. Using pliers, place a shop towel between the shift boot and pliers, and squeeze in on the two retaining tabs in the position shown.

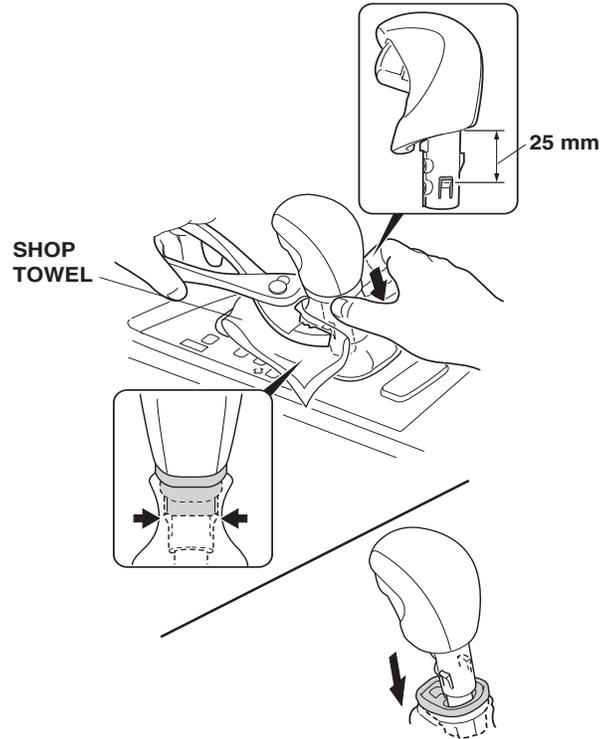


3. Remove the two screws from the select knob, and remove the select knob by pulling it up.

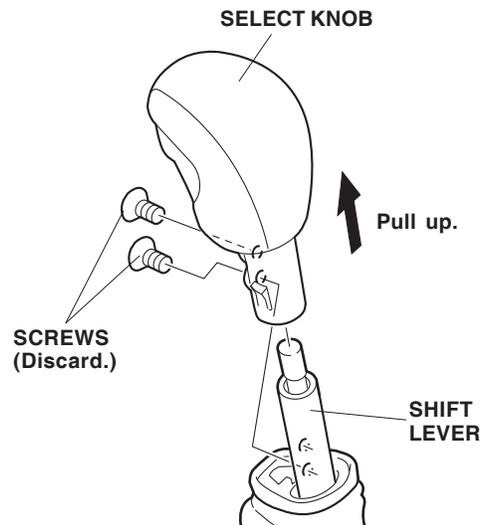

4. Install the new select knob using the two new screws. Using a torque screwdriver, torque the screws to 2.0 N•m (18 lb-in). Do not overtighten the screws.

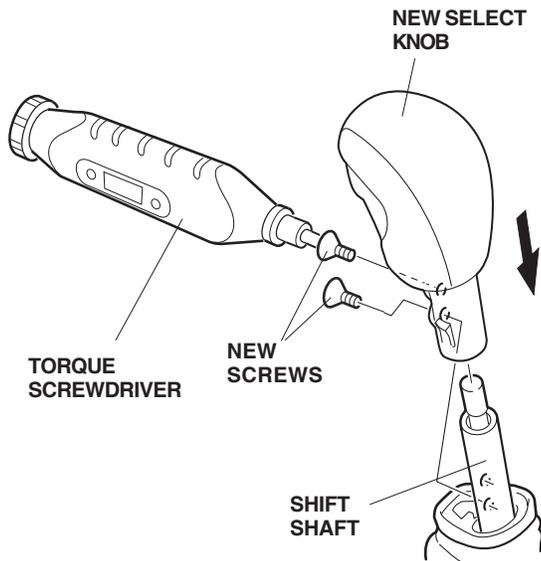

5. Pull the shift boot up into the normal position.

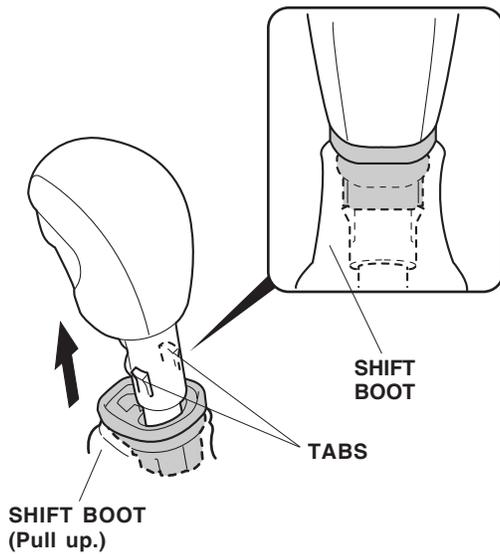

6. Install the lid.

## USE AND CARE

- Use a sponge or cloth and a solution of mild liquid dishwashing soap and water to clean the select knob.
- Rinse the knob completely with water, then dry it with a shop towel.
- Never use solvents such as benzene, thinner, or gasoline to clean the select knob.