

ACURA INSTALLATION INSTRUCTIONS

Accessory	Application	Publications No.
SELECT KNOB A/T	2008 MDX	BII 37608-38490
		Issue Date
		DEC 2007

PARTS LIST

Select knob



2 Screws



TOOLS AND SUPPLIES REQUIRED

Phillips screwdriver

Stubby Phillips screwdriver


Pliers

Torque screwdriver (T/N CDI 401SM)


Shop Towel

INSTALLATION


1. With the parking brake on, remove the lid with a flat-tip screwdriver covered with a shop towel. Insert the vehicle's ignition key into the opening, and move the select knob to the "MD" range.

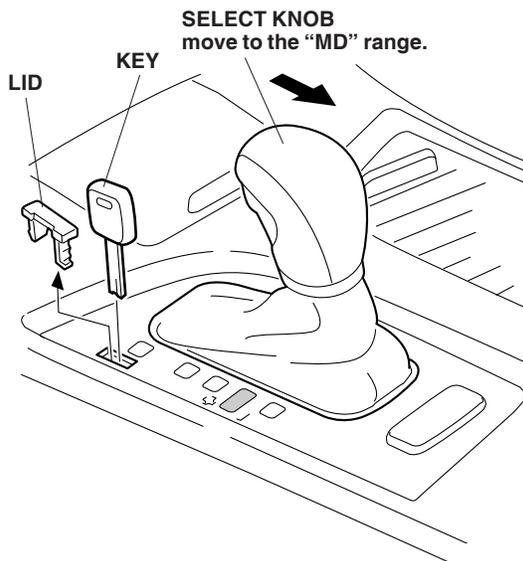


2. Using pliers, place a shop towel between the shift boot and pliers, and squeeze in on the two retaining tabs in the position shown.

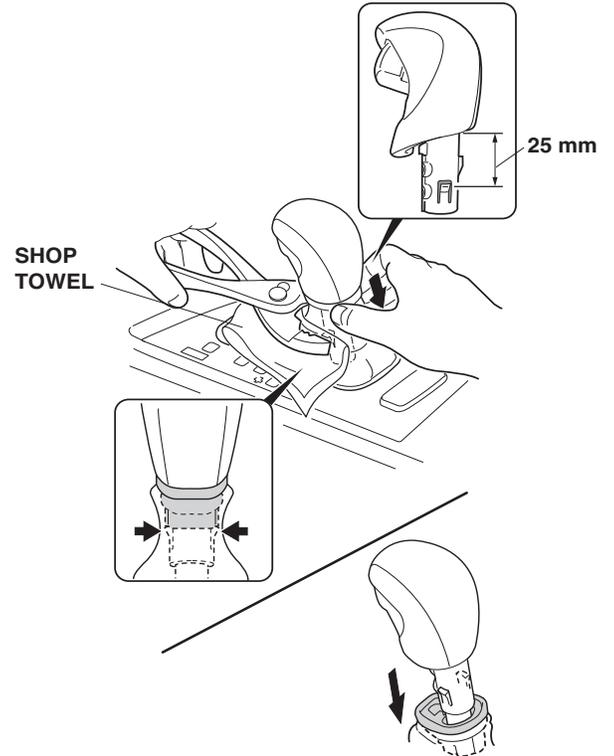


3. Remove the two screws from the select knob, and remove the select knob by pulling it up.

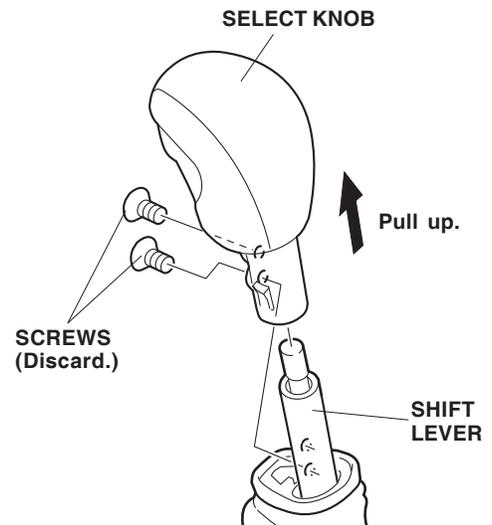

4. Install the new select knob using the two new screws. Using a torque screwdriver, torque the screws to 2.0 N•m (18 lb-in). Do not overtighten the screws.

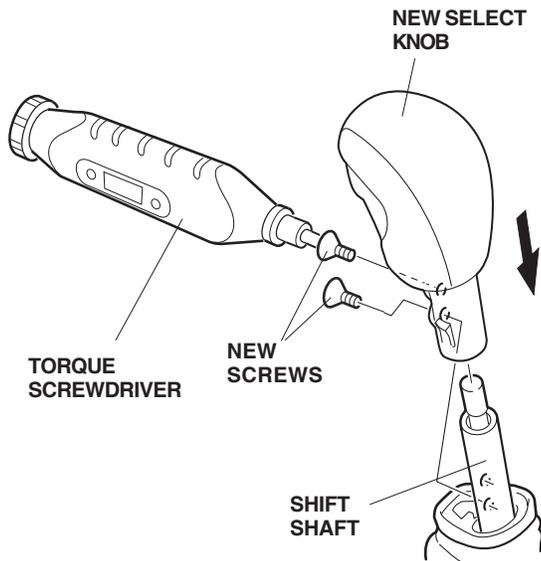

5. Pull the shift boot into the normal position.

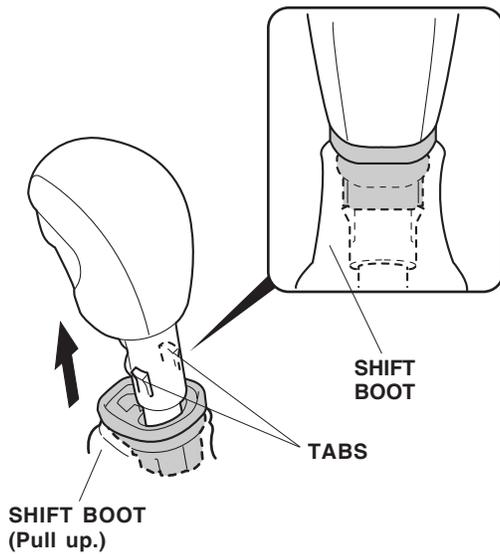

6. Install the lid.

USE AND CARE

- Use a sponge or cloth and a solution of mild liquid dishwashing soap and water to clean the select knob.
- Rinse the knob completely with water, then dry it with a shop towel.
- Never use solvents such as benzene, thinner, or gasoline to clean the select knob.