



INSTALLATION INSTRUCTIONS

Accessory

REAR BUMPER APPLIQUE
P/N 08P48-TL2-200A

Application

2009 TSX

Publications No.


BII 38596-39387

Issue Date


APRIL 2008

PARTS LIST


Rear bumper applique

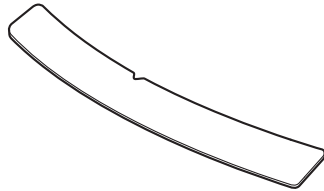

Applicator



Soft sleeve

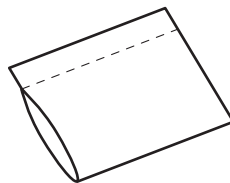

TOOLS AND SUPPLIES REQUIRED

Isopropyl alcohol

Shop towel

Lint-free shop towel


Masking tape

Felt-tip pen

Spray bottle

Protective tape application solution (P/N 08712-0008)

Illustration of the Rear Bumper Applique Installed on the Vehicle

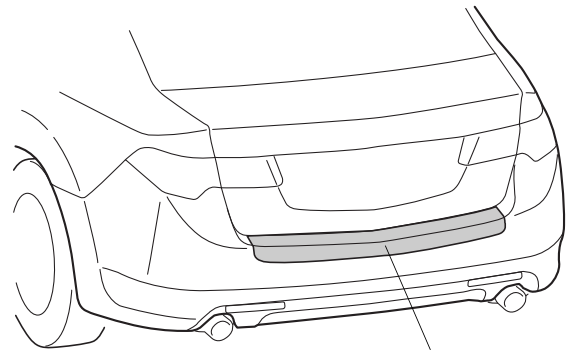


REAR BUMPER
APPLIQUE

INSTALLATION


NOTE:

- Be careful not to damage the rear bumper and other finished surfaces of the body.
- This rear bumper applique should be installed only if the ambient air temperature is 15°C (60°F) or above.
- To allow the adhesive to cure, do not wash the vehicle for 24 hours.


1. Align the rear bumper applique to the rear bumper and check the rear bumper applique attaching position.

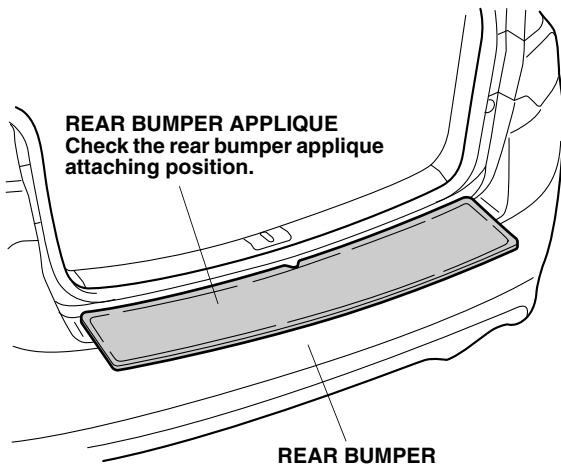


3. Using a spray bottle with protective tape application solution, spray the rear bumper where the rear bumper applique will attach.

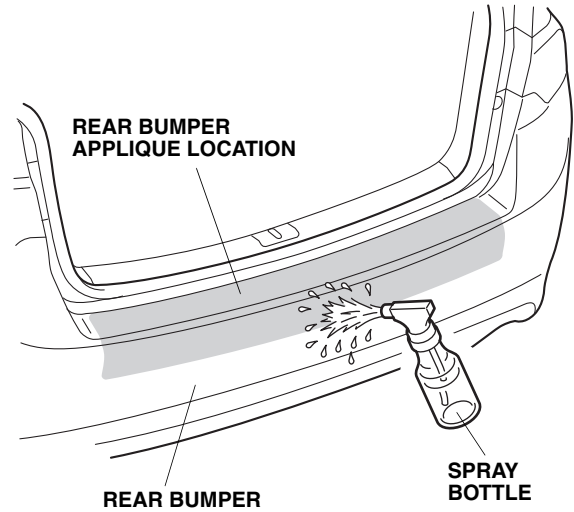


2. Using isopropyl alcohol on a lint-free shop towel, clean the rear bumper where the rear bumper applique will attach. Remove the rear bumper applique.

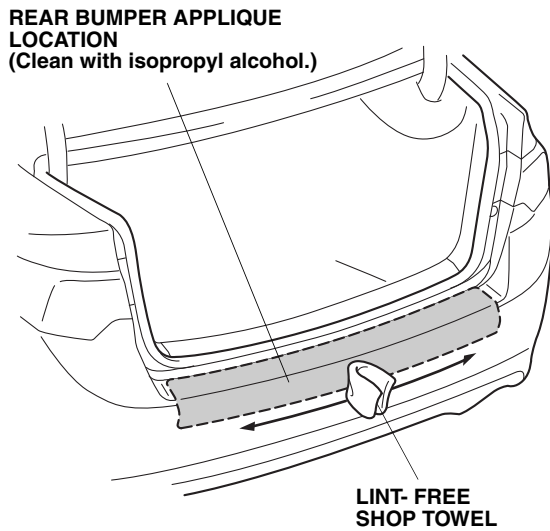


4. Remove the adhesive backing from the rear bumper applique.

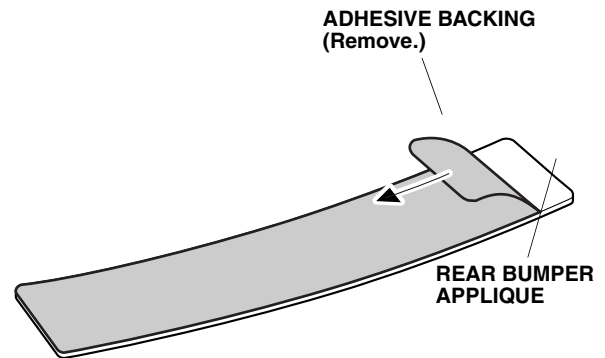


5. Generously apply protective tape application solution to the adhesive side of the rear bumper applique.

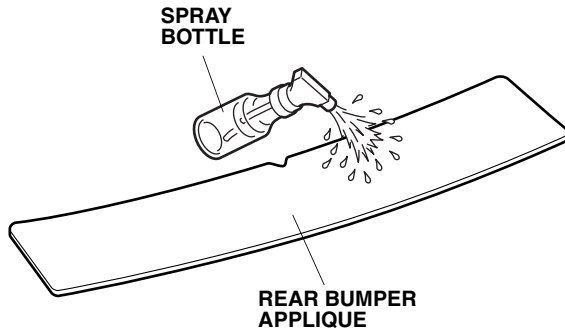


6. Without touching the adhesive side of the rear bumper applique, position it on the rear bumper, and align the v-notch in the rear bumper applique with the center of the trunk lid anchor. Smooth the rear bumper applique along the rear bumper and tape each end at the curved surface.

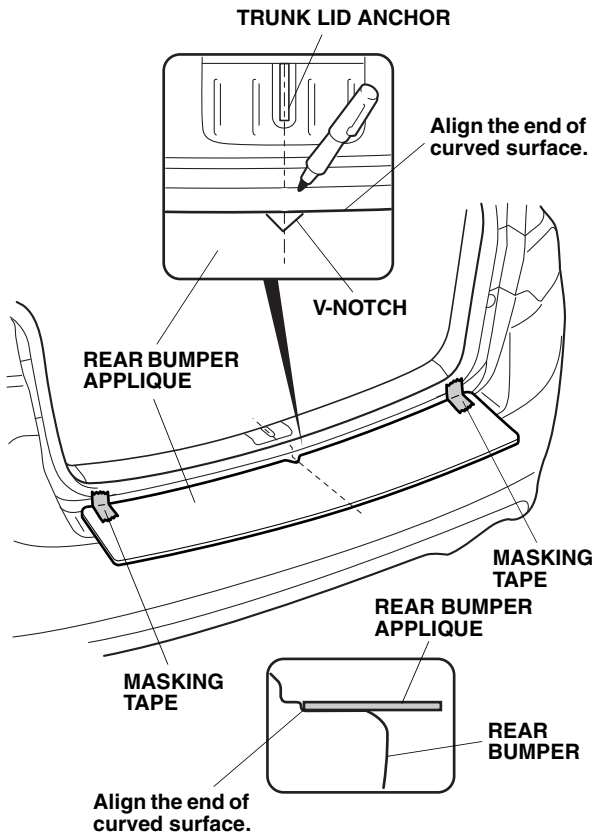

7. Insert the applicator into the soft sleeve. Using an applicator with soft sleeve, apply downward strokes to smooth out the top surface at the center of the rear bumper applique. Do not apply upward strokes with the applicator.

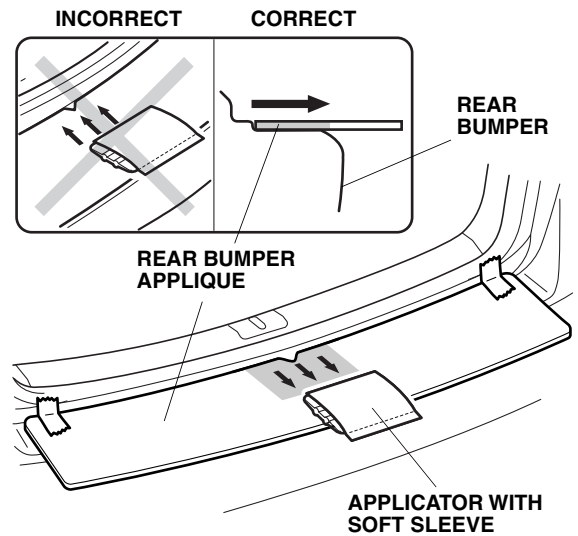


8. Starting from the center and working outward, use the applicator with soft sleeve to smooth the rear bumper applique. Repeat on the right side. Stroke in one direction only.

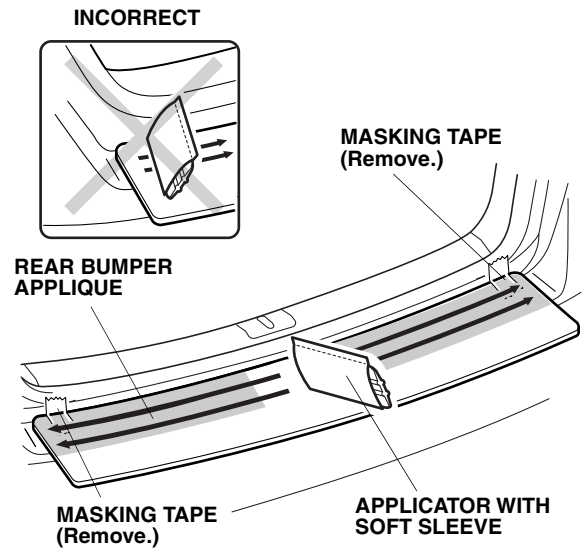


9. Remove the masking tape.


10. Once the flat surface is completely smooth with no bubbles, use the applicator with soft sleeve to apply the rear bumper applique to the rounded rear edge at the center as shown.

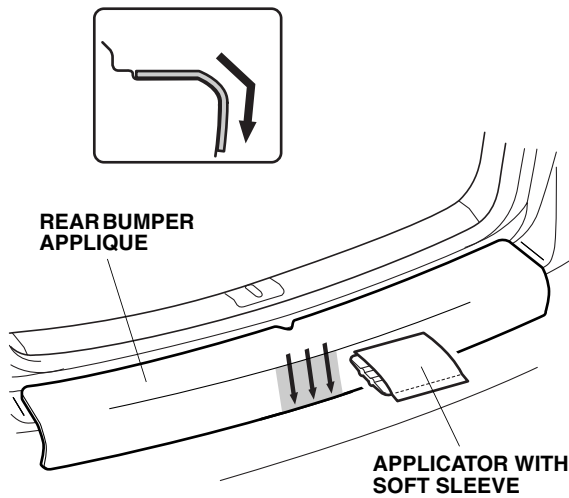

11. Use the applicator with soft sleeve to apply the rear bumper applique to the rounded rear edge on the left side as shown. Start in the middle and work outward. Repeat for the right side.

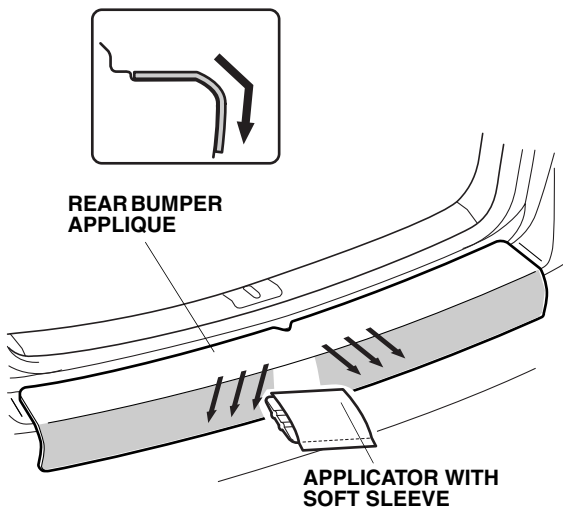

12. Remove the protective film from the top rear bumper applique. Slowly pull the protective film back. Avoid pulling it upward.

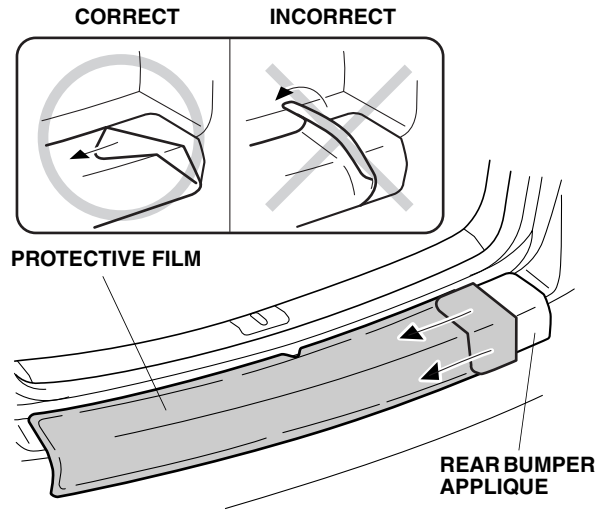

13. Use a shop towel to rub across and down on the rear round edge. Allow the rear bumper applique to dry thoroughly.

