
ACURA INSTALLATION INSTRUCTIONS	Accessory	Application	Publications No. BII 44691
	SPLASH GUARDS	2011 RL	Issue Date DEC 2010
PARTS LIST Left front splash guard	F	 TOOLS AND SUPPLIES REQUIRED Stubby Phillips screwdriver Pushpin INSTALLATION NOTE: Clean and wax the area to be covered. Use a high-quality paste wax. Installing the Front Splash Guards 1. Turn the steering wheel all the way counterclockwise. 2. Remove the three self-tapping screws from the left front inner fender. 	
Right front splash guard			
Left rear splash guard			
Right rear splash guard		LEFT FRONT INNER FENDER	
4 Spring nuts		3 SELF-TAPPING SCREWS (Discard.)	
12 Self-tapping screws			


3. Position the left front splash guard on the left front inner fender, and tighten the three self-tapping screws in the order shown.

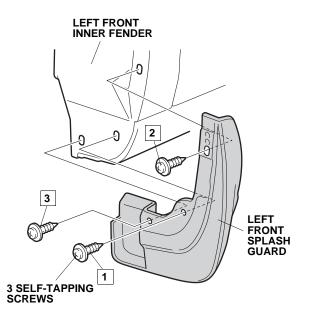


4. Turn the steering wheel all the way clockwise, and repeat steps 2 and 3 to install the right front splash guard.

Installing the Rear Splash Guards

5. Using a pushpin, pierce the center of the two dimpled areas in the rear bumper.

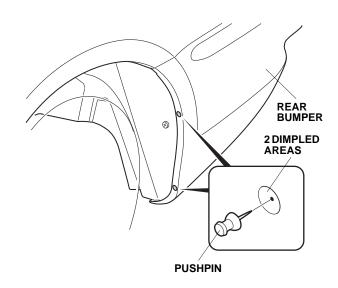


6. Remove the one self-tapping screw from the left rear inner fender.

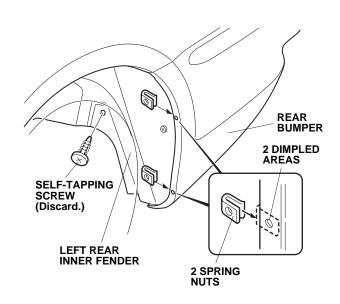

7. Slide two spring nuts over the dimpled areas of the rear bumper.

8. Position the left rear splash guard on the rear bumper and left rear inner fender, and tighten the three self-tapping screws in the order shown.

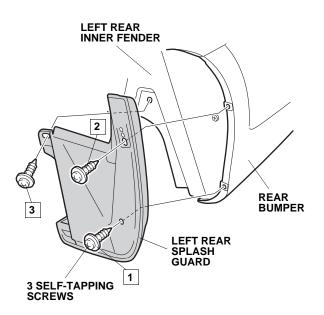

9. Repeat steps 5 thru 8 to install the right rear splash guard.