



INSTALLATION INSTRUCTIONS


Accessory
SPLASH GUARDS
P/N 08P00-TL7-200

Application
**2012 TSX
SPORT WAGON**


Publications No.
BII 46296
Issue Date
AUG 2011

PARTS LIST


Left front splash guard

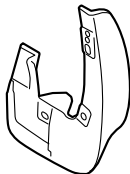


Right front splash guard

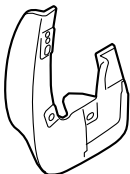


Left rear splash guard

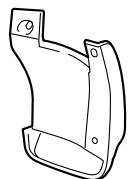

Right rear splash guard

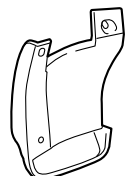

12 Self-tapping screws




TOOLS AND SUPPLIES REQUIRED

Pushpin

Stubby Phillips screwdriver

Illustration of the Splash Guards Installed on the Vehicle

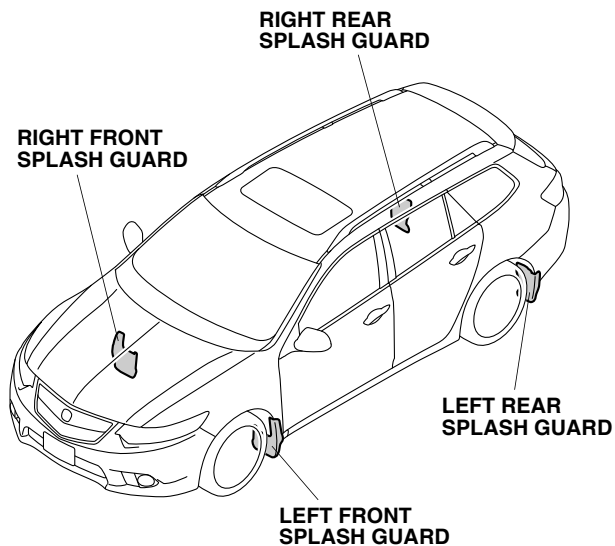

INSTALLATION


Client Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by “do-it-yourselfers.”

NOTE:


- These instructions show the left splash guards being installed. The same procedure applies to installing the right splash guards.
- Clean and wax the areas to be covered with a high-quality paste wax.

Installing the Front Splash Guards

1. Turn the steering wheel fully counterclockwise.

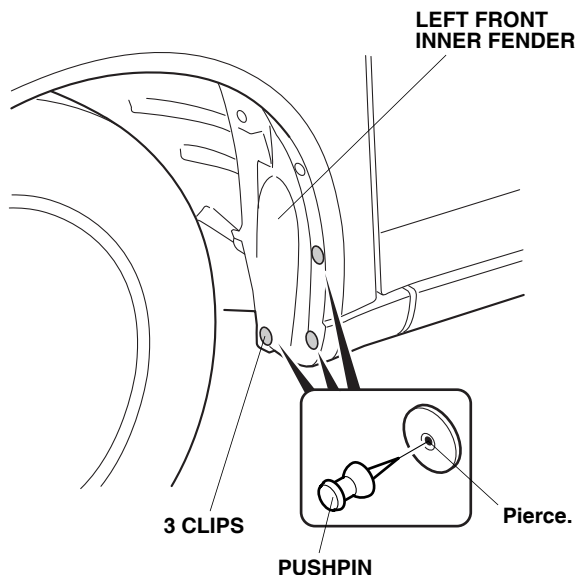


2. Using a pushpin, pierce the centers of the three vehicle clips in the left front inner fenderwell.
 3. Secure the left front splash guard to the left front inner fender with three self-tapping screws in the order shown below.
- NOTE: If there is a gap between the fender and the left front splash guard, loosen the three self-tapping screws and tighten them while pushing in on the splash guard.

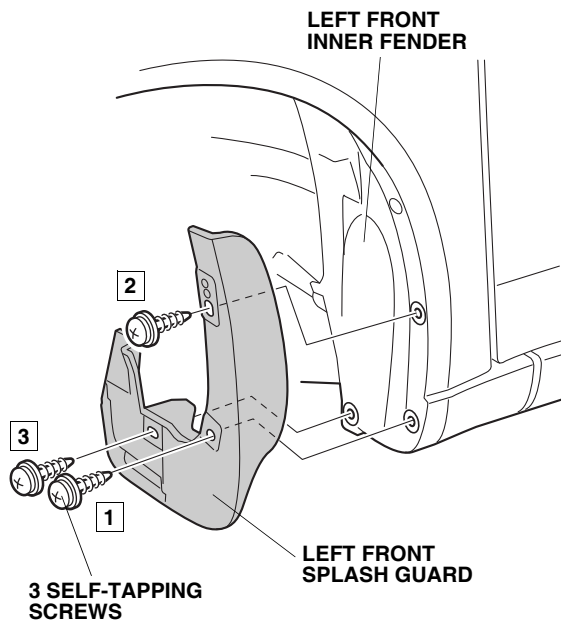


4. Turn the steering wheel clockwise, and repeat steps 2 and 3 to install the right front splash guard.

Installing the Rear Splash Guards

5. Remove three self-tapping screws from the left rear inner fender and rear bumper.

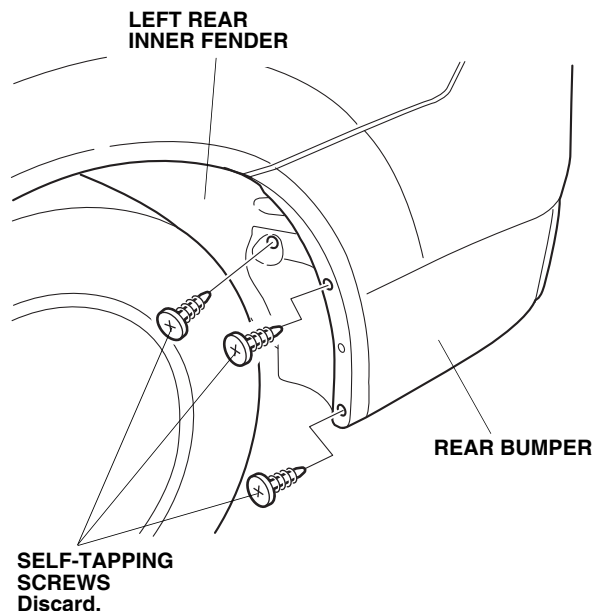

6. Secure the left rear splash guard to the left rear inner fender and rear bumper with three self-tapping screws in the order shown below.
- NOTE: If there is a gap between the bumper and the left rear splash guard, loosen the three self-tapping screws and tighten them while pushing in on the splash guard.

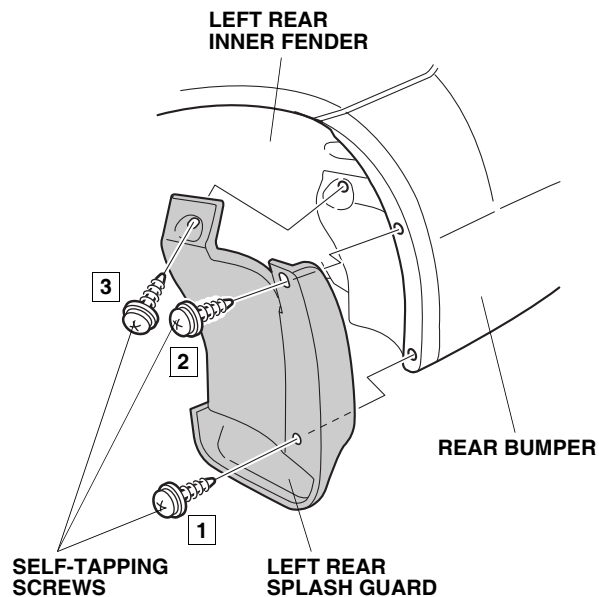

7. Repeat steps 5 and 6 to install the right rear splash guard.