








INSTALLATION INSTRUCTIONS

Accessory
INTERIOR TRIM
P/N 08Z03-SZN-200


Application
2012 ZDX

Publications No.
BII 46585
Issue Date
AUG 2011


PARTS LIST

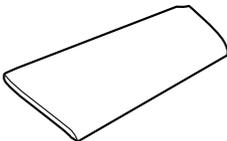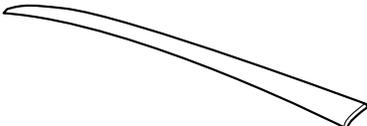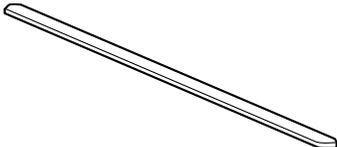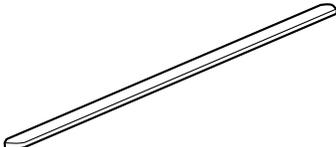- Driver's interior panel 
- Passenger's interior panel 
- Left front door trim 
- Right front door trim 
- Left front door switch trim 
- Right front door switch trim 
- Left rear door switch trim 

Right rear door switch trim




4 Alcohol swabs

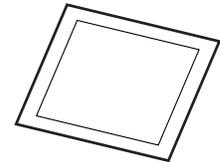

TOOLS AND SUPPLIES REQUIRED

- Masking tape
- Hair Dryer

Illustration of the Interior Trims in the Vehicle

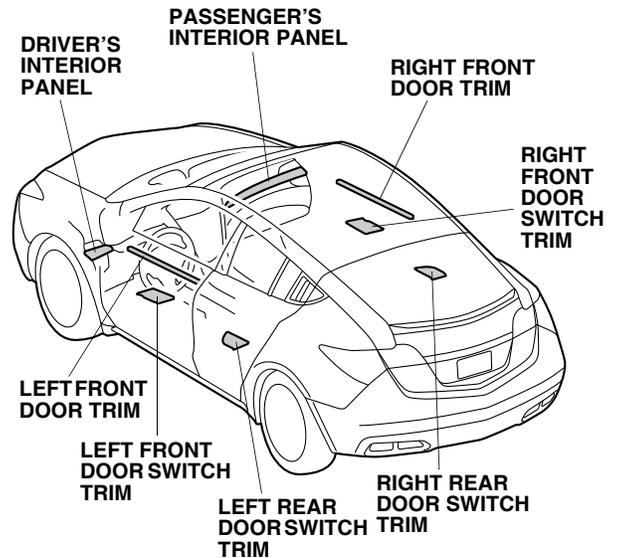

INSTALLATION


Client Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by “do-it-yourselfers.”

NOTE:


- Do not damage the vehicle during installation.
- This kit should be installed only if the ambient air temperature is 15°C (60°F) or above. Heat the interior trim and bonding surface with a hair dryer set on LOW if the ambient air temperature is below 15°C (60°F).
- Align and install each piece carefully. Attempting to detach the double faced tape may damage the part or deteriorate the bonding performance of the double faced tape.

Attaching the Driver's Interior Panel


1. Using an alcohol swab, thoroughly clean the area where the driver's interior panel will attach.

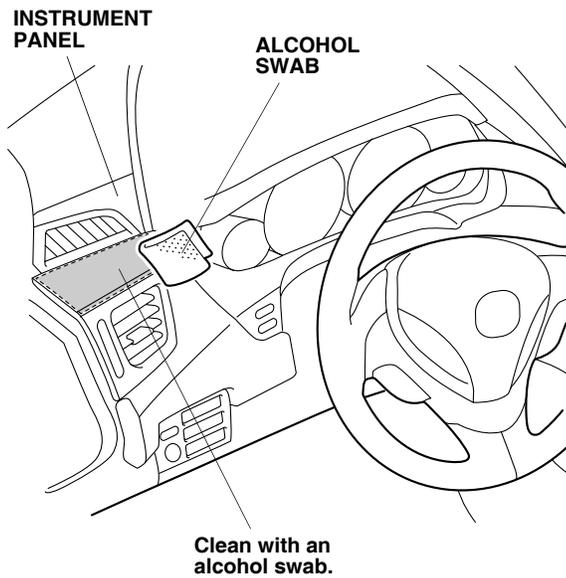


2. Attach pieces of masking tape to the ends of two adhesive backings as shown. Peel back the adhesive backings partway and temporarily attach them to the front surface of the driver's interior panel.

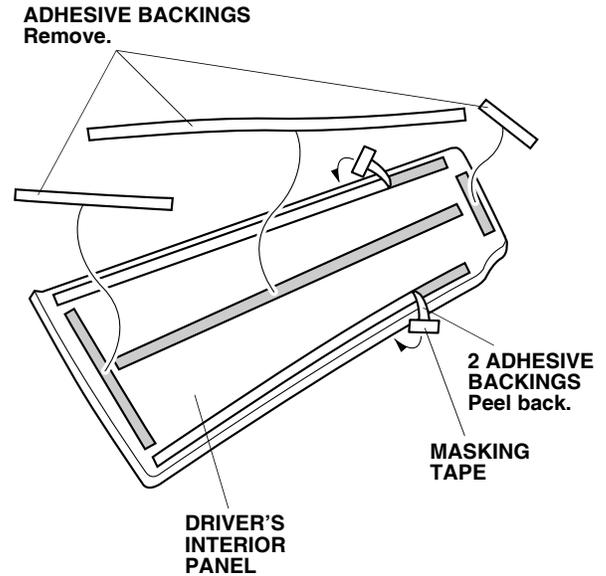

3. Remove the remaining adhesive backings.
4. Align and attach the driver's interior panel to the instrument panel as shown.

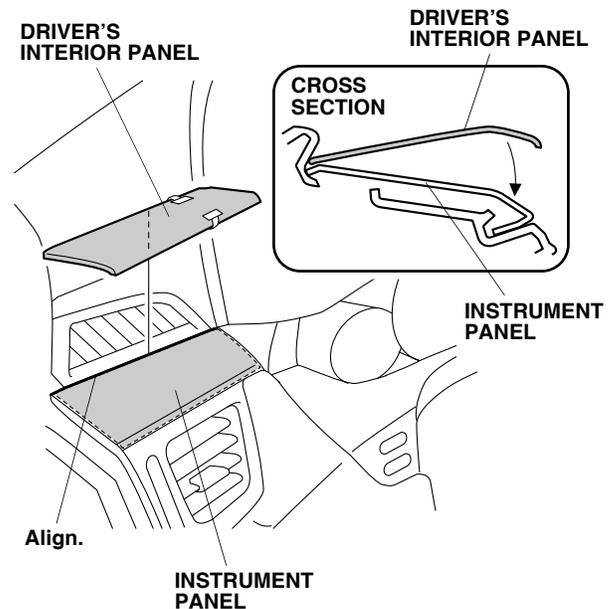


5. While applying light pressure against the driver's interior panel, carefully remove the taped adhesive backings.

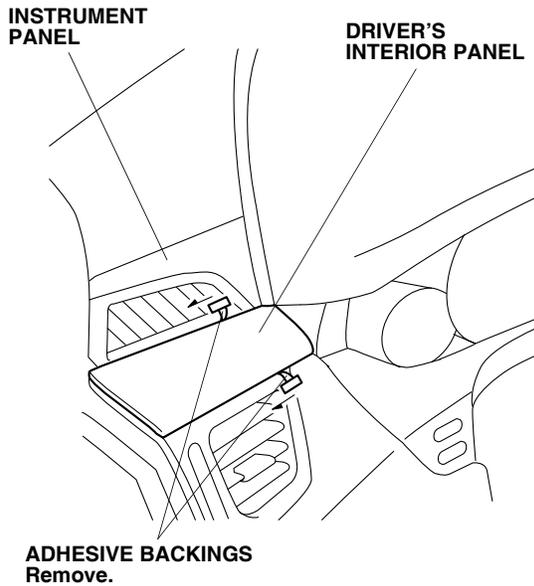


6. Using the palm of your hand, firmly press the driver's interior panel against the instrument panel.

Attaching the Passenger's Interior Panel


7. Using an alcohol swab, thoroughly clean the area where the passenger's interior panel will attach.

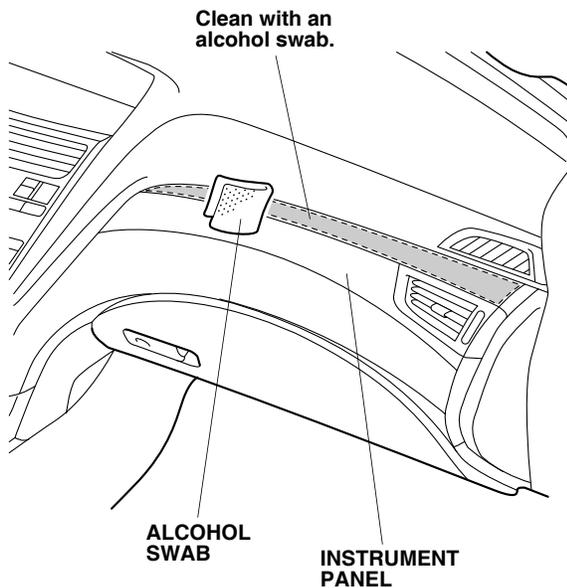


8. Attach pieces of masking tape to the ends of four adhesive backings as shown. Peel back the adhesive backings partway and temporarily attach them to the front surface of the passenger's interior panel.

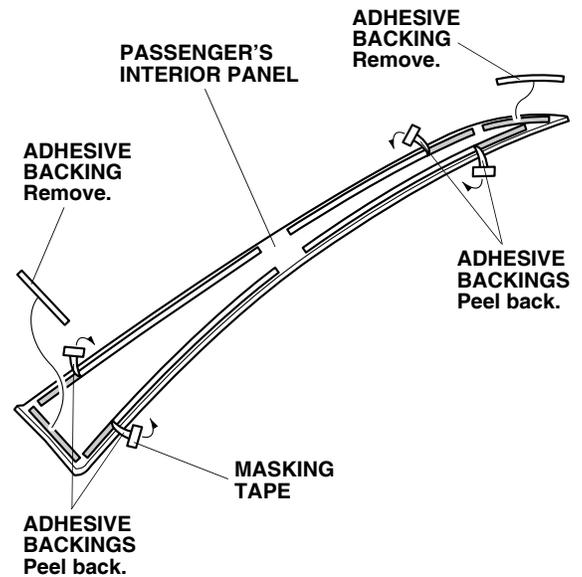

9. Remove the remaining adhesive backings.
10. Align and attach the passenger's interior panel to the instrument panel.

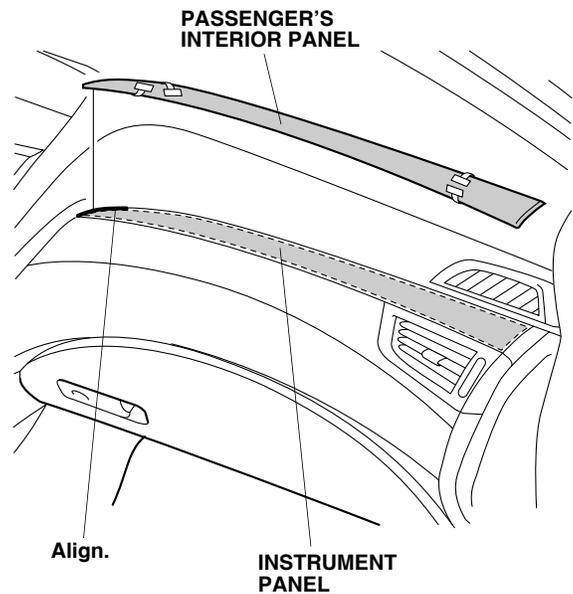


- While applying light pressure against the passenger's interior panel, carefully remove the taped adhesive backings.

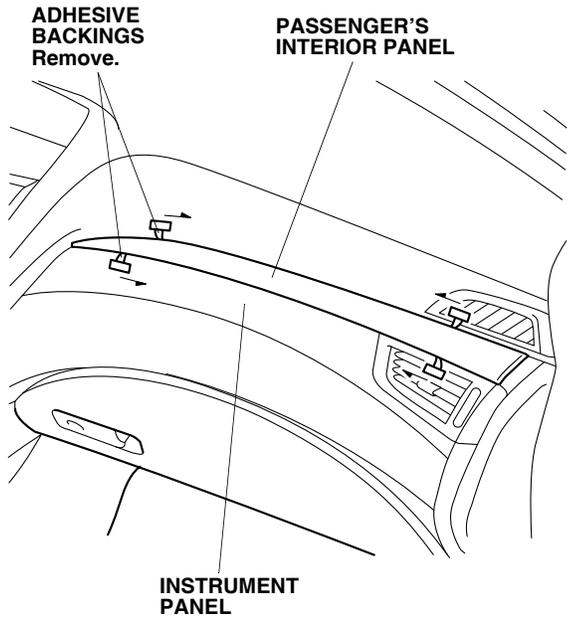


- Using the palm of your hand, firmly press the passenger's interior panel against the instrument panel.

Attaching the Front Door Trim


- Using an alcohol swab, thoroughly clean the area where the left front door trim will attach.

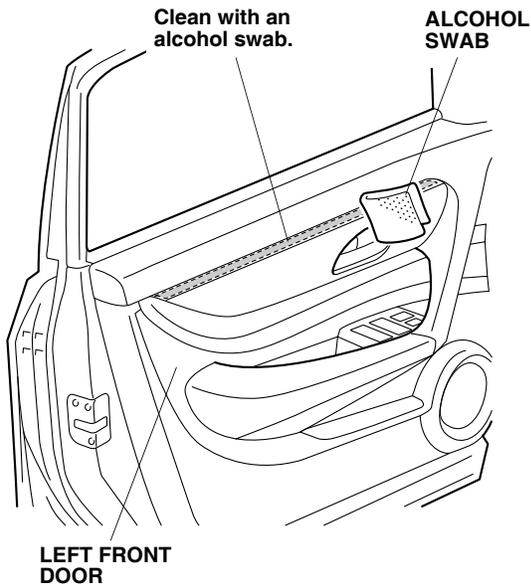


- Attach pieces of masking tape to the ends of six adhesive backings as shown. Peel back the adhesive backings partway and temporarily attach them to the front surface of the left front door trim.

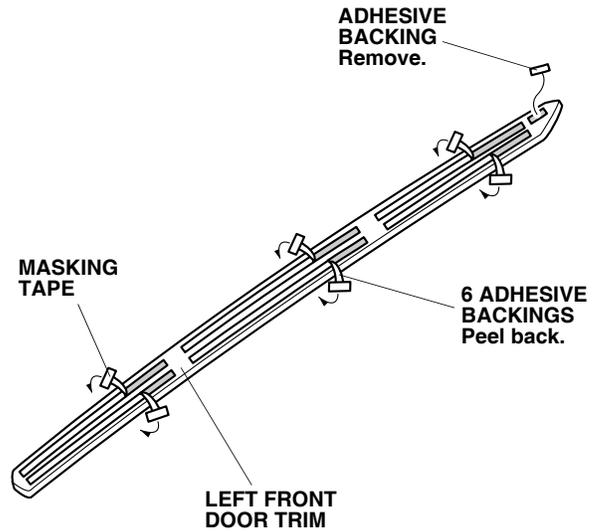

- Remove the remaining adhesive backing.
- Align and attach the left front door trim to the left front door.

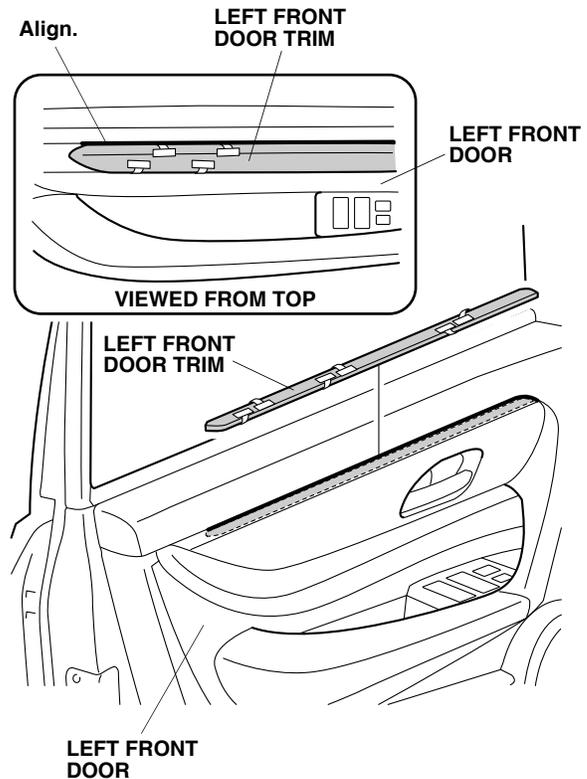


17. While applying light pressure against the left front door trim, carefully remove the taped adhesive backings.

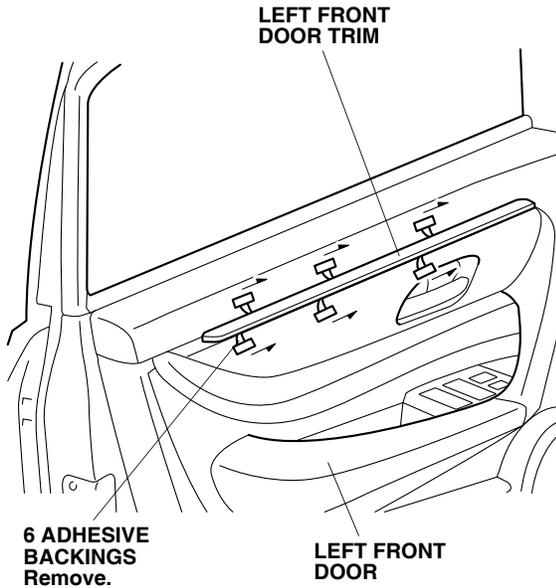


18. Using the palm of your hand, firmly press the left front door trim against the left front door.
19. Repeat steps 13 through 18 to install the trim on the right front door.

Attaching the Switch Trim


20. Using an alcohol swab, thoroughly clean the area where the left front door switch trim will attach.

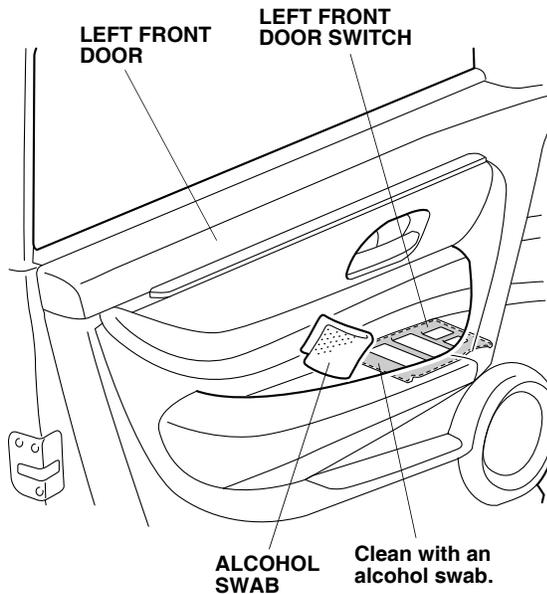

21. Remove the adhesive backings from the left front door switch trim.

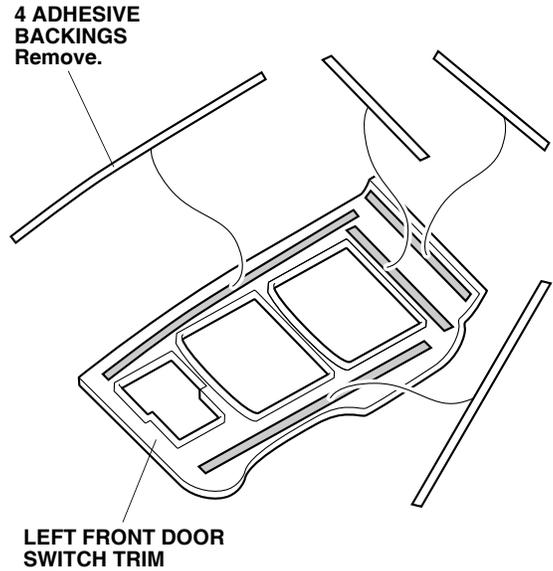

22. Attach the left front door switch trim to the left front door switch.

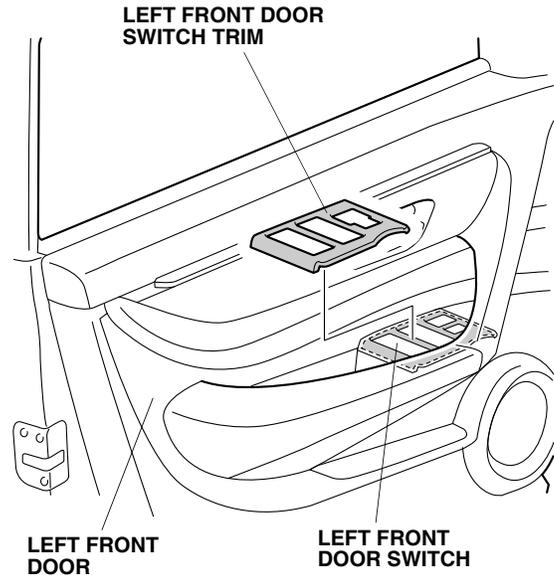

23. Using the palm of your hand, firmly press the left front door switch trim against the left front door switch.
24. Repeat steps 20 through 23 to install the switch trim on the right front door, left rear door, and right rear door.