

| ACURA INSTALLATION INSTRUCTIONS | Accessory CARGO HOOK P/N 08L96-TA0-101A | Application 2014 ILX | Publications No. BII 48793 Issue Date APRIL 2013 |
|---------------------------------|---|--|---|
| PARTS LIST Cargo hook | | OOLS AND SUPPLIES REQU lex wrench 9 mm Open end wrench 0 mm Socket Ratchet Extension | IRED |
| Bolt | | Forque wrench The following tool is available thro Equipment Program. On the iN, Service Bay > Tool and Equipme he number under "Search". Or, | click on: Service > ent Program, then enter |
| Small washer | | Rivet Nut Tool, 6 mm (T/N 07AA NSTALLATION | E-000A100) |
| Spring washer Rivet nut | | Client Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers." | |
| User's Information Manual | | NOTE: Be careful not to damage the This instruction shows a cargo the left side of the vehicle. An (sold separately) can be insta the vehicle. | hook being installed on additional cargo hook |
| Flange nut (Not used) | | | |
| Large washer (Not used) | | | |
| | 0 | | |

1. Thread the rivet nut onto the mandrel of the rivet nut tool as shown.

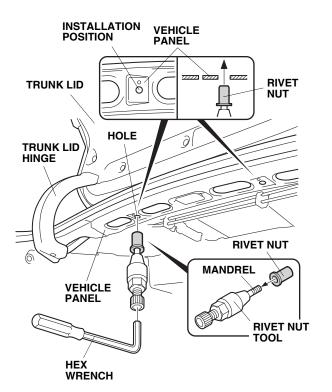

2. Open the trunk. Insert the rivet nut into the hole in the vehicle panel, and install the hex wrench on the rivet nut tool.

3. While holding the rivet nut tool with the hex wrench, turn the 19 mm open end wrench clockwise to install the rivet nut to the vehicle panel.

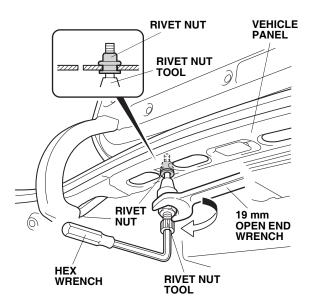

- 4. Remove the rivet nut tool from the rivet nut by turning the hex wrench counterclockwise.
- 5. Align the cargo hook pin with the hole in the vehicle panel, and secure the cargo hook to the vehicle panel using the bolt, small washer, and spring washer. Torque the bolt to 4.0 N·m (3.0 lbf·ft).

