



Installing the Front Splash Guards

- 1. Turn the steering wheel fully counterclockwise.
- 2. Using a pushpin, pierce the centers of two clips in the left front inner fender.

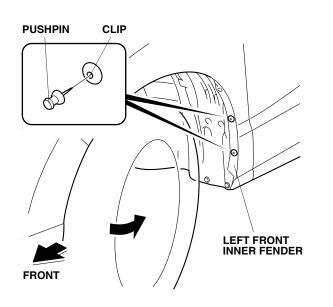


3. Remove two self-tapping screws from the left front inner fenderwell.

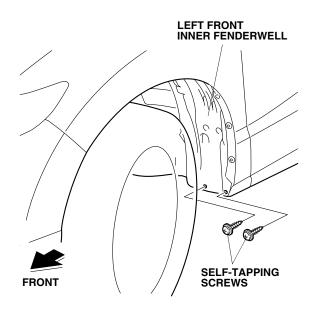

4. Install the left front splash guard to the left front inner fender with two washer-screws and the two self-tapping screws removed in step 3. Tighten in the order $1 \rightarrow 2 \rightarrow 3 \rightarrow 4$.


NOTE: Make sure there is no gap between the left front splash guard and the vehicle body. If there is a gap, loosen the washer-screws and self-tapping screws, hold the splash guard against the body, and retighten the screws.

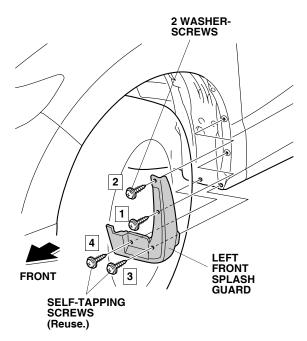

5. Turn the steering wheel fully clockwise, and repeat steps 2 through 4 to install the right front splash guard.

Installing the Rear Splash Guards


6. Remove the self-tapping screw from the rear bumper.

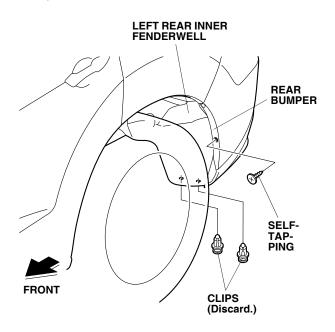

7. Remove and discard the two clips from the left rear inner fenderwell.

8. Install the left rear splash guard to the rear bumper with one long clip, one short clip and the self-tapping screw removed in step 6. Install in the order $1 \rightarrow 2 \rightarrow 3$.

NOTE: Make sure there is no gap between the left rear splash guard and the vehicle body. If there is a gap, loosen the self-tapping screw, hold the splash guard against the body, and retighten the screw.

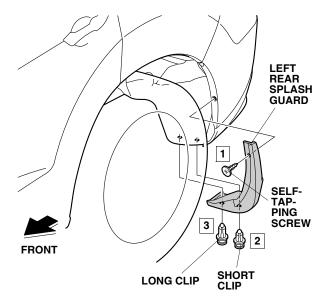

9. Repeat steps 6 through 8 to install the right rear splash guard.