



# INSTALLATION INSTRUCTIONS

Accessory  
**REAR SPLASH GUARDS**  
P/N 08P09-TX6-220A

Application  
**2018 ILX**

Publications No.  
**VERSION 1**  
Issue Date  
**SEP 2017**

## PARTS LIST


Left splash guard




Right splash guard




Left bracket

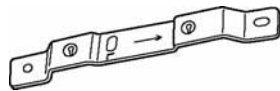

Right bracket

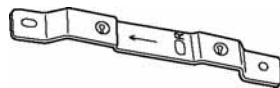


2 Self-tapping screws, 5 x 18 mm

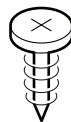

4 Self-tapping screws, 5 x 16 mm



2 Clips

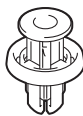

## TOOLS AND SUPPLIES REQUIRED

Stubby Phillips screwdriver

Pushpin


High-quality paste wax

## INSTALLATION

### NOTE:


- Be careful not to damage the paint finish.
- These instructions show the left splash guard being installed. The same procedure applies to installing the right splash guard.
- Clean and wax the areas to be covered with a high-quality paste wax.

1. Locate and remove the self-tapping screw from the rear bumper.

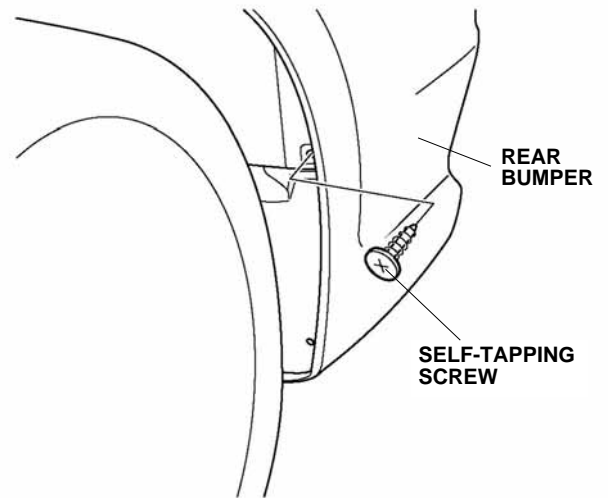


QD71501AT

2. Locate the recessed mark on the left rear fender cover. Using a pushpin, pierce the center of the recessed mark.

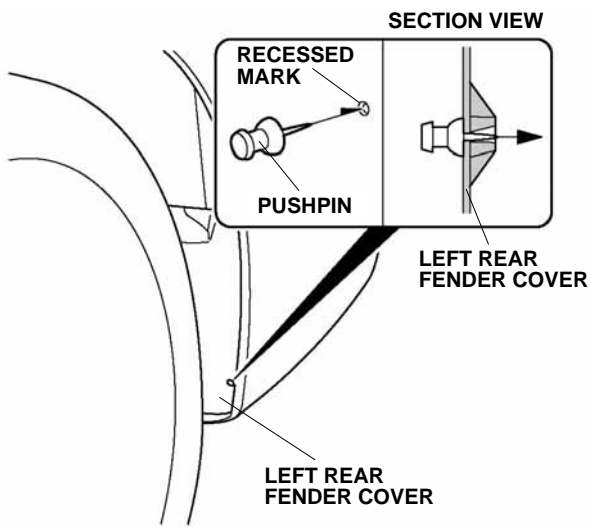

QD71502BT

3. Insert the top edge of the left bracket behind the left rear inner fender, and reinstall the self-tapping screw.

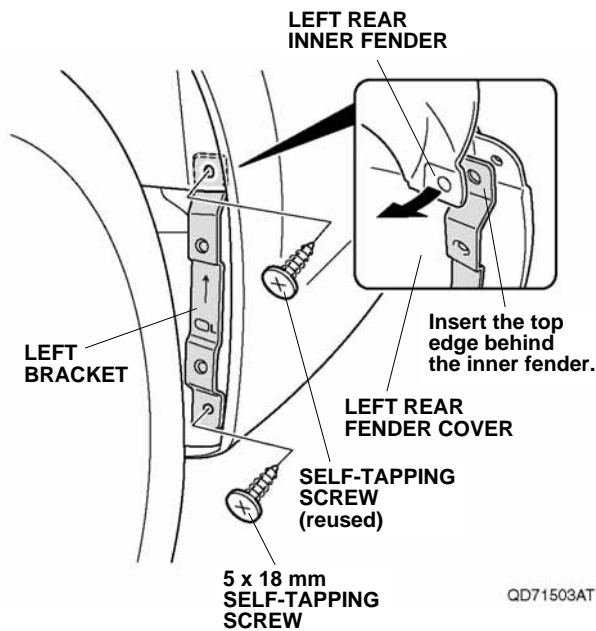


QD71503AT

4. Install the 5 x 18 mm self-tapping screw.


5. Install the left splash guard onto the rear bumper with two 5 x 16 mm self-tapping screws, and tighten them in the order shown.

NOTE: Make sure there is no gap between the left splash guard and the bumper. If there is a gap, loosen the self-tapping screws, hold the splash guard against the bumper and retighten the screws.

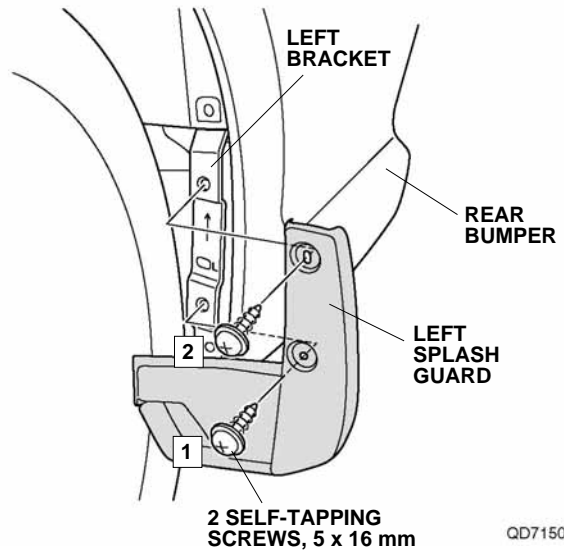

QD71504BT

6. Secure the left splash guard to the rear inner under cover with one clip.

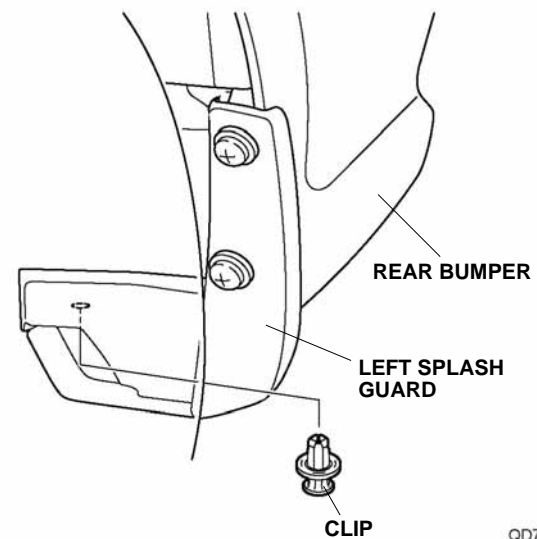

QD71505AT

7. Repeat steps 1 through 6 to install the right splash guard on the right side of the vehicle.