



INSTALLATION INSTRUCTIONS

Accessory

FRONT LOWER TRIM
P/N 08P46-TJB-200A

Application

2020 RDX

Publications No.

VERSION 1

Issue Date

APR 2019

PARTS LIST

Front lower trim



TOOLS AND SUPPLIES REQUIRED

Shop towel

Phillips screwdriver

Ratchet

10 mm Socket

Masking tape


Blanket

10 mm Open end wrench

The following tools are available through the Acura Tool and Equipment Program. On the iN, click on Service > Service Bay > Tool and Equipment Program, then enter the number under "Search." Or, call 888-424-6857.

- Trim Tool Set (T/N SOJATP2014)
- Plastic Trim Tool (T/N SILTRIMTL10)

Illustration of the Front Lower Trim on the Vehicle

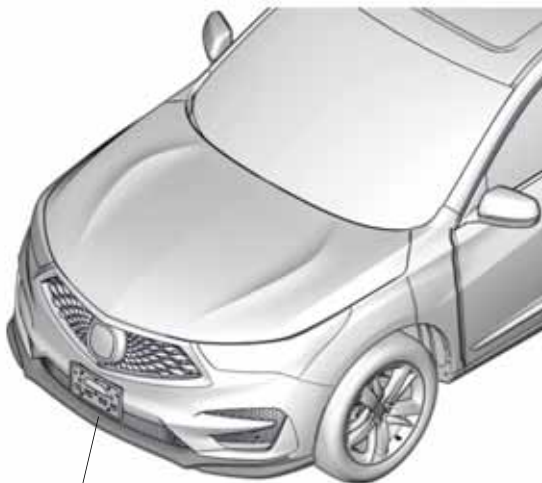

FRONT LOWER TRIM

QG92001AA



INSTALLATION

Client Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."

NOTE: Be careful not to damage the paint finish.


1. Disconnect the negative cable from the battery.
2. Wrap a shop towel around the hood latch.

HOOD LATCH
(Wrap with
a shop towel.)

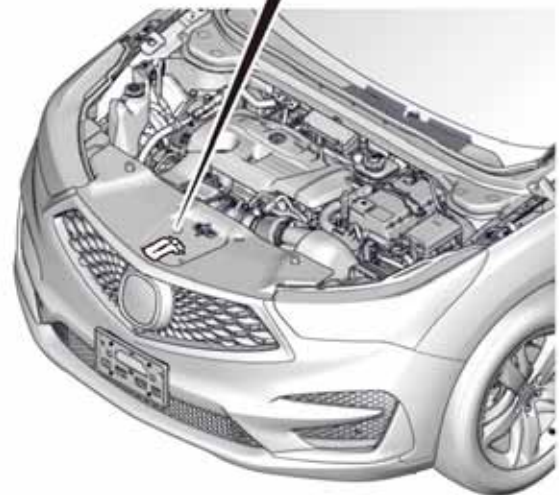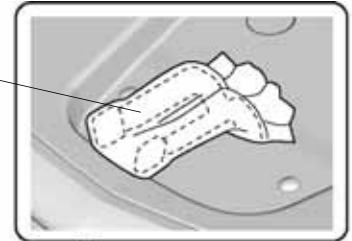


QG92002AA


- Remove the front bulkhead cover.

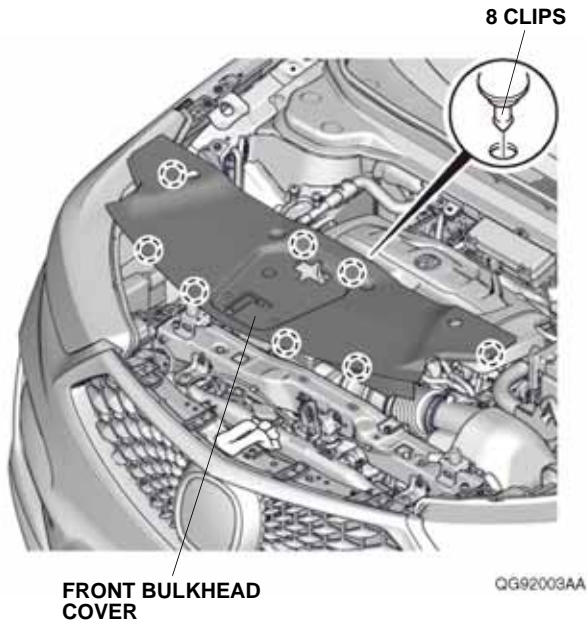


- Remove the front bumper:
 - Apply masking tape as shown.

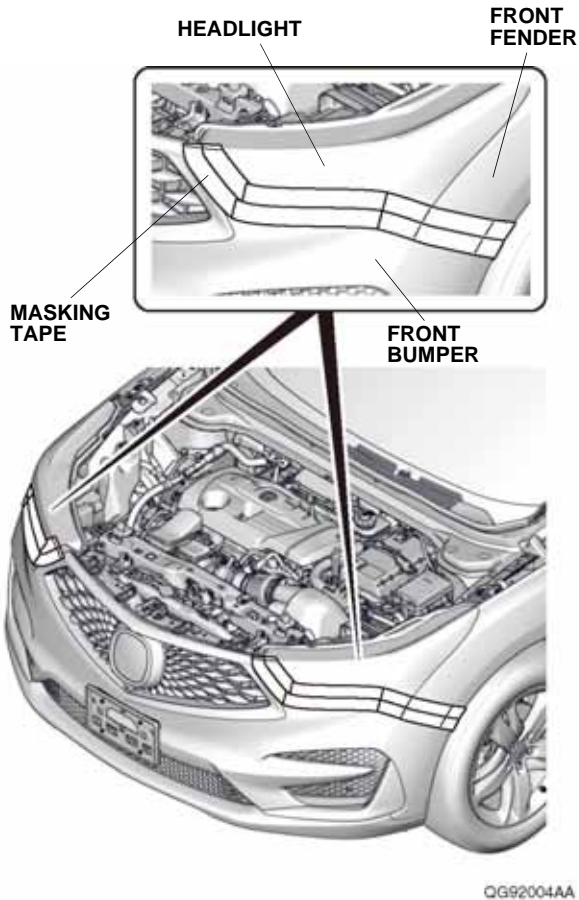


- Remove the two self-tapping screws (long), two self-tapping screws, six clips (long), six clips, four clips (short), five bolts (short), and two bolts as shown.

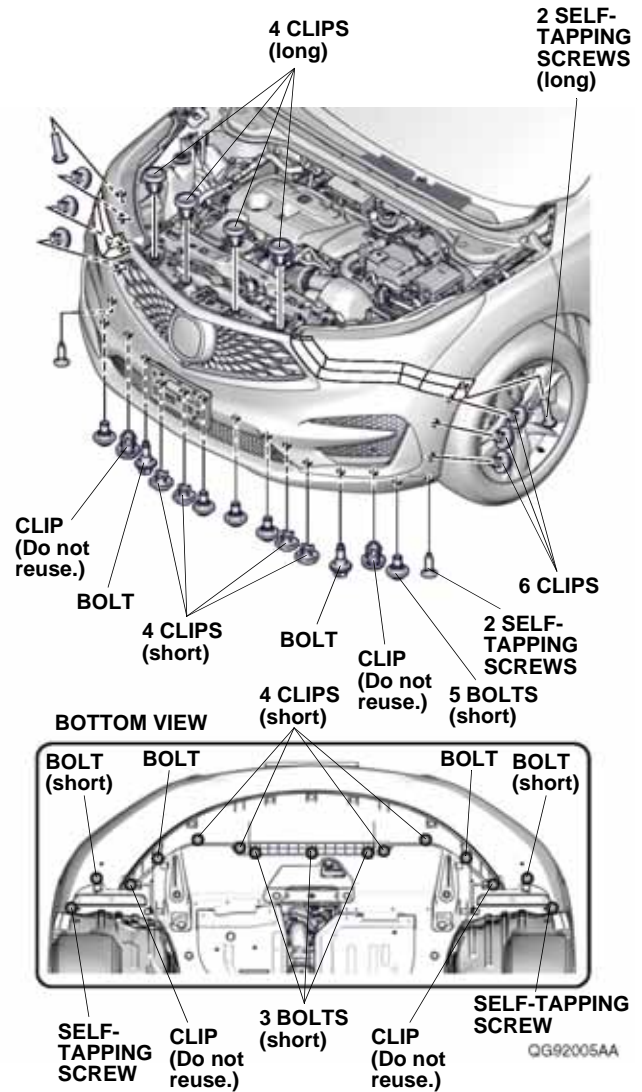


- With the help of an assistant, release the six retaining tabs on each side.

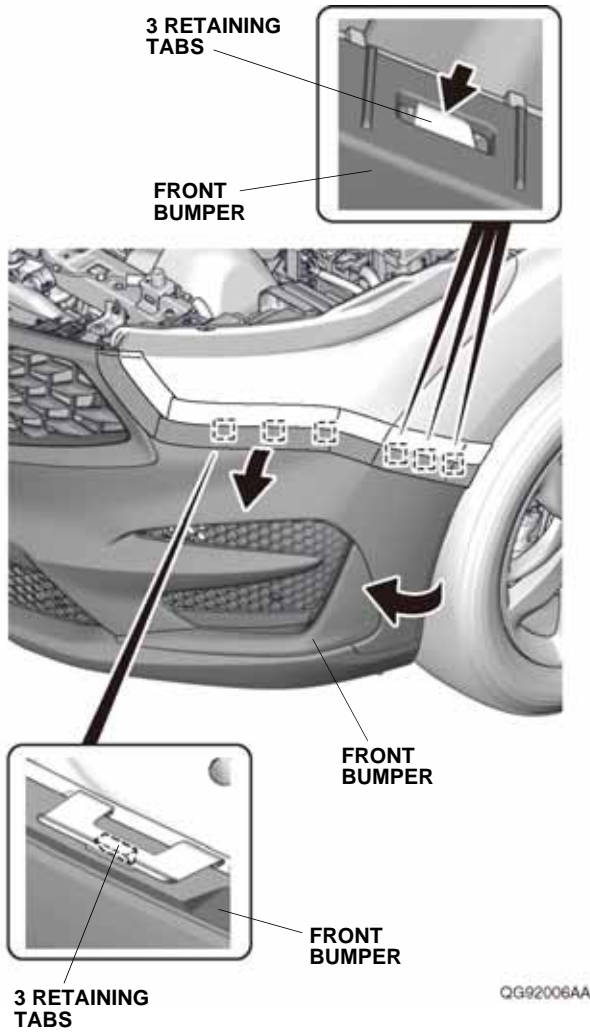

- With the help of an assistant, remove the front bumper, and unplug the vehicle connectors (if equipped).
- Place the front bumper on a blanket.

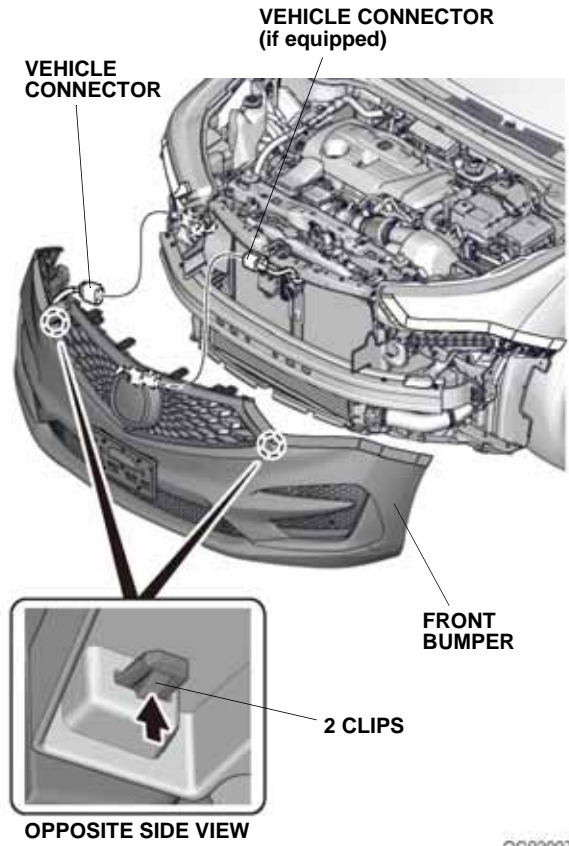


5. Remove the self-tapping screw, clip, and bolt from the front bumper.

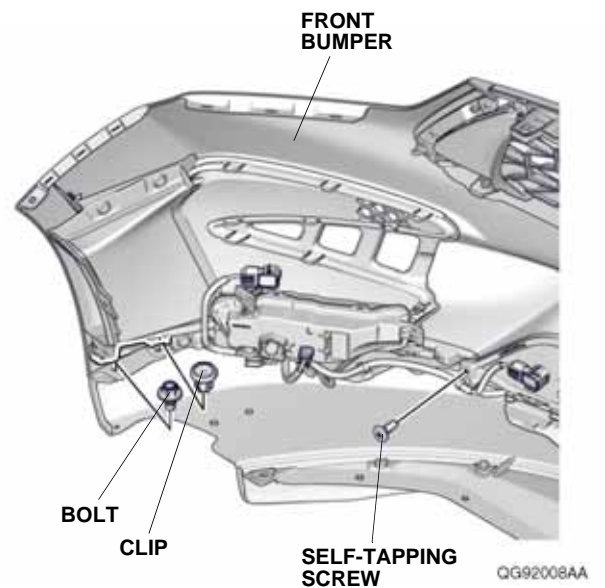

If the vehicle is equipped with fog lights, continue with step 6; otherwise, go to step 7.

With fog lights


6. Unplug the vehicle connector, and release the vehicle harness from the front bumper as shown. Remove the left fog light from the left fog light cover.

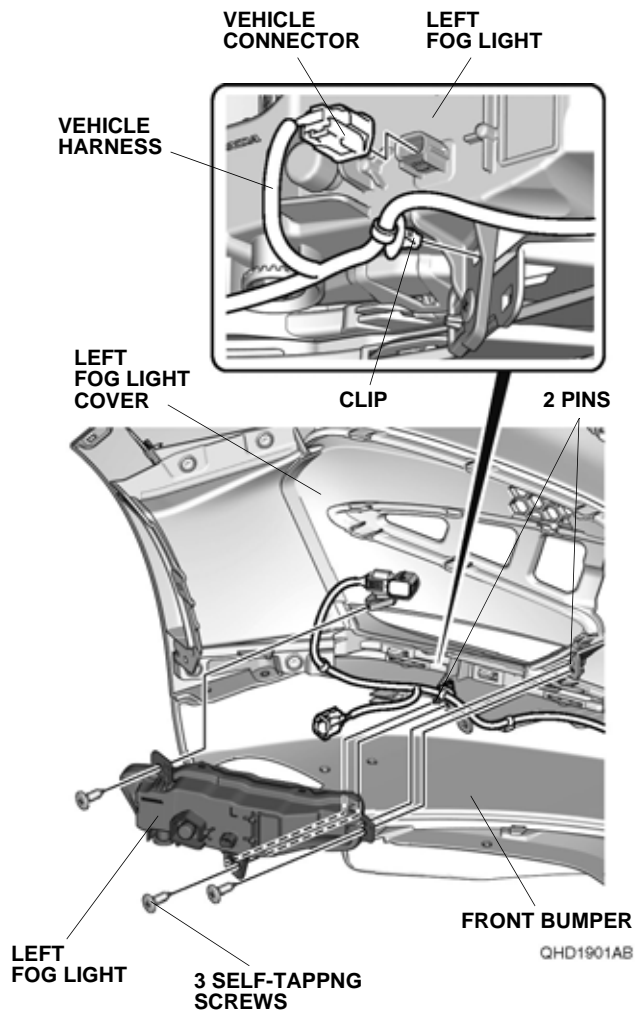


If the vehicle is equipped with parking sensors, continue with step 7; otherwise, go to step 8.

With parking sensors


7. Unplug the vehicle connector, and release the vehicle harness from the front bumper as shown.

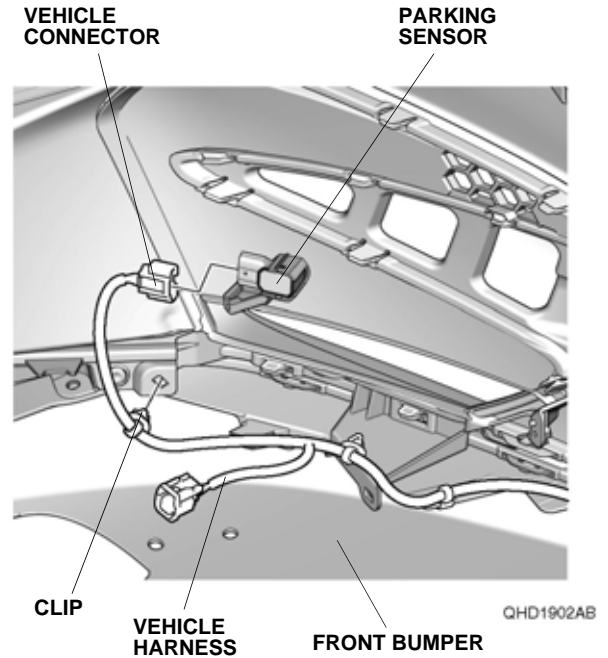

8. Remove the left fog light cover from the front bumper.

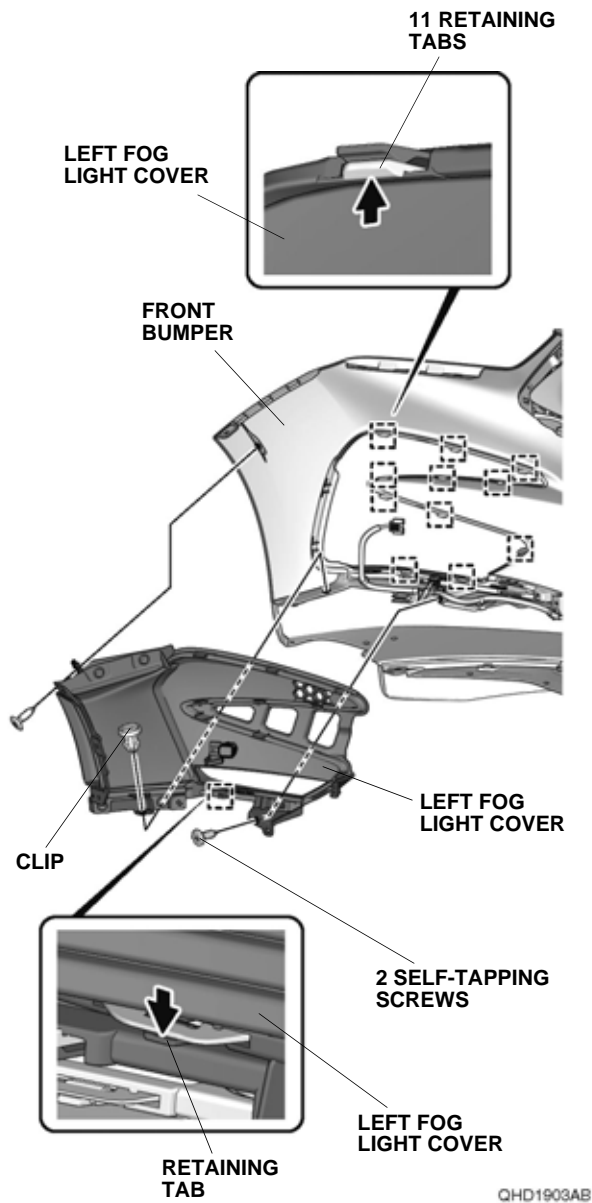


9. Remove the self-tapping screw. Then, remove the left trim from the front bumper by releasing the retaining tabs in the order as shown.

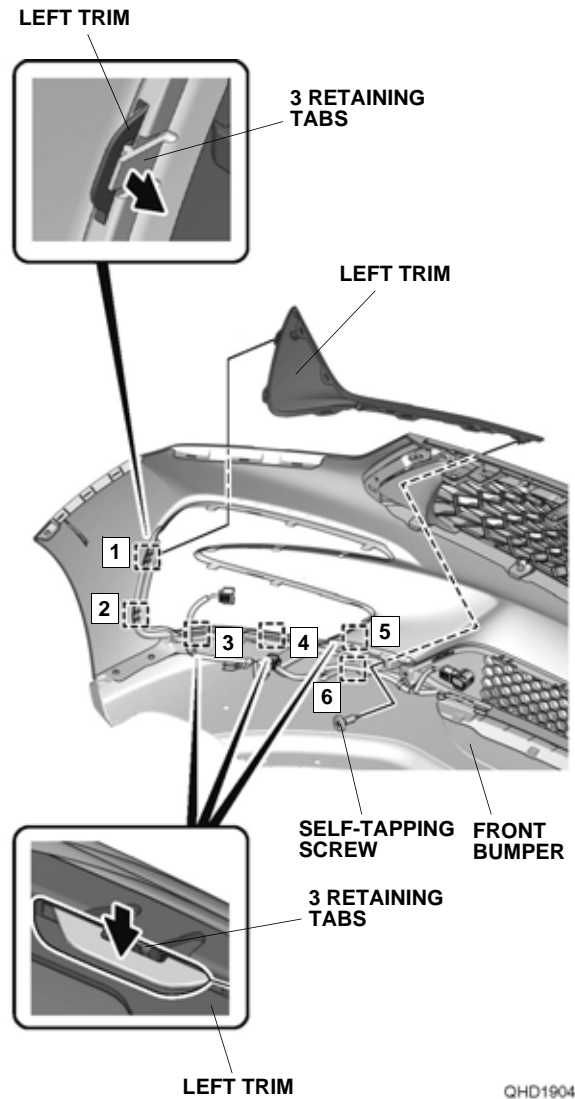


10. Repeat steps 5 through 9 on the right side of the front bumper.


11. Remove the front lower bumper from the front upper bumper.

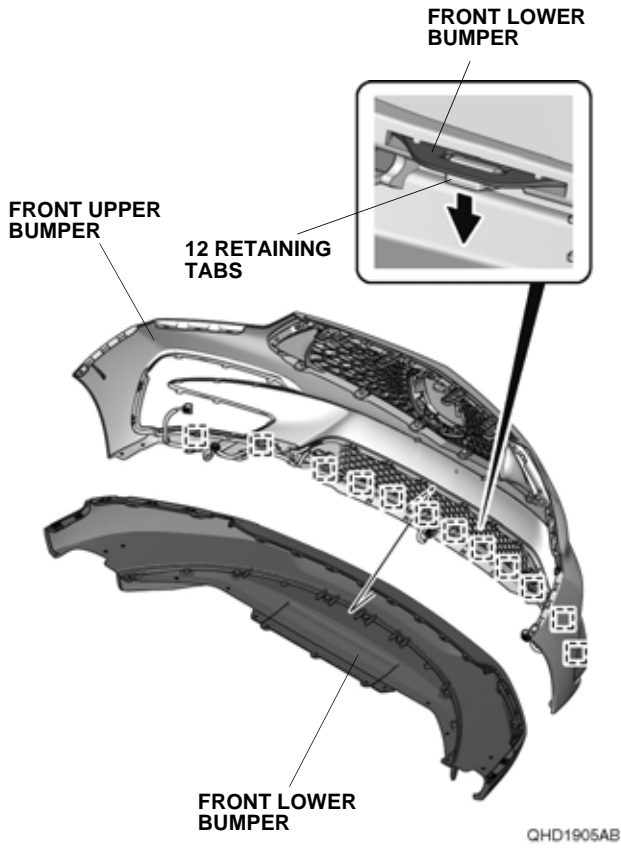


12. Remove the two spring nuts from the front lower bumper.

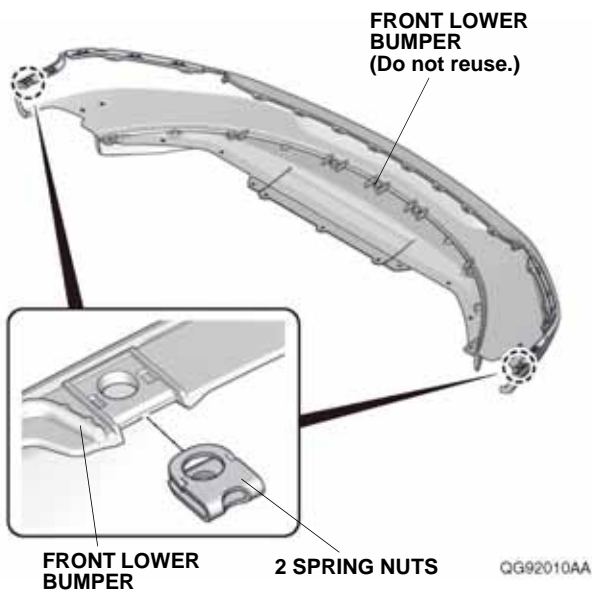


13. Install the two spring nuts to the front lower trim. NOTE: Make sure to install the spring nuts in the correct position and orientation.

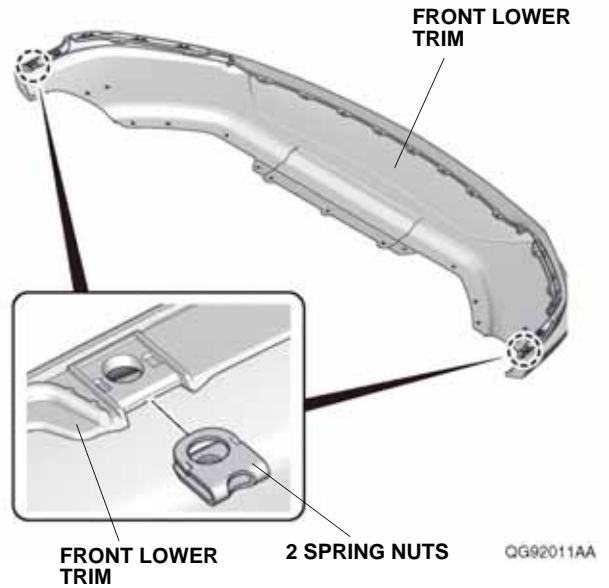

14. Install the front lower trim to the front upper bumper.

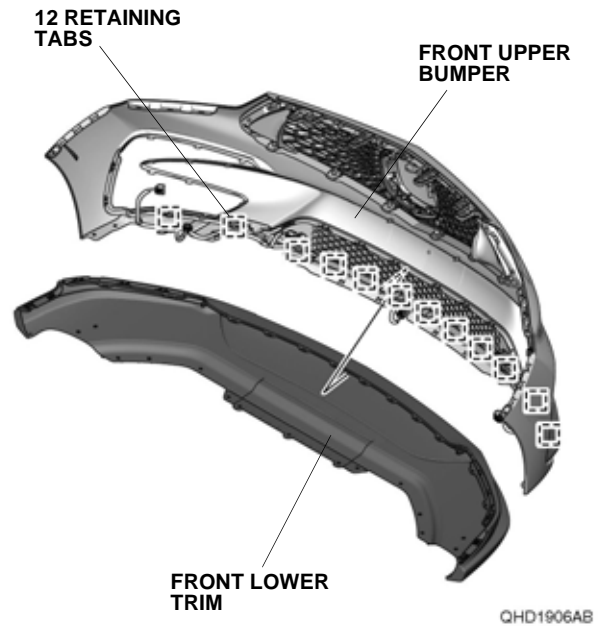

15. Secure the front lower trim to the front upper bumper as shown. Repeat for the other side.

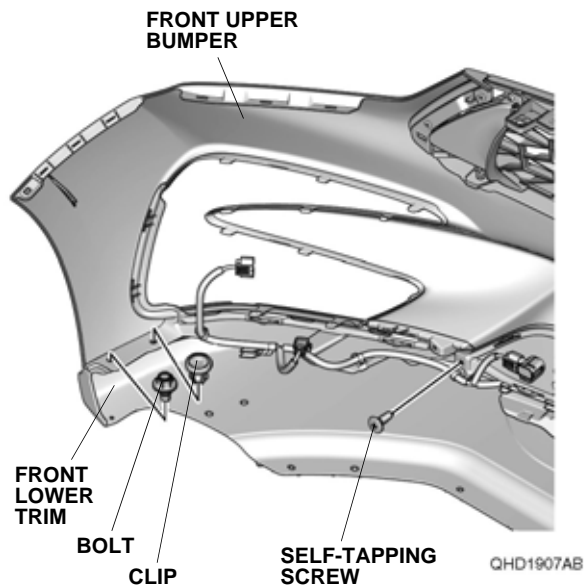

16. Install all removed front bumper components.
17. With the help of an assistant, install the front bumper.
18. Check that all wire harnesses are routed properly and all connectors are plugged in.
19. Install all remaining removed parts.
20. Connect the negative cable to the battery.
21. Press and hold the audio unit power button for 2 seconds to restore the audio and navi (if equipped) system functions.
22. Set the clock on vehicles without navigation.
23. If necessary, restore the systems back to normal operation as described in the service information.