




INSTALLATION INSTRUCTIONS

Accessory
INTERIOR PANELS

Application
2021 TLX

Publications No.
VERSION 1
Issue Date
SEP 2020

GENERAL VIEW

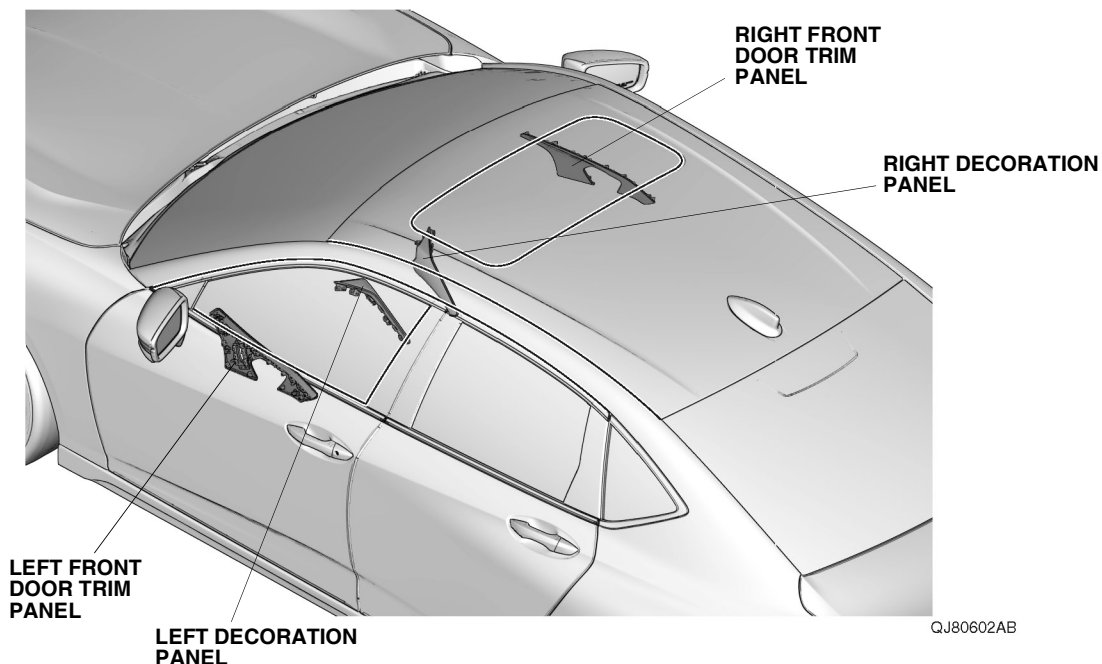

FOR YOUR SAFETY (Read carefully.)

Warning Symbols

Safety: Your safety, and the safety of others, is important. To help you make informed decisions about service procedures, we have provided safety messages where appropriate. Of course, it is not practical or possible to warn you about all the hazards associated with servicing a vehicle - you must use your own good judgment.

You will find important safety messages preceded by one of following symbols:

*All symbols are not used in all installation instructions.

⚠ DANGER

You will be killed or seriously hurt if you do not follow the instructions.

⚠ WARNING

You can be killed or seriously hurt if you do not follow the instructions.

⚠ CAUTION

You can be hurt if you do not follow the instructions.

NOTICE

Gives advice to prevent damage to the product or vehicle
Gives helpful information or instructions to be followed when using the product




Indicates a prohibited action


Procedure and Location Icons

These icons indicate the work location and the worker's point of view.

*All icons are not used in all installation instructions.



The location on the vehicle.



The location in the vehicle.
(instrument panel.)



Wear eye protection.



Wear heavy gloves.



Use an assistant.



Place the part on a blanket.



Work perpendicular.



Remove any burrs.



Use touch-up paint and allow to dry.



Tighten to the specified torque.



Apply firm pressure while rolling, especially at the ends, to set the adhesive.



Press firmly.




Clean with isopropyl alcohol.




Return the original part to the customer.
(Do not use.)


Wire Harness Routing Precautions

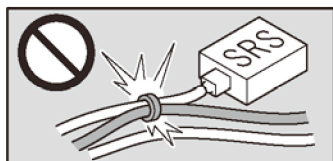


Do not secure the accessory harness and SRS harness together. (except for instruction cases).

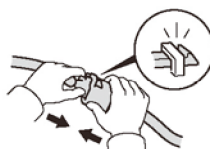


Push the connectors and terminals together until they lock.

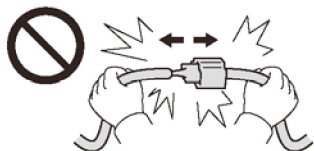


Do not pull the harness to unplug the connectors.



Install removed connectors in their original location.

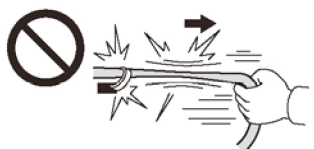


Do not pull the harness.



Secure the accessory harness as shown.



Do not pinch the harness.

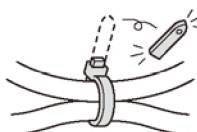

Cut off the excess wire tie.

Safety: General

- Observe all safety notes and precautions described in the service information, in addition to those described in this Installation Instruction. Be extremely careful for your safety and safety of others.
- Be careful not to damage the vehicle or the parts.
- Be extremely careful when handling retaining tabs and clips.
- Note the locations of the parts before removing them so they can be properly installed in their original positions.
- The illustrations may differ slightly from the actual accessory.

Safety: Electric Parts


- Always disconnect the negative cable from the battery before beginning work.

Safety: Accessory

- Always use the parts and tools specified in the installation instructions.

PARTS LIST

Interior Panels Kit
(P/N 08Z03-TGV-200)
(P/N 08Z03-TGV-200A)

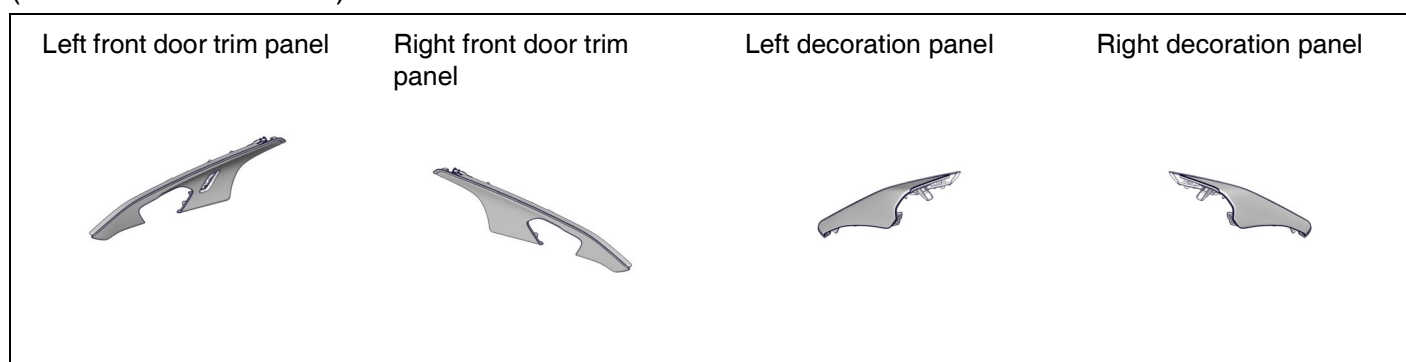

REQUIRED TOOLS AND SUPPLIES


- | | | |
|----------------|------------------------|-------------------------|
| • Masking tape | • Phillips screwdriver | • 10 mm Open end wrench |
| • Ratchet | • T25 TORX bit | |

The following tools are available through the Acura Tool and Equipment Program:

- | | |
|----------------------------------|---------------------------------------|
| • Trim Tool Set (T/N SOJATP2014) | • Plastic Trim Tool (T/N SILTRIMTL10) |
|----------------------------------|---------------------------------------|

INSTALLATION

1. Remove the trunk floor board.

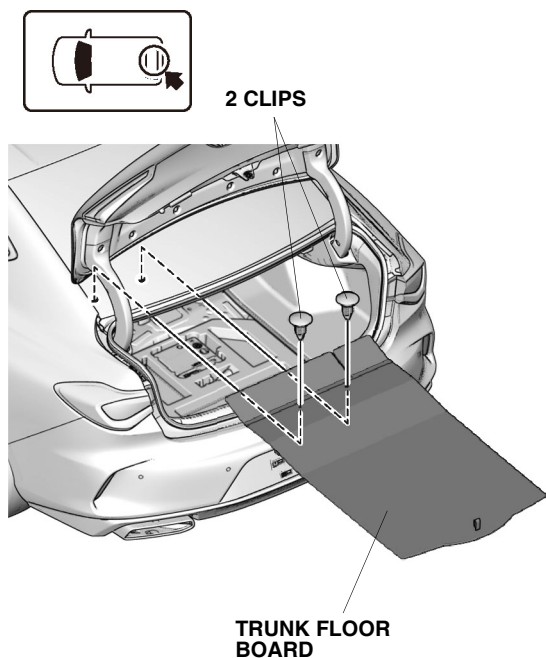

QJ72501AA

2. Choose one of these options.


- With spare tire

Go to step 3

- Without spare tire


Go to step 5

3. Remove the tool box and spare tire.

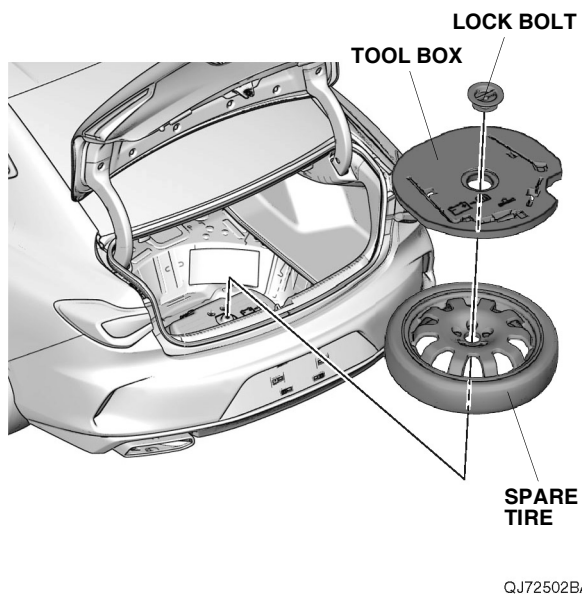

QJ72502BA


4. Remove the battery cover.

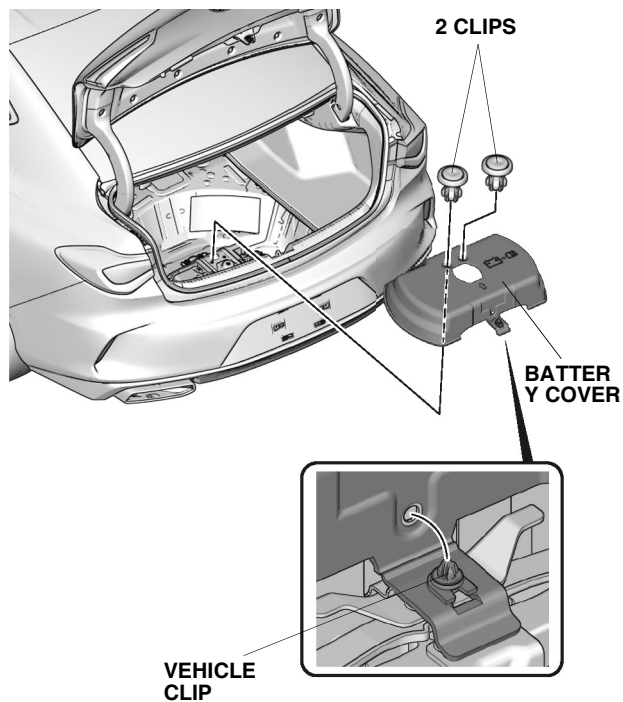

QK72102AA




Go to step 6

5. Remove the tool box.

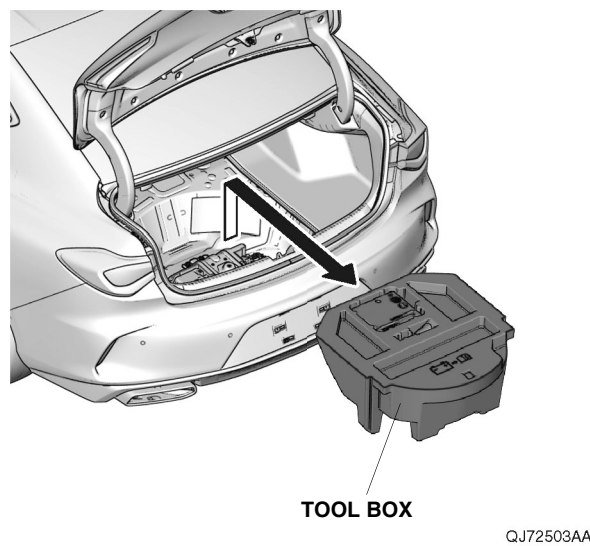


QJ72503AA

6. Disconnect the negative cable from the battery.

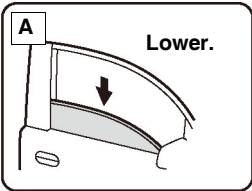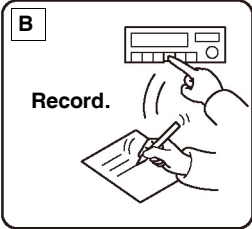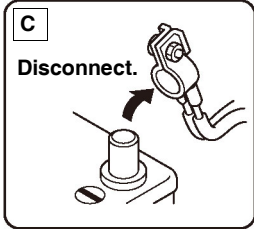

QCD0502BM

7. Attach masking tape to protect the vehicle.

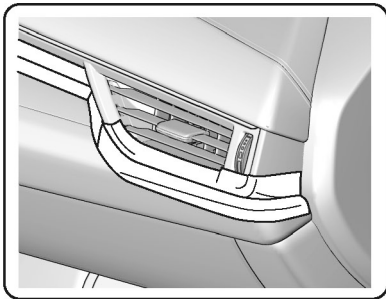

INSTRUMENT
PANEL

PASSENGER'S
OUTLET

MASKING
TAPE


PASSENGER'S
PANEL

A/C CONTROL
UNIT

CENTER
PANEL

QJ72505AA

8. Remove the passenger's panel.

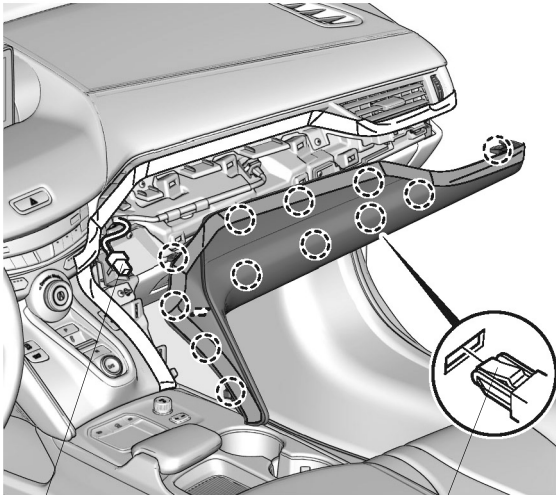


VEHICLE
CONNECTOR

12 CLIPS


QJ72506AA

9. Attach masking tape to protect the vehicle.



METER
VISOR

A/C CONTROL
UNIT

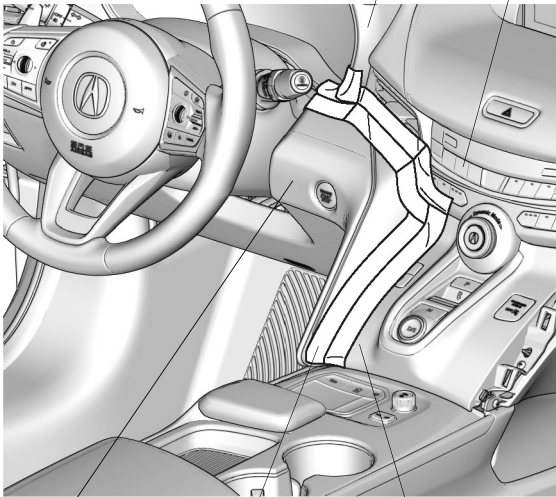


DRIVER'S
PANEL

MASKING
TAPE



CENTER
PANEL

QJ72507AA


10. Remove the driver's panel.

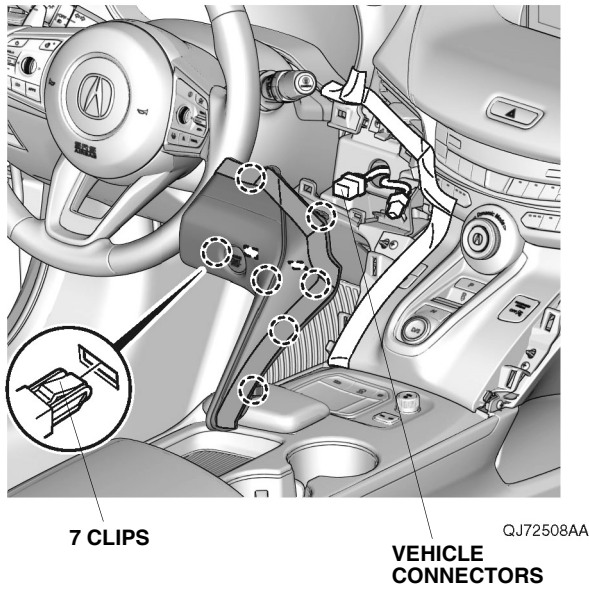


11. Remove the left front door inner handle cap.

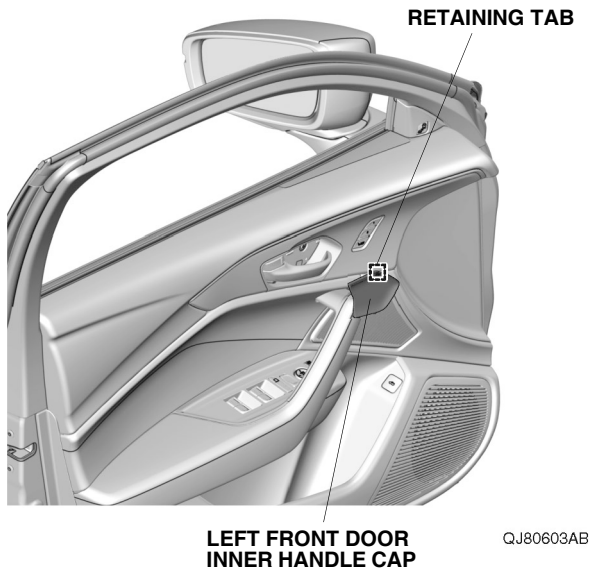


12. Remove the self-tapping screws and TORX screw.

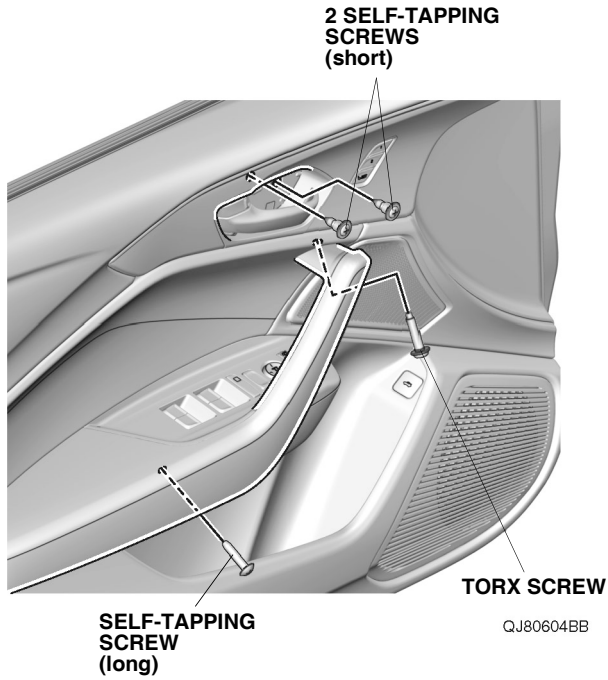

13. Remove the left front door panel.

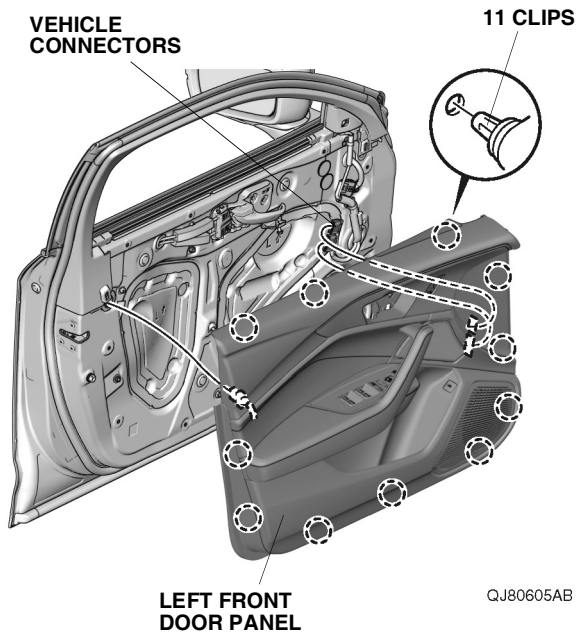


14. Repeat same procedures for the other side.

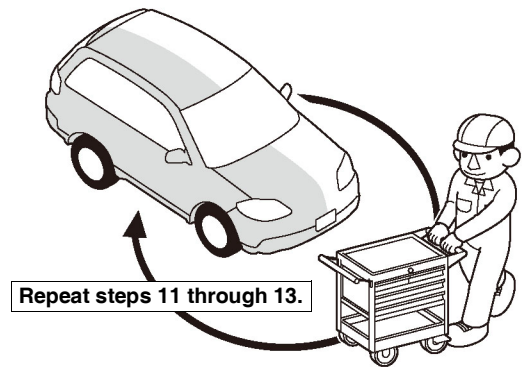


Q9D1014AM

15. Remove the right decoration panel.

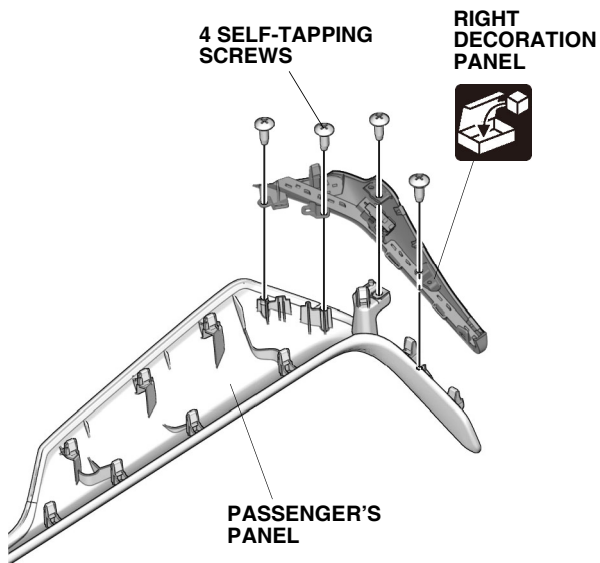


QJ80701BB

16. Install the new right decoration panel.

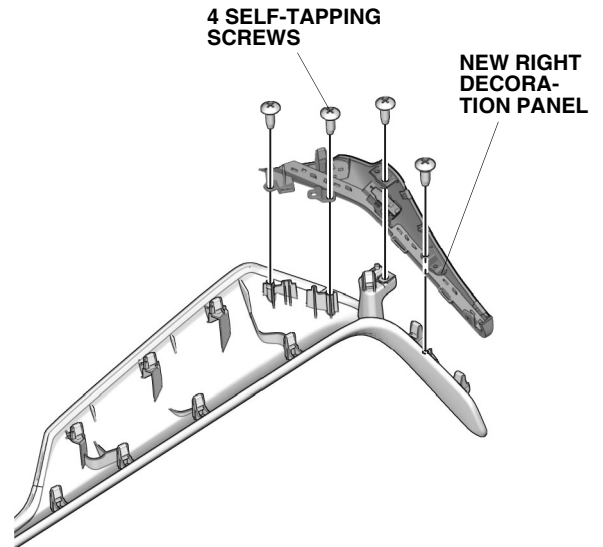


QJ80701BB

17. Remove the left decoration panel.

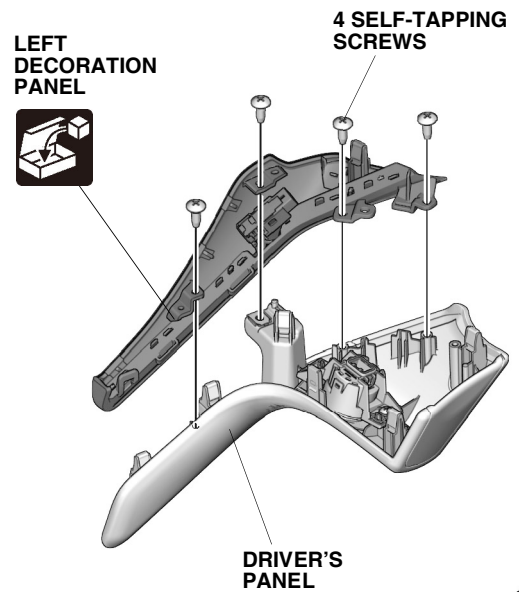


QJ80703AB

18. Install the new left decoration panel.

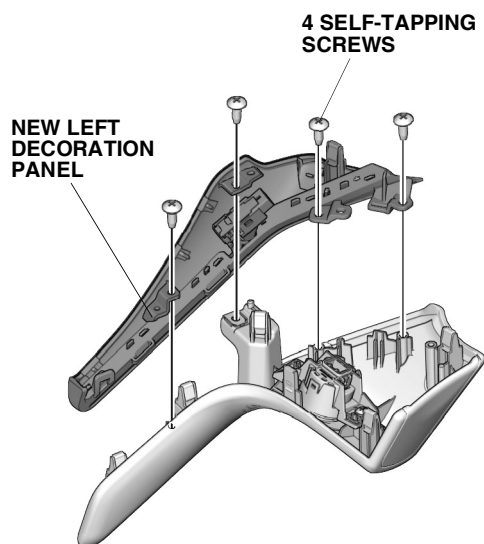



QJ80703AB

19. Remove the vehicle unit.

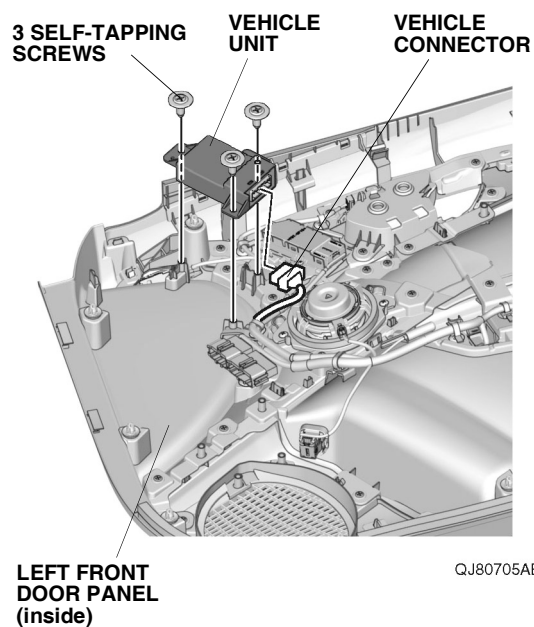

QJ80705AB


20. Unplug the vehicle connectors.

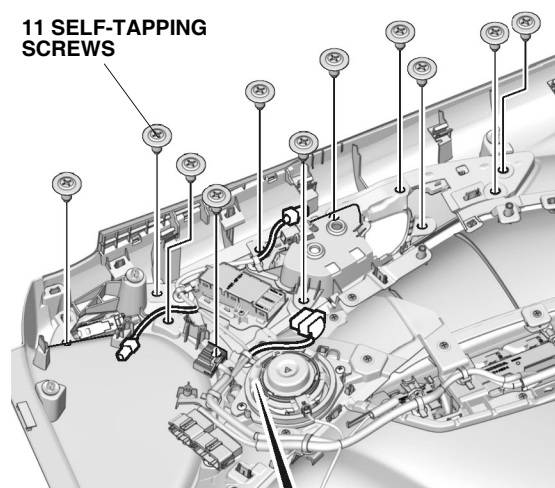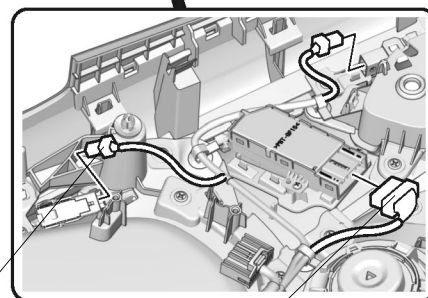

QJ80706AB


21. Remove the self-tapping screws.

22. Attach masking tape to protect the left front door panel.

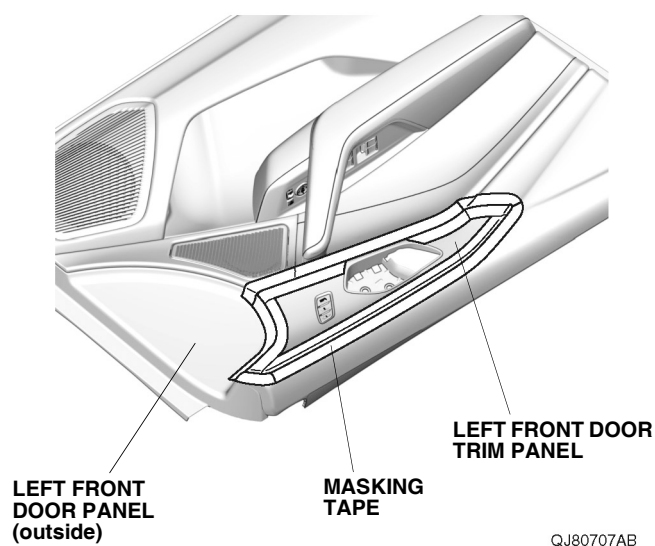


QJ80707AB

23. Remove the left front door trim panel.

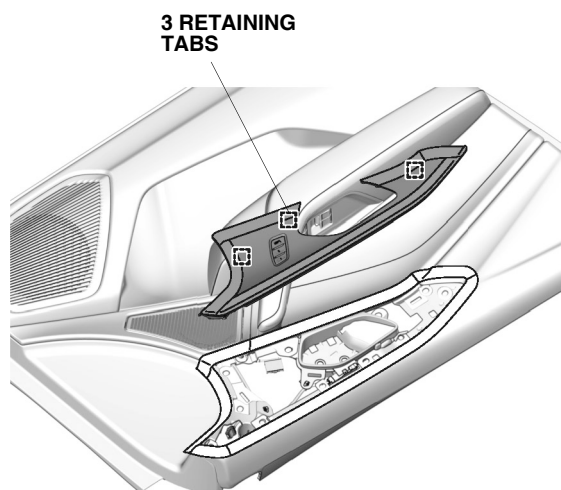


QJ80708AB

24. Repeat same procedures for the other side.

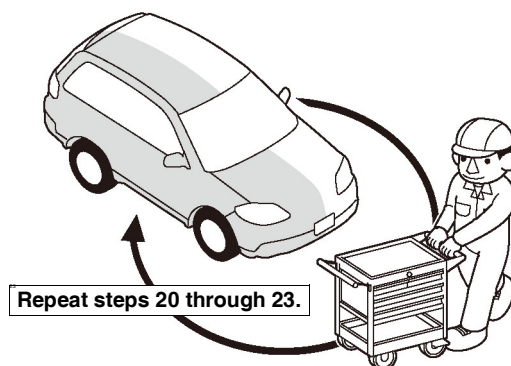

Q9D1014AM


25. Remove the switch.

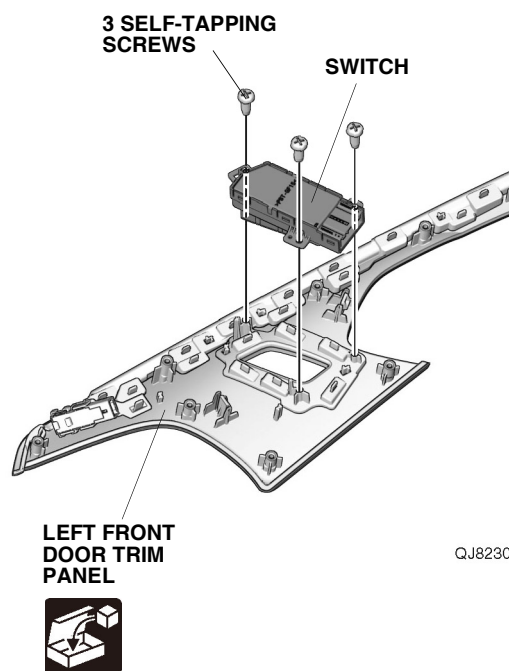


QJ82302AB




26. Install the switch.

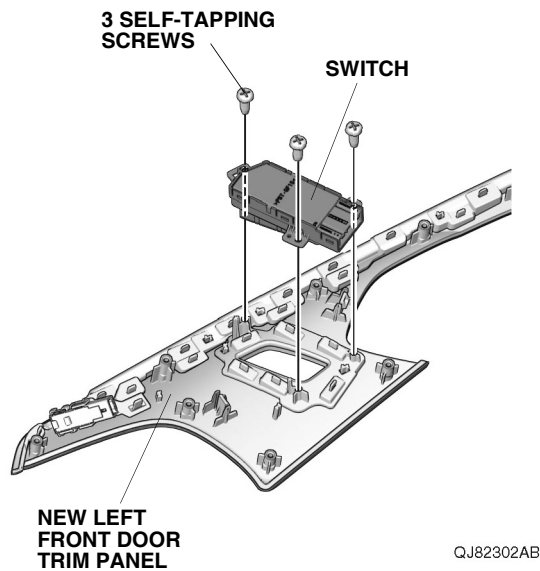


27. Install the new left front door trim panel.

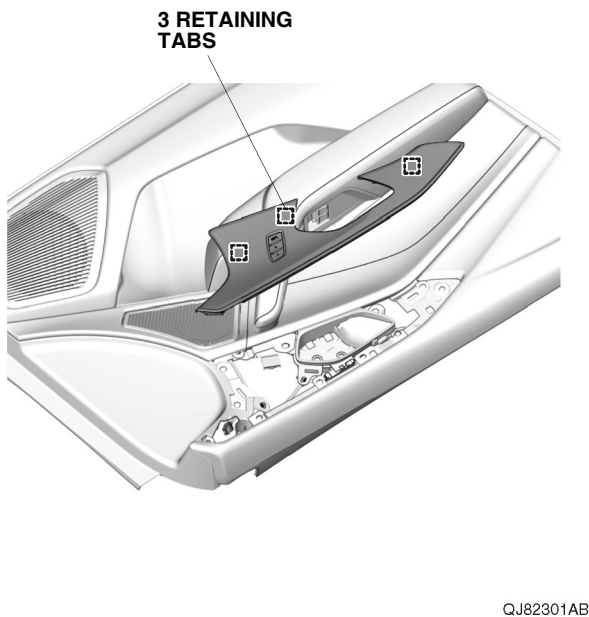

28. Secure the new left front door trim panel.

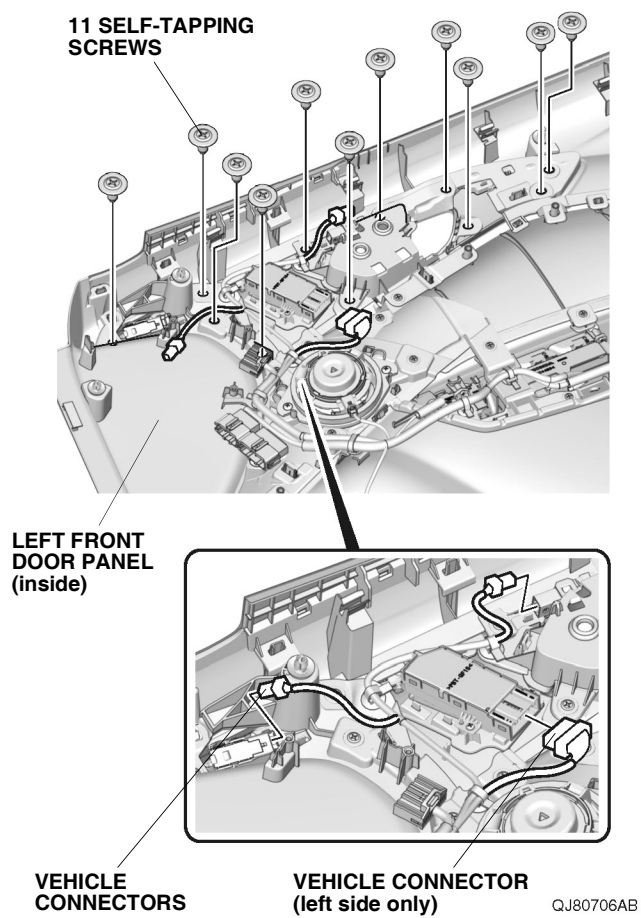

29. Plug in the vehicle connectors.
30. Repeat same procedures for the other side.

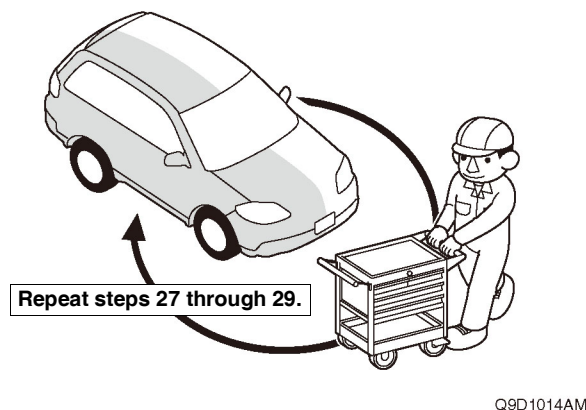


31. Check that all parts are installed and properly routed.

NOTE

- Check that all harnesses are not pulled and not pinched.
- Make sure all clamps and wire ties are securely installed.

32. Install all removed parts except for the battery cover (if equipped), spare tire (if equipped), tool box, and trunk floor board.

33. Connect the negative cable to the battery.

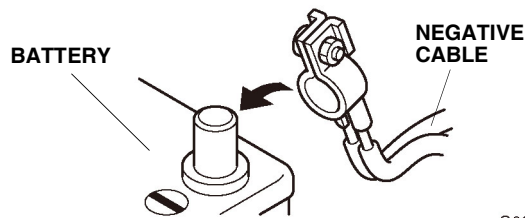

Q060702BM

34. Install the battery cover (if equipped), spare tire (if equipped), tool box, and trunk floor board.

35. Make sure all accessories and systems operate properly.

36. If necessary, restore the systems back to normal operation as described in the service information.

37. Press and hold the audio unit power button for 2 seconds to restore the audio and navi (if equipped) system functions.