




INSTALLATION INSTRUCTIONS

Accessory
LOWER TRIMS


Application
2022 MDX MODEL SERIES

Publications No.
VERSION 2
Issue Date
JUN 2022

GENERAL VIEW

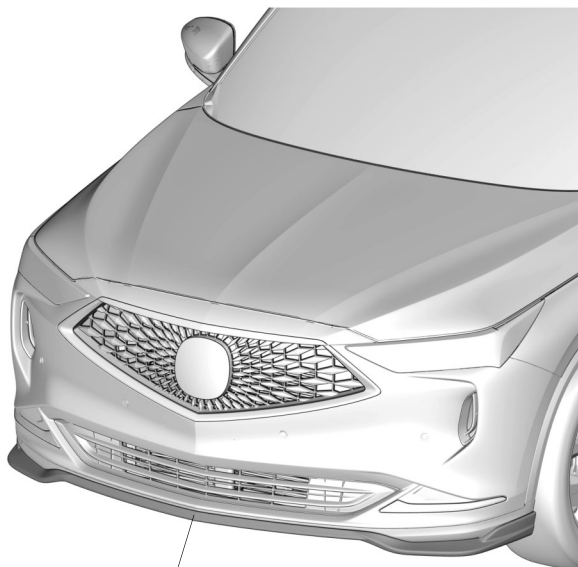

FRONT TRIM

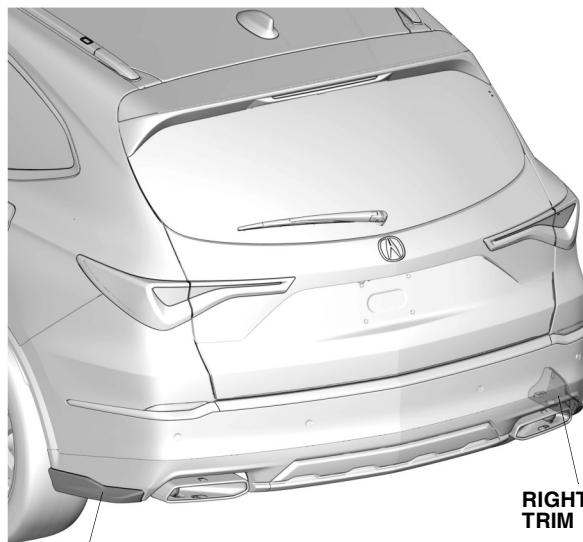

**LEFT REAR
TRIM**

**RIGHT REAR
TRIM**

QJD0801AT

FOR YOUR SAFETY (Read carefully.)

Warning Symbols

Safety: Your safety, and the safety of others, is important. To help you make informed decisions about service procedures, we have provided safety messages where appropriate. Of course, it is not practical or possible to warn you about all the hazards associated with servicing a vehicle - you must use your own good judgment.

You will find important safety messages preceded by one of following symbols:

*All symbols are not used in all installation instructions.

Introduction of Symbol Messages

- These symbols warn you about the possible hazards and explain how to avoid them. And give you some advices.

⚠ DANGER

You will be killed or seriously hurt if you do not follow the instructions.

⚠ WARNING

You can be killed or seriously hurt if you do not follow the instructions.

⚠ CAUTION

You can be hurt if you do not follow the instructions.

NOTICE

Gives advice to prevent damage to the product, vehicle, the environment or other property.

NOTE

Gives helpful information or instructions to be followed when installing this product.




Indicates a prohibited action.


Procedure and Location Icons

These icons indicate the work location and the worker's point of view.

*All icons are not used in all installation instructions.

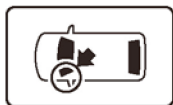

The location on the vehicle.

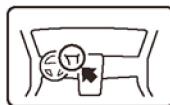

The location in the vehicle.
(instrument panel.)



Wear eye protection.



Wear heavy gloves.



Use an assistant.



Place the part on a blanket.



Work perpendicular.



Remove any burrs.



Use touch-up paint and allow to dry.



Tighten to the specified torque.



Apply firm pressure while rolling, especially at the ends, to set the adhesive.



Press firmly.




Clean with isopropyl alcohol.




Return the original part to the customer.
(Do not use.)


Wire Harness Routing Precautions

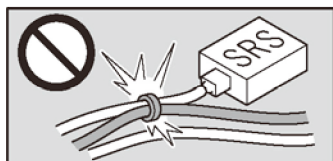


Do not secure the accessory harness and SRS harness together. (except for instruction cases).

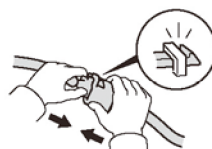


Push the connectors and terminals together until they lock.

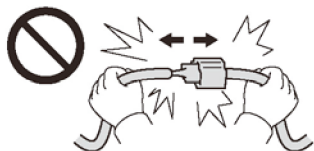


Do not pull the harness to unplug the connectors.

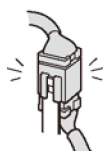

Install removed connectors in their original location.

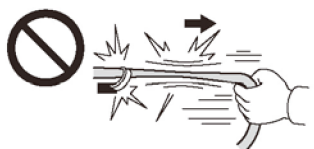


Do not pull the harness.

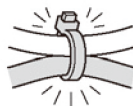

Secure the accessory harness as shown.



Do not pinch the harness.

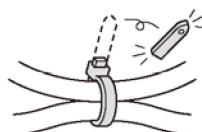

Cut off the excess wire tie.

Safety: General

- Observe all safety notes and precautions described in the service information, in addition to those described in this Installation Instruction. Be extremely careful for your safety and safety of others.
- Be careful not to damage the vehicle or the parts.
- Be extremely careful when handling retaining tabs and clips.
- Note the locations of the parts before removing them so they can be properly installed in their original positions.
- The illustrations may differ slightly from the actual accessory.

Safety: Electric Parts


- Always disconnect the negative cable from the battery before beginning work.

Safety: Accessory

- Always use the parts and tools specified in the installation instructions.

PARTS LIST

Lower Trims Kit (P/N 08F01-TYA-200)

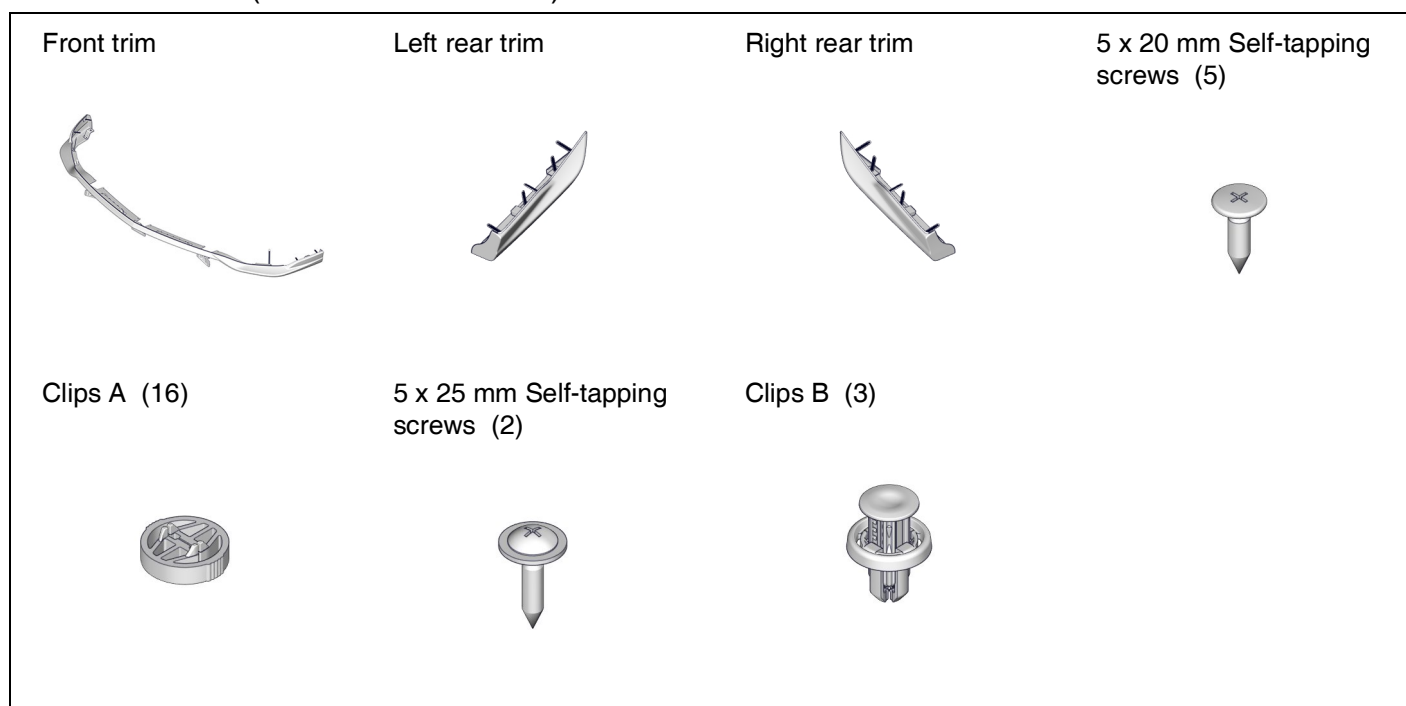

REQUIRED TOOLS AND SUPPLIES


- | | | |
|---|--|--------------------|
| • 10 mm Open end wrench | • Shop towel | • Ratchet |
| • 10 mm Socket | • Phillips screwdriver | • File |
| • Pushpin | • Masking tape | • Diagonal cutters |
| • Blanket | • Drill | • Ruler |
| • Eye protection
(face shield, safety goggles, etc.) | • 3 mm, 6 mm, 8 mm, 10 mm, and
12 mm Drill bits | |

The following tools are available through the Acura Tool and Equipment Program:

- | | |
|----------------------------------|---------------------------------------|
| • Trim Tool Set (T/N SOJATP2014) | • Plastic Trim Tool (T/N SILTRIMTL10) |
|----------------------------------|---------------------------------------|

INSTALLATION

1. Disconnect the negative cable from the battery.


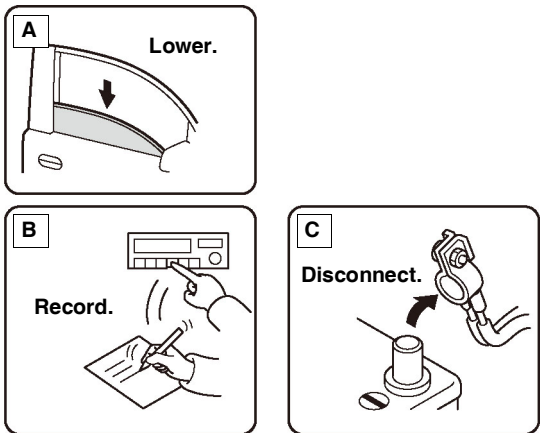


QCD0502BM

2. Wrap a shop towel.


NOTICE

Do not remove the shop towel until after the parts are installed.

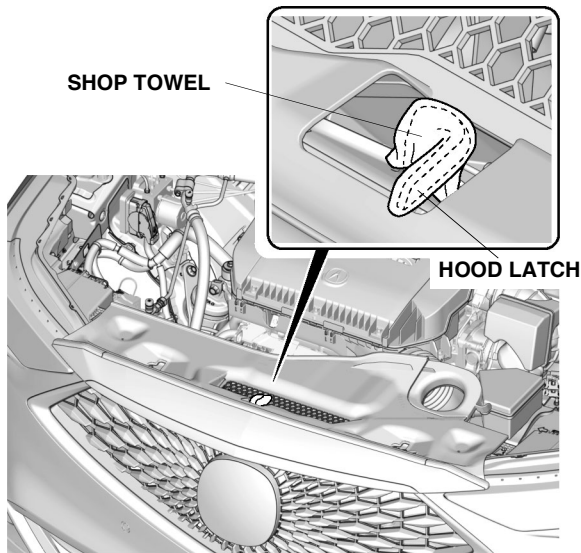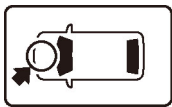



QJN0250AT

3. Remove the front bulkhead cover.

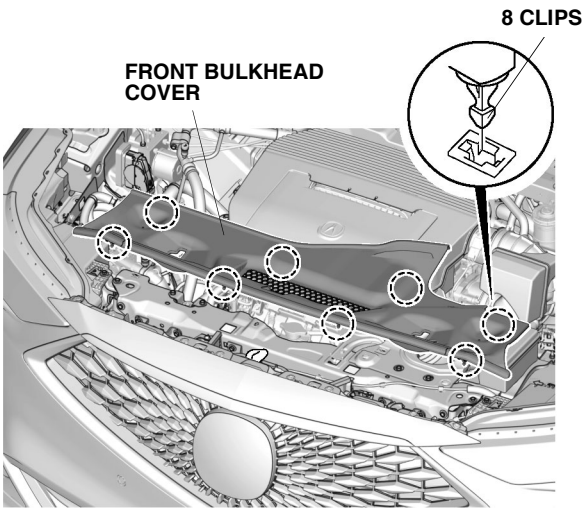

QJN0201AT



4. Release the left front wheel arch protector.

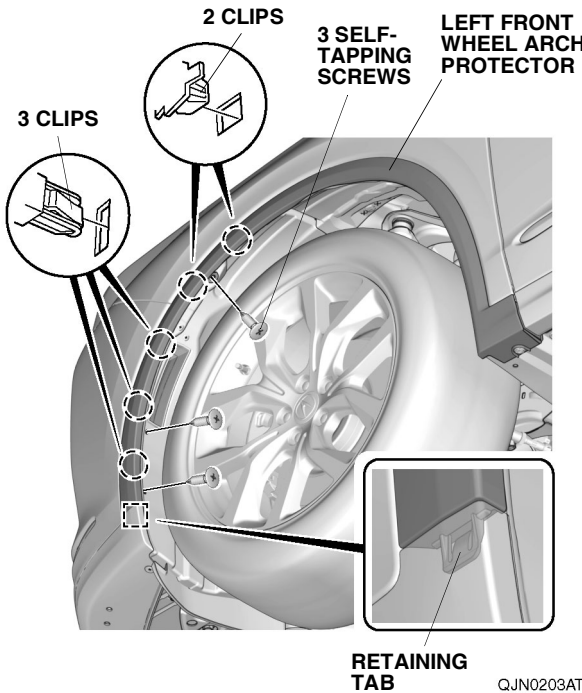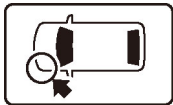

QJN0203AT

5. Repeat step 4 for the other side.

6. Remove the clips.

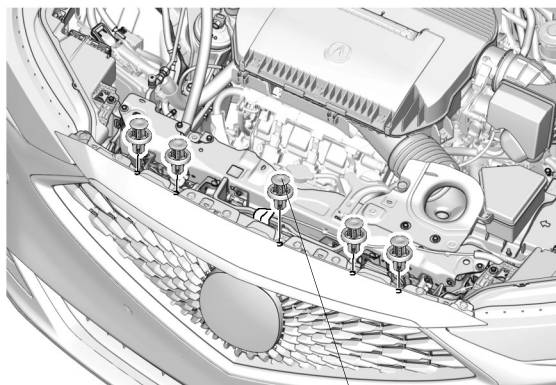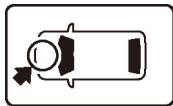


5 CLIPS

QJN0202AT


7. Attach the masking tape to protect the vehicle.

NOTICE

Do not remove the masking tape until after the parts are installed.

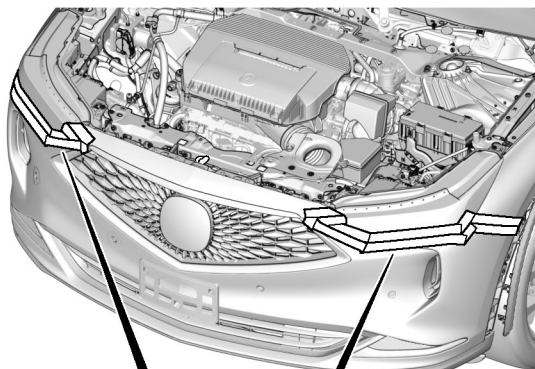

HEADLIGHT

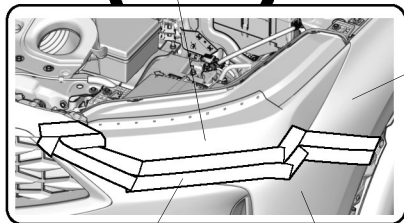


FRONT FENDER

MASKING TAPE

FRONT BUMPER

QJN0205AT

8. Remove the self-tapping screws, clips, and bolts.

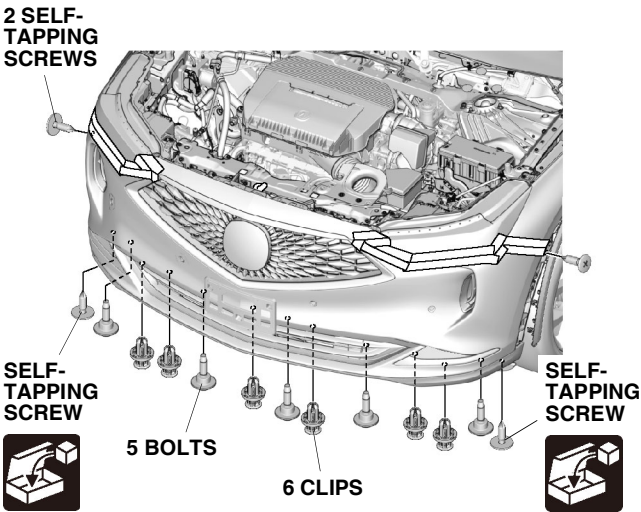


SELF-TAPPING SCREW

5 BOLTS

6 CLIPS

SELF-TAPPING SCREW

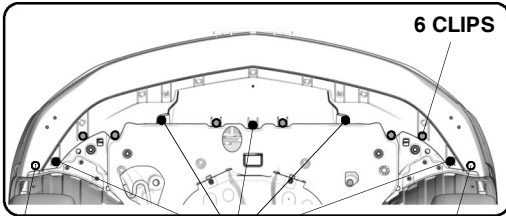

6 CLIPS

SELF-TAPPING SCREW

5 BOLTS


SELF-TAPPING SCREW

QJN0206AT

9. Release the retaining tabs.


NOTICE

- Release the retaining tabs in order from outside.
- Make sure to remove the retaining tabs in the correct orientation.

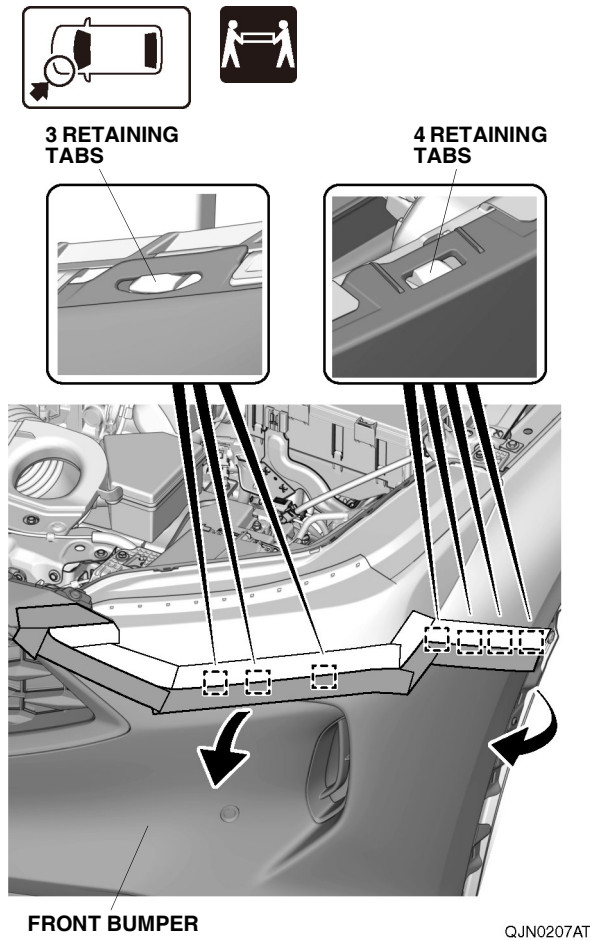

10. Repeat step 9 for the other side.

11. Remove the front bumper.

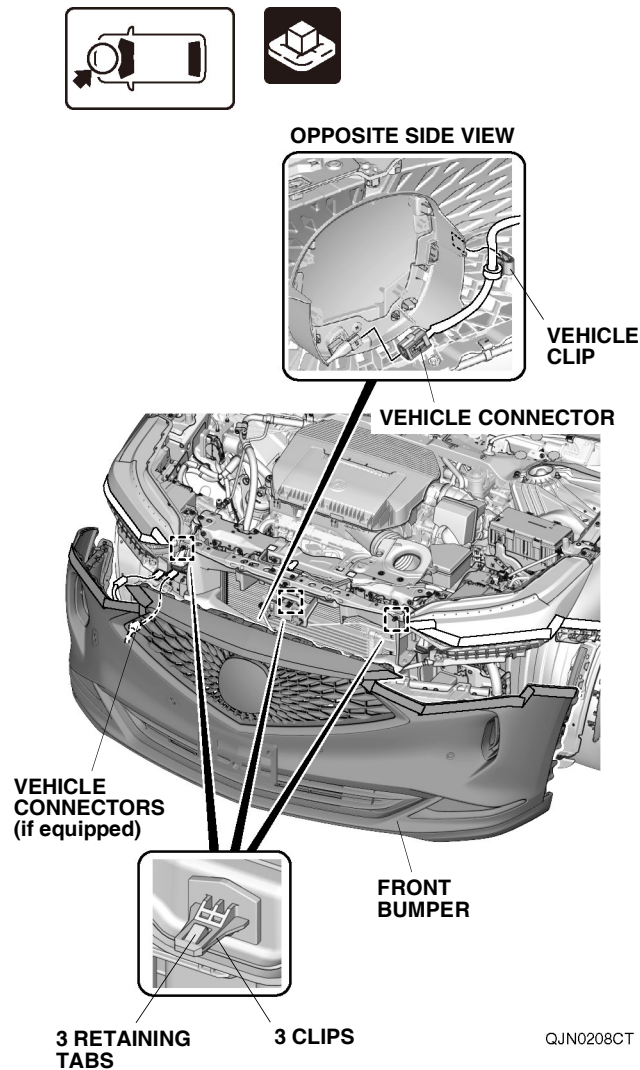

12. Choose one of these options.


- With fog lights

Go to step 13

- Without fog lights

Go to step 15

13. Remove the left fog light.

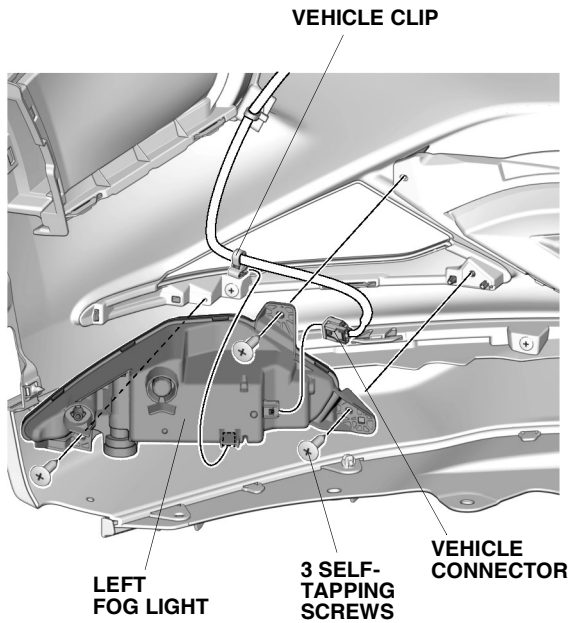


QJD0802AT

14. Repeat step 13 for the other side.

Go to step 17


15. Remove the left cover.

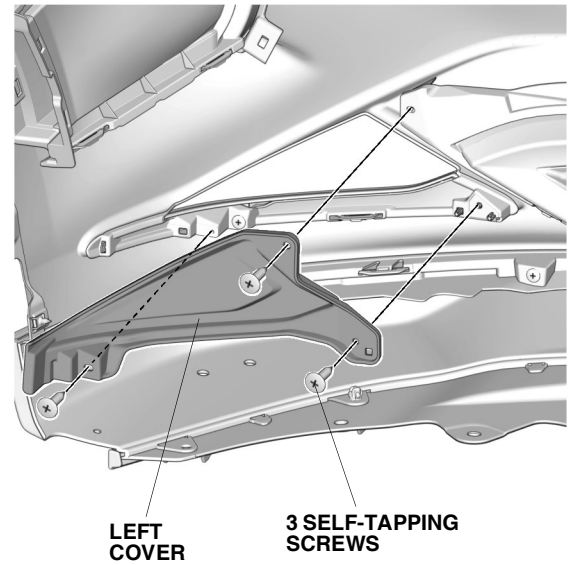

QJD0803AT


16. Repeat step 15 for the other side.

17. Remove the front bumper lower grille.

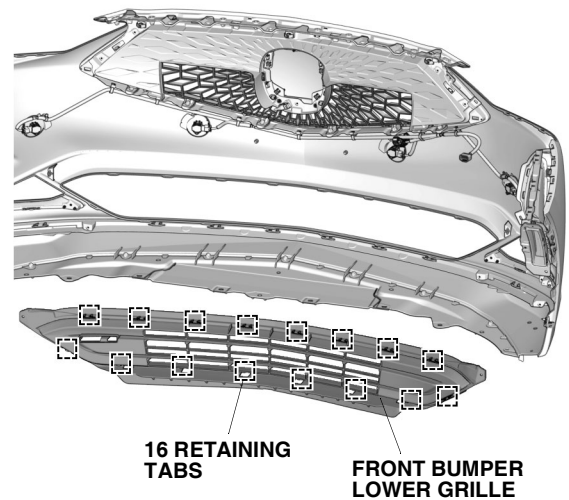


QJD0804AT

18. Remove the front bumper air spoiler.

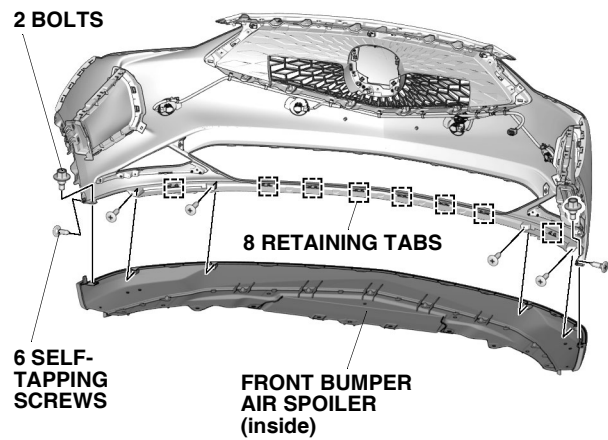


QJD0805BT


19. Pierce the front bumper air spoiler.

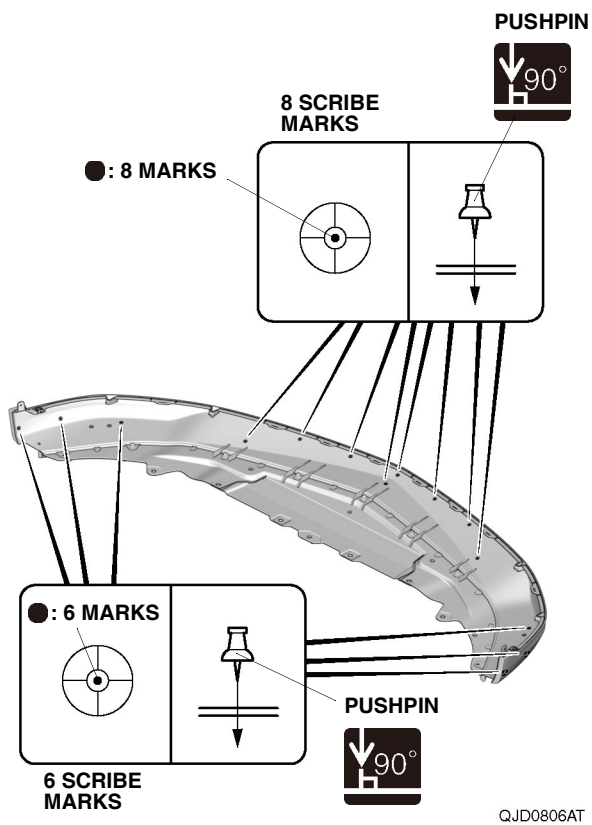


20. Drill the front bumper air spoiler.

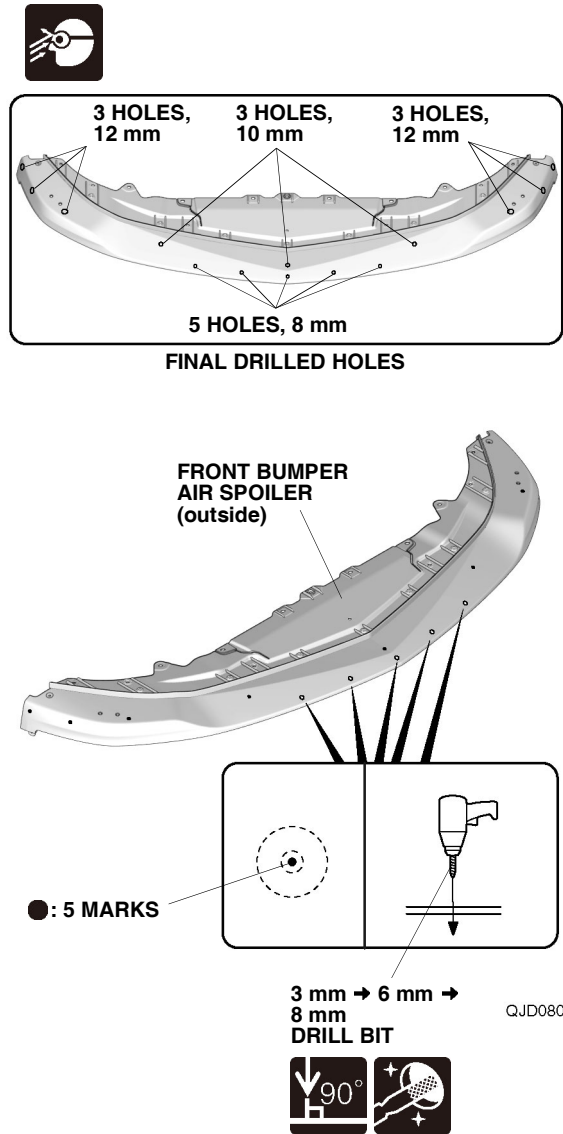

21. Drill the front bumper air spoiler.

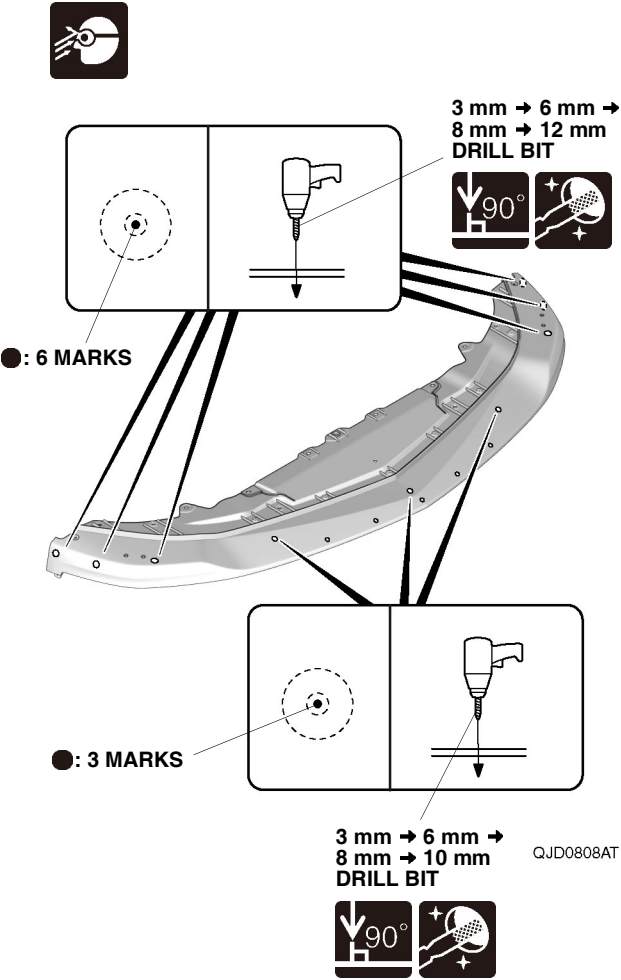

22. Install the front trim.

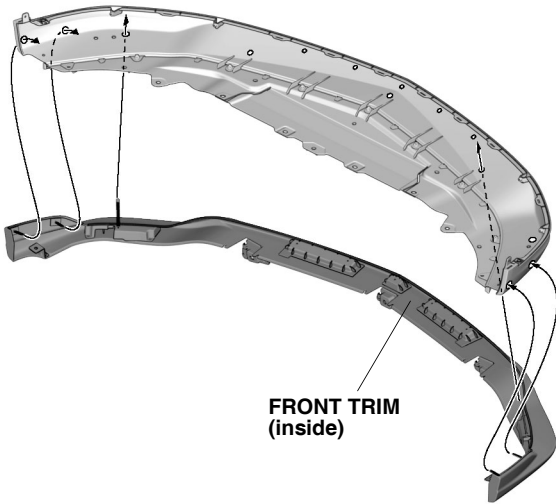


QJD0809AT

23. Secure the front trim.


NOTICE

- Make sure to install the female clips in the correct orientation.
- Do not excessively push in the clip. Make sure to adjust the clip to install the front trim.

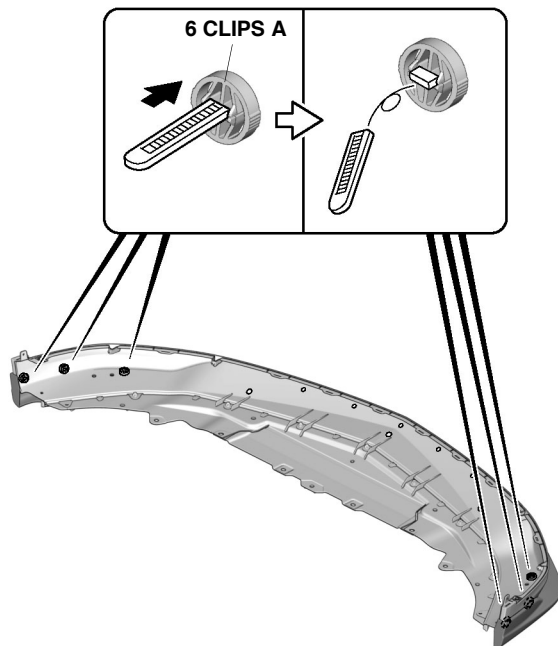


QJD0810AT

24. Secure the front trim.

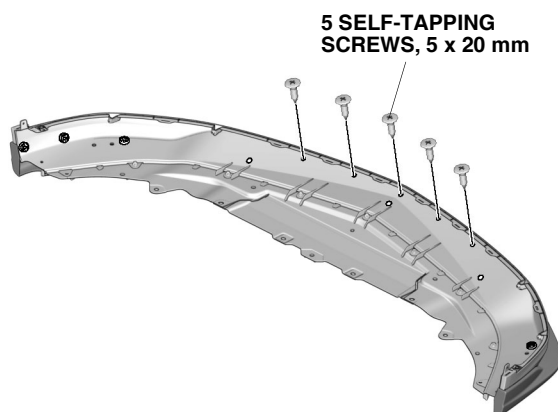


QJD0811AT

25. Secure the front trim.

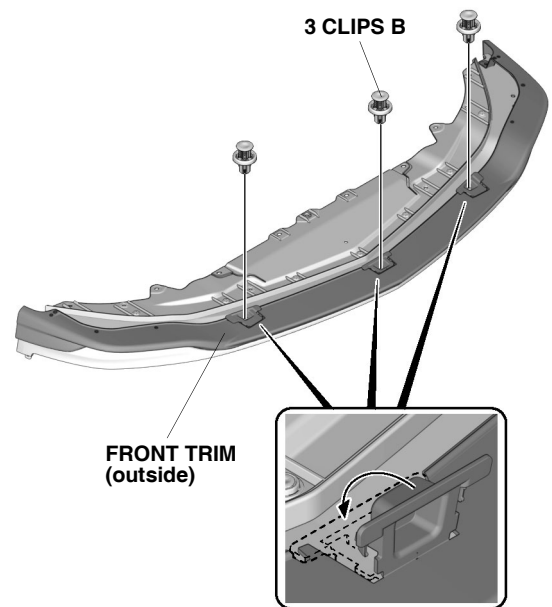

QJD0812AT

26. Install the front bumper air spoiler, front bumper lower grille, left and right fog lights (if equipped), and left and right covers (if equipped).
27. Install the front bumper.

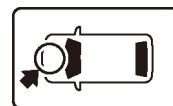

FRONT BUMPER

FRONT TRIM

2 SELF-TAPPING SCREWS, 5 x 25 mm

QJD0813AT

28. Choose one of these options.



- With rear splash guards

Go to step 29

- Without rear splash guards


Go to step 32

29. Remove the left rear splash guard.

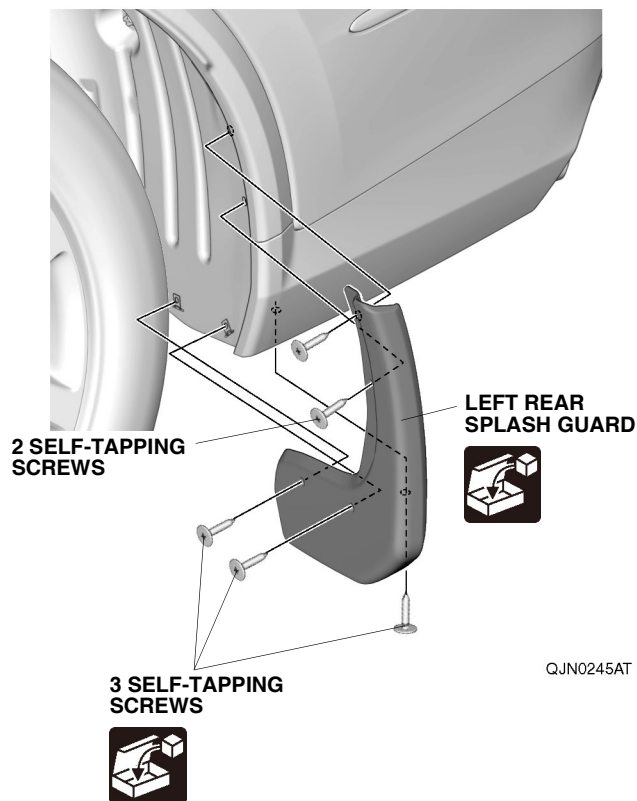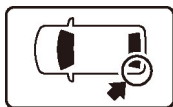


QJN0245AT

30. Secure the left rear inner fender.

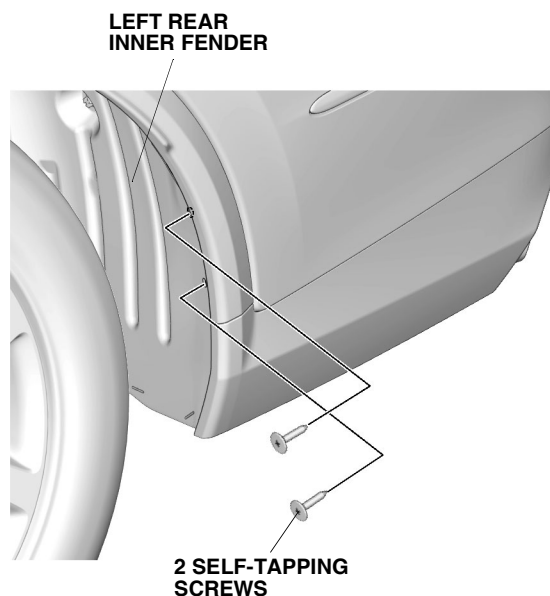


QJD0820AT

31. Repeat same procedures for the other side.

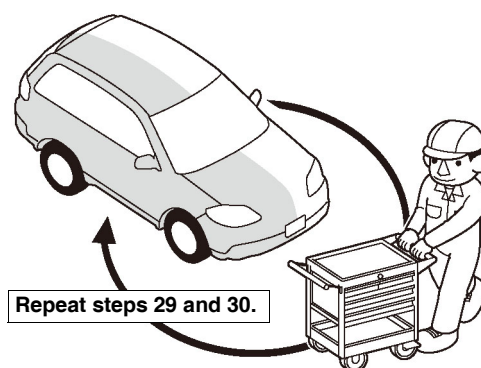


Q9D1014AM


32. Remove the self-tapping screws.

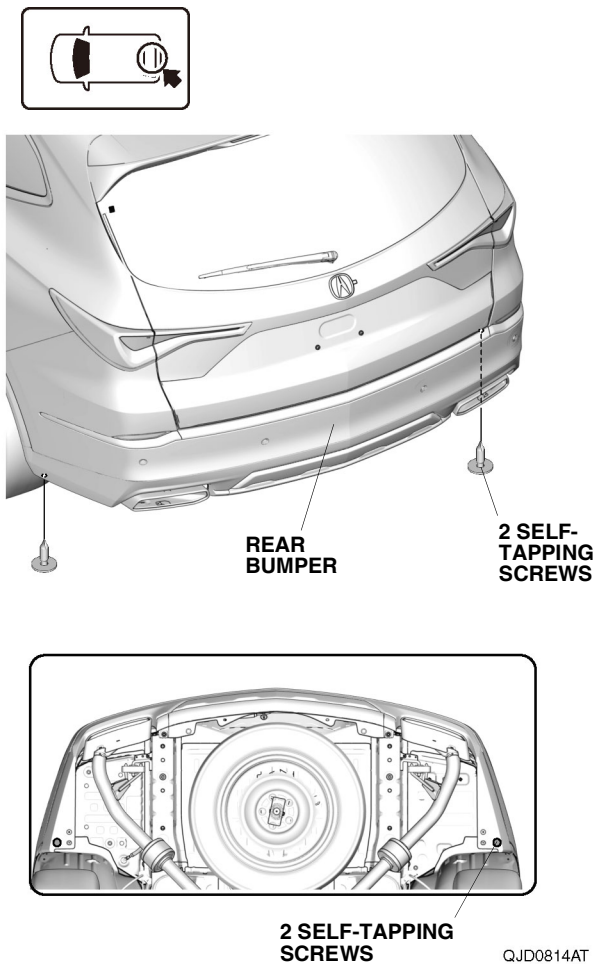



33. Pierce the rear bumper.

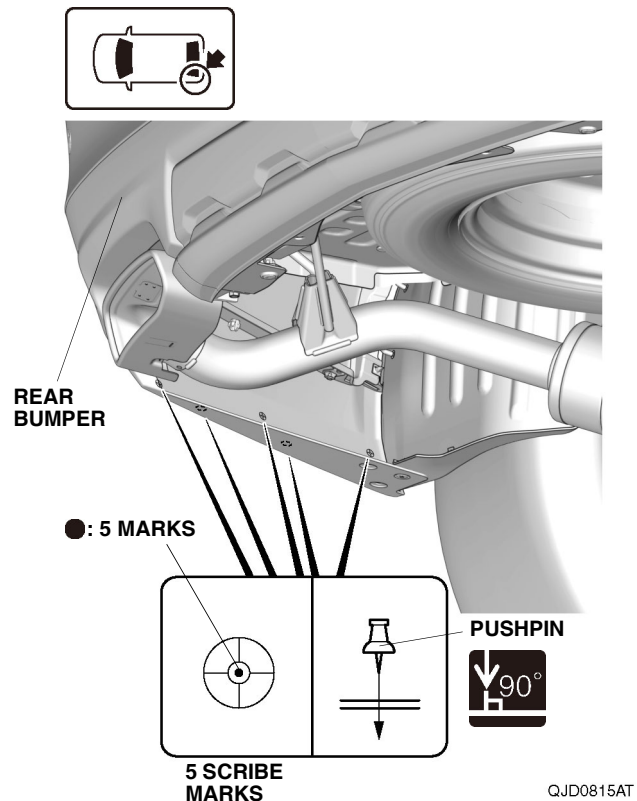

34. Drill the rear bumper.

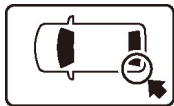


REAR BUMPER

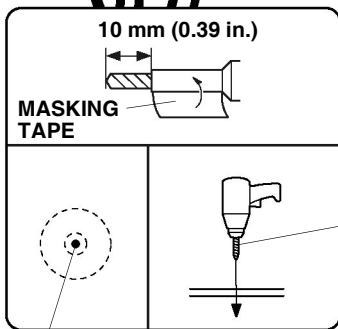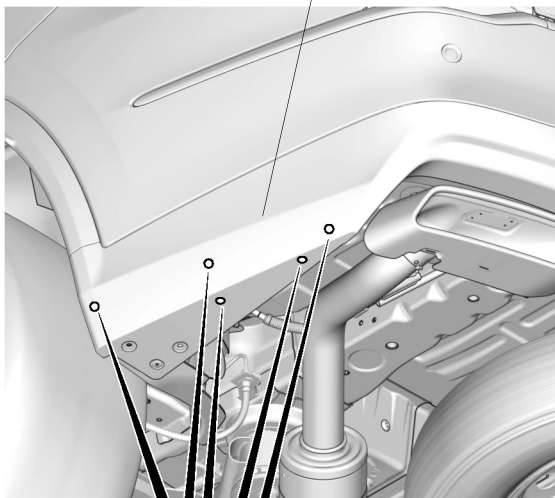

●: 5 MARKS

QJD0816AT

35. Install the left rear trim.

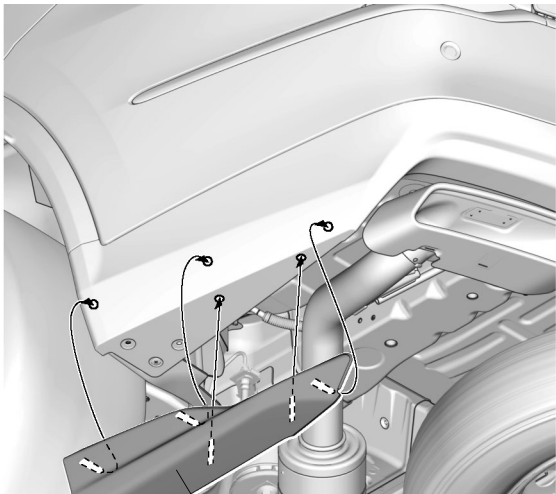


LEFT REAR TRIM

QJD0817AT

36. Secure the left rear trim.


NOTICE

- Make sure to install the female clips in the correct orientation.
- Do not excessively push in the clip. Make sure to adjust the clip to install the rear trim.

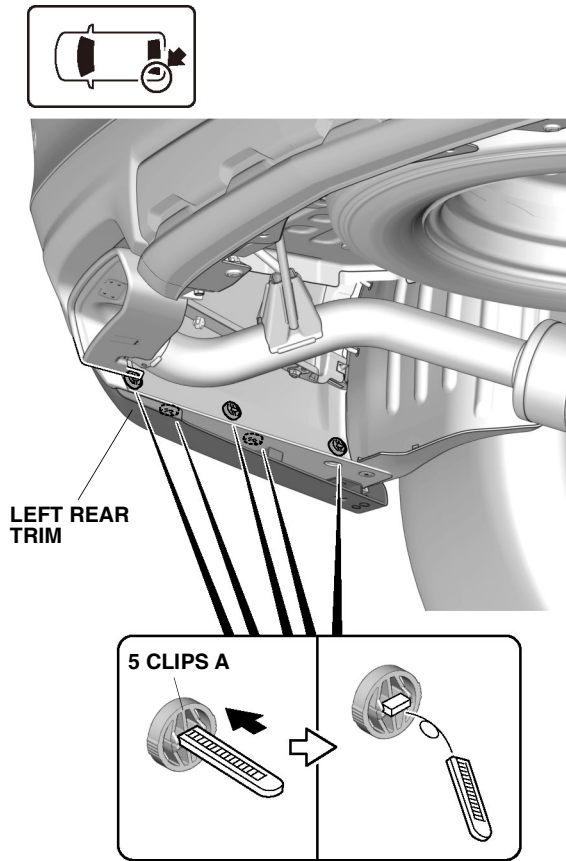


QJD0818AT

37. Repeat same procedures for the other side.

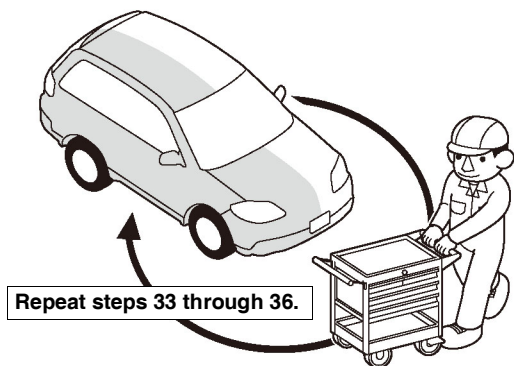

Q9D1014AM

38. Secure the left and right rear trims.

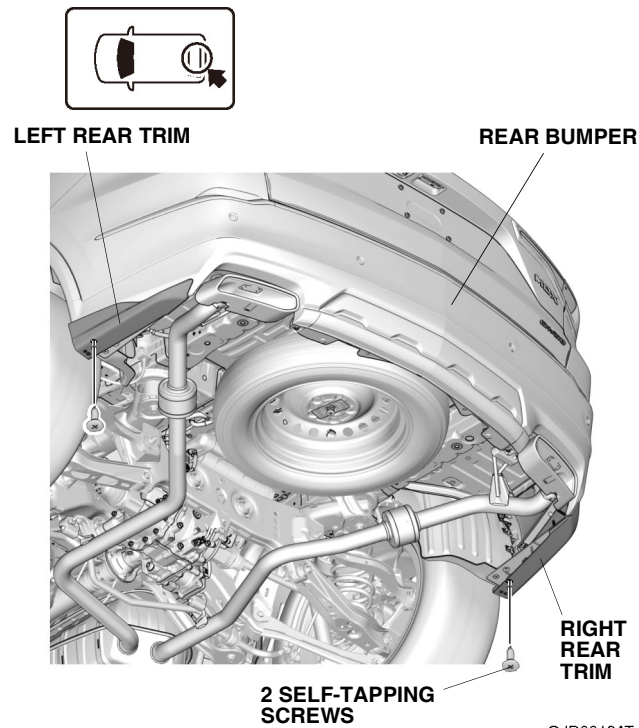


39. Check that all parts are installed and properly routed.

NOTICE

- Check that all harnesses are not pulled and not pinched.
- Make sure all clamps and wire ties are securely installed.

40. Install all removed parts.

41. Connect the negative cable to the battery.

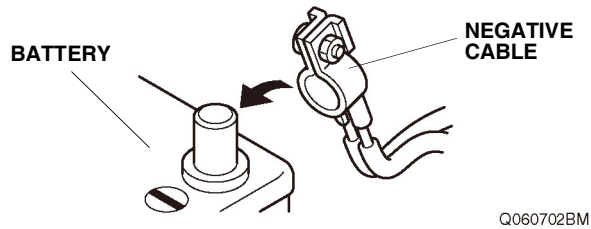

42. Make sure all accessories and systems operate properly.

43. If necessary, restore the systems back to normal operation as described in the service information.

44. Press and hold the audio unit power button for 2 seconds to restore the audio and navi (if equipped) system functions.

<For vehicle equipped with the Multi View camera system>

45. Check the image of the Multi View camera.