ⓐACURA

	Accessory	Application	Publications No.
INSTALLATION INSTRUCTIONS	**CARGO NET** P/N 08L96-S3V-200	**2003 MDX**	**BII 24549**
			Issue Date **SEP 2002**

Keep this information in the glove box for future reference.

PARTS LIST

Cargo net
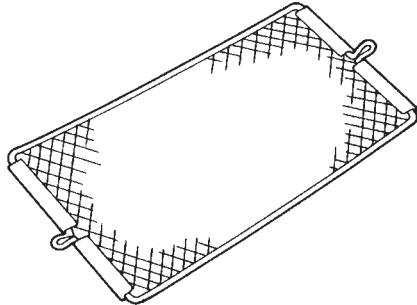
4 Hooks

TOOLS REQUIRED

Small flat-tip screwdriver

INSTALLATION

NOTE:
- Some luggage stored in the cargo net may interfere with the tailgate when it is closed. To prevent damage to the cargo net, do not store large or fragile articles in the cargo net.

- Before storing articles that have sharp edges or corners, wrap them in paper or a blanket so their sharp edges or corners will not contact the cargo net directly.

1. Using a small flat-tip screwdriver or the ignition key, release the seat belt lower hook from each third row seat, then attach the seat belt clip to the seat belt.

LOWER HOOK

Push.

SEAT BELT

CLIP

Released seat belt
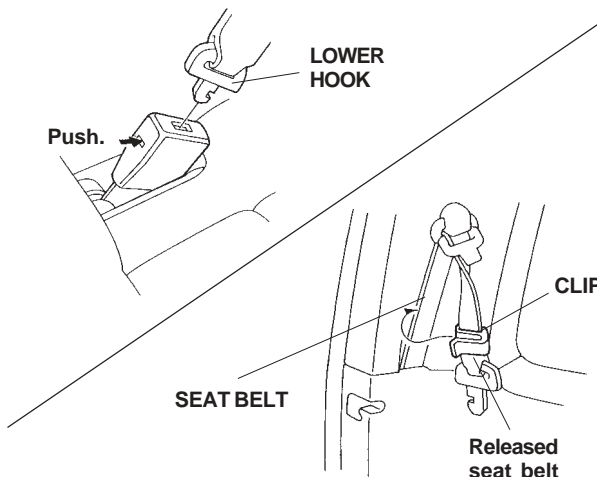
2. Remove the headrests by pushing the release buttons and pulling the headrests out.

THIRD ROW SEAT HEADREST

RELEASE BUTTON
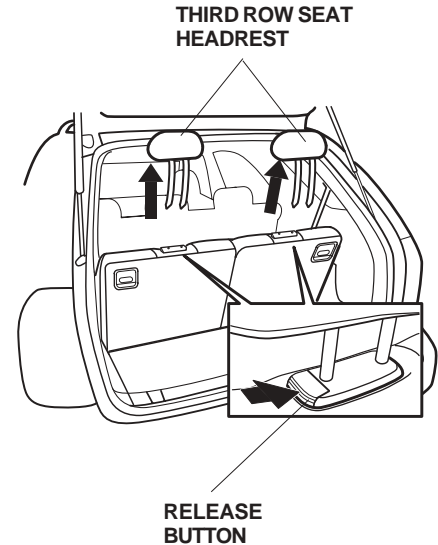
3. Store the headrests in the storage compartment under the cargo floor. Insert the shafts of the headrests into the holes in the sides of the storage compartment.
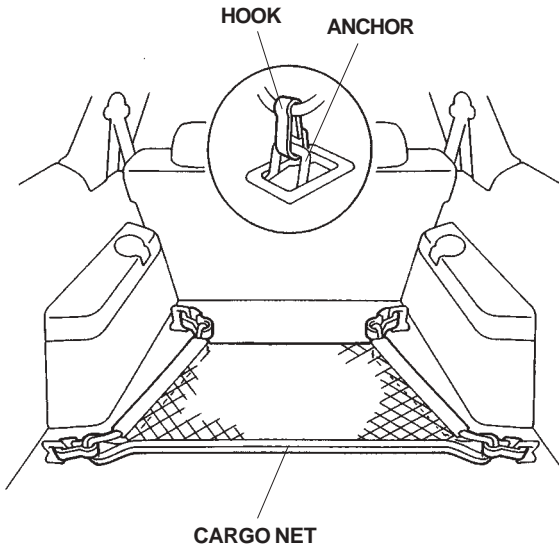

CARGO FLOOR

Holes in storage compartment.

HEADREST
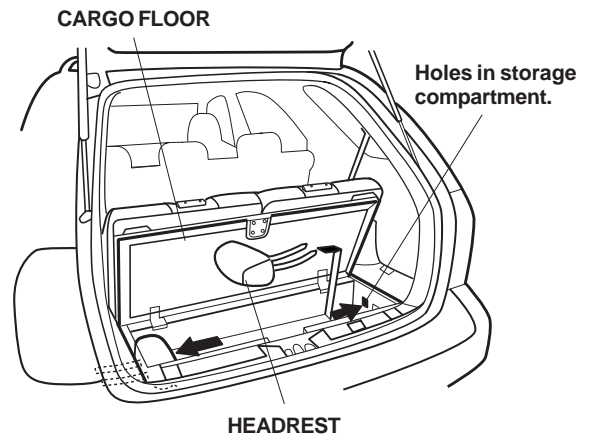
4. Fold down both third row seats.

Installing the Cargo Net in the Horizontal Position

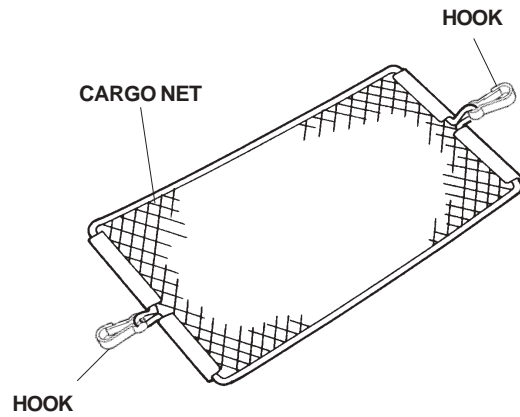5. Attach the four hooks onto the cargo net in the areas shown.

HOOK

HOOK
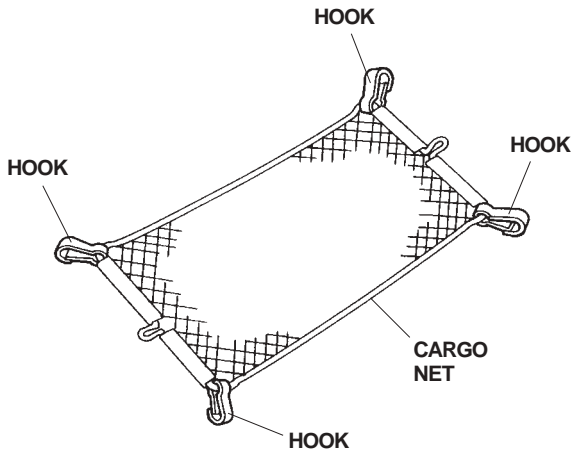
HOOK

CARGO NET

HOOK

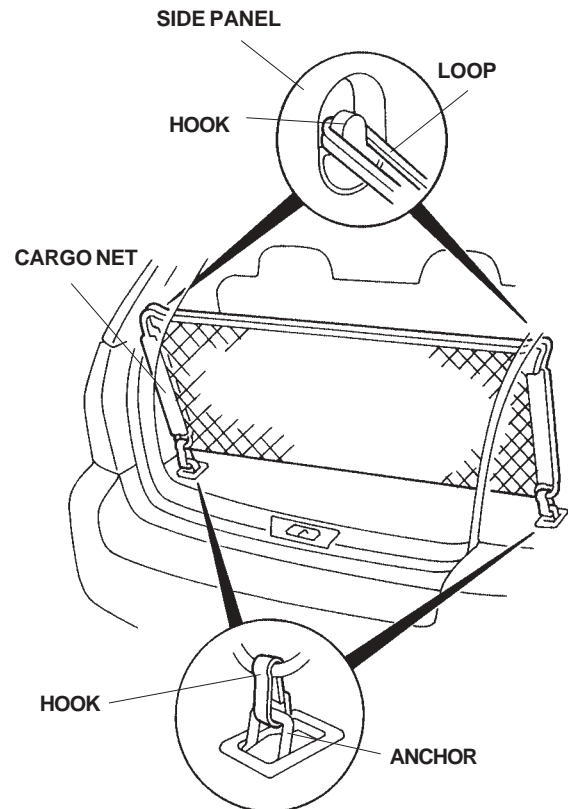6. Attach the hooks to the anchors in the cargo area.

HOOK   **ANCHOR**

CARGO NET

Installing the Cargo Net in the Vertical Position

7. Attach two hooks to the cargo net in the areas shown.

HOOK

CARGO NET

HOOK

8. Fold the cargo net in half, attach the hooks to the anchors in the floor, and attach the loops to the hooks on the side panel.

SIDE PANEL

LOOP

HOOK

CARGO NET

HOOK

ANCHOR

9. Put these instructions and the remaining two hooks (if necessary) in the glove box for your customer.