



# ACURA INSTALLATION INSTRUCTIONS

Accessory

**CARGO COVER**  
P/N 08U35-S3V-210 (BLACK)  
P/N 08U35-S3V-270 (SADDLE)

Application

2001 MDX

Publications No.

**BII 21487**


Issue Date

**SEP 2000**

**Keep this information in the glove box for future reference.**

## PARTS LIST

Cargo cover

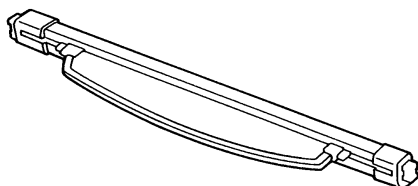


## TOOLS REQUIRED

Small flat-tip screwdriver


## INSTALLATION

### Installing the Cargo Cover Behind the Second Seat


1. Using a small flat-tip screwdriver, release the seat belt lower hook from each third row seat, then attach the seat belt clip to the seat belt.

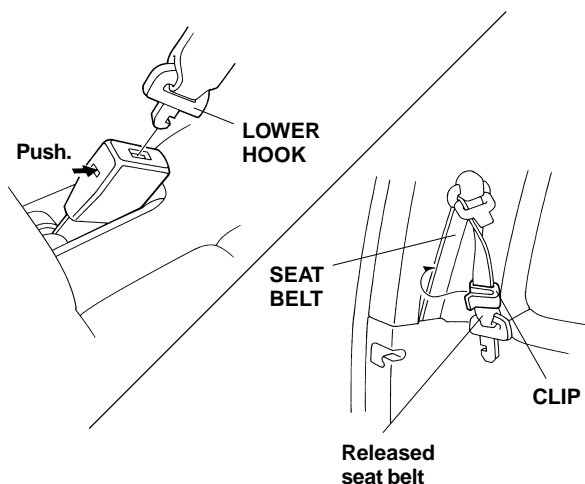

2. Remove the headrests by pushing the release buttons and pulling the headrests out.

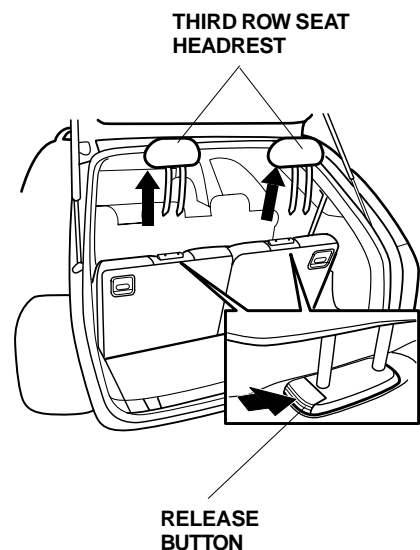


3. Store the headrests in the storage compartment under the cargo floor. Insert the shafts of the headrests into the holes in the sides of the storage compartment.

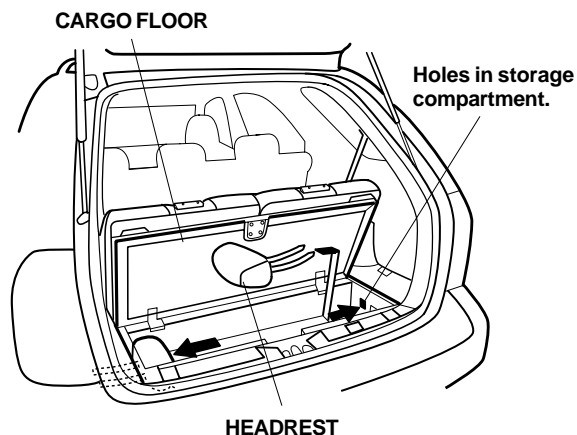


4. Fold down both third row seats.


- Using a small flat-tip screwdriver, remove the front right and left side panel caps by releasing the retaining tab. Save the caps so they can be reinstalled when the cargo cover is removed.

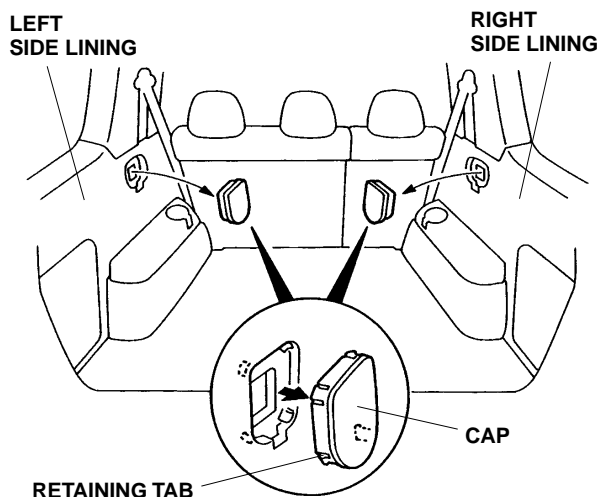

- Install the cargo cover into the recess in the left side panel in the direction shown, then slide the cargo cover in the direction shown, and install it in the right side panel.

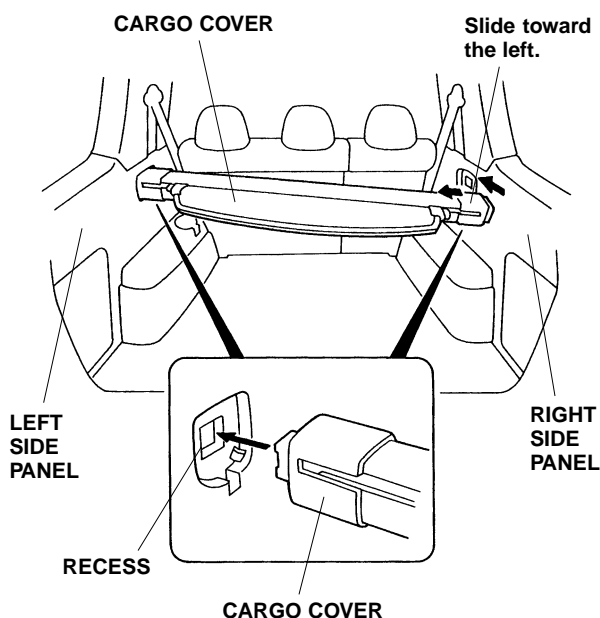


- Attach the right and left hooks to the rear side panel.

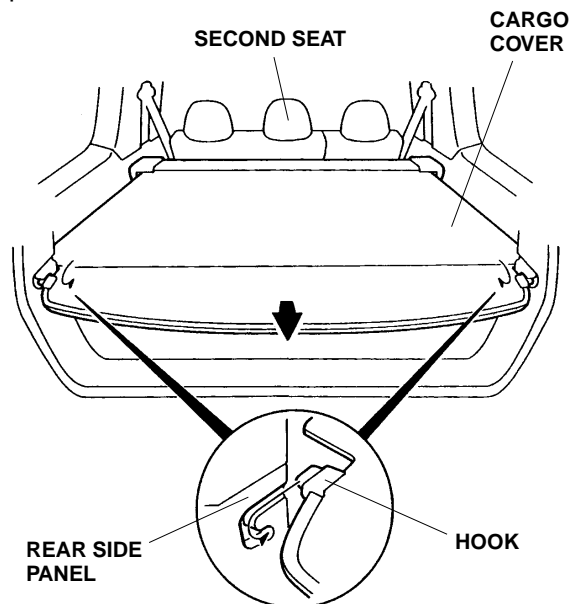

### Installing the Cargo Cover Behind the Third Seat

- Using a small flat-tip screwdriver, remove the rear right and left side panel caps by releasing the retaining tab. Save the caps so they can be reinstalled when the cargo cover is removed.
- Install the cargo cover into the recess in the left side panel in the direction shown, then slide the cargo cover in the direction shown, and install it in the right side panel.
- Attach the right and left hooks to the rear side panel.

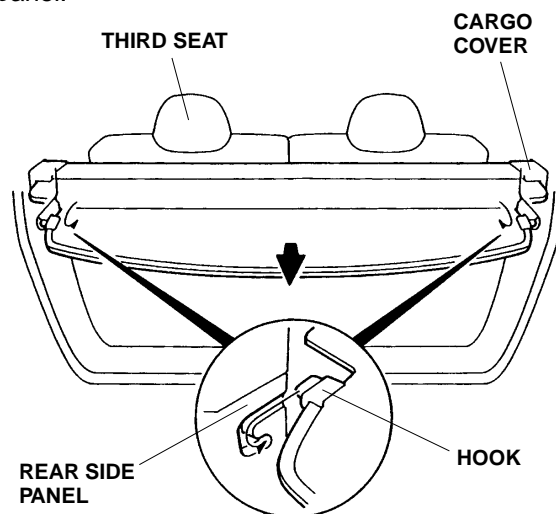

### CLEANING THE CARGO COVER

Use a sponge or cloth and a solution of mild liquid dishwashing soap and water, then wipe dry with a clean cloth or sponge.